

<b>1929 DL Parts List</b>					
<u>Req'd.</u>	<u>Old No.</u>	<u>New No.</u>	<u>Description</u>	<u>Application</u>	<u>Finish</u>
	<b>CYLINDER GROUP</b>				
	2-29		Front cylinder only	1929 to 1931 - 45" twins	gloss black
	3-29		Rear cylinder only	1929 to 1931 - 45" twins	gloss black
	9-29		Front cylinder head (marked 6.8)	1929 to 1935 low compression 45" twins	gloss black
	10-29		Rear cylinder head (marked 6.8)	1929 to 1935 low compression 45" twins	gloss black
	9-29A		Front cylinder head (marked 5.5)	1929 to 1935 high compression 45" twins	gloss black
	10-29A		Rear cylinder head (marked 5.5)	1929 to 1935 high compression 45" twins	gloss black
	11-29		Cylinder head gasket (2)	1929 to 1935 - 45" twins	copper
	14-26S	16801-26	Cylinder head stud, oversize, 7/16-24 x 3/8-16	1929 to 1950 - 45" twins	park
	14-29	16802-29	Cylinder head stud (1-15/16")	1929 to 1950 - 45" twins	park
	0120	7782	Cylinder head stud nut (6)	1926 to 1934 A & B singles, 1929 to 1952 - 45" twins	park
	15-26	16820-26	Cylinder head stud nut, long (8)	1926 to 1934 A & B singles, 1929 to 1950 - 45" twins	park
	0224	6395	Cylinder stud plain washer (14)	1926 to 1934 A & B singles, 1929 to 1950 - 45" twins	park
	29-29	16830-29	Cylinder base stud, 1-13/16" (8)	1929 to 1957 - 45" twins	park
	0120	7782	Cylinder base stud nut (8)	Later 1929 models, 1930 to 1934 singles, 1929 to 1957 - 45" twins	nickel
	0123	7804	Cylinder base stud nut (8)	1926 to 1934 singles, 1927 to 1939 twins	nickel
	37-09A		Spark plug (No. 1)	1926 to 1934 singles, 1927 to 1952 twins	-----
	37-09B	32304-09	Spark plug (No. 2)	1926 to 1934 singles, 1927 to 1952 twins	-----
	37-09C	32302-09	Spark plug (No. 3)	1926 to 1934 singles, 1927 to 1952 twins	-----
	37-09D	320300-09	Spark plug (No. 4)	1926 to 1934 singles, 1927 to 1952 twins	-----
	37-09E	32306-09	Spark plug (No. 5) racing	Harley-Davidson plugs	-----
	39-26	32370-26	Terminal nut for 37-09 (#8-32)	Harley-Davidson plugs	brass
	40-08	32342-08	Spark plug gasket	1926 to 1934 singles, 1927 to 1954 twins	-----
	46-29	16775-29	Cylinder base gasket (2)	1929 to 1957 - 45" twins	paper
	49-14		Cylinder primer (2) (1/8" NPT)	1915 to 1937	nickel

<b>VALVE GROUP</b>				
163-29		Inlet valve	1929 to 1931 - 45" twins	----
165-29		Exhaust valve	1929 to 1931 - 45" twins	----
166-29		Valve guide (4)	1929 to 1931 - 45" twins	----
186-10	51780-30	Valve spring (4)	1926 to 1934 side valve singles, 1929 to 1931 - 45" twins	----
188-08		Valve collar (4)	1926 to 1934 side valve singles, 1929 to 1931 - 45" twins	----
190-11		Valve key (4)	1926 to 1934 side valve singles, 1929 to 1931 - 45" twins	----
173-26		Upper valve cover	1926 to 1934 side valve singles, 1929 - 45" twins	nickel
174-26		Lower valve cover	1926 to 1934 side valve singles, 1929 - 45" twins	nickel
175-29	18260-29	Valve cover packing (4)	1929 to 1939 - 45" twins, first 1930 - 74" twins	rubber
176-26	18630-26	Valve cover & guide gasket (4)	1926 to 1929 singles & 45" twins, 1930 to 1957	paper
200-29	18490-29	Tappet (4)	1929 - 45" twins, 1930 to 1957 - 45", 1930-1948 - 74" & 80" twins	----
208-29	18535-29	Tappet roller (4)	1929 - 45" twins, 1930 to 1952 all twins	----
212-29	18540-29	Tappet roller bushing (4)	1929 - 45" twins, 1930 to 1952 all twins	----
214-28		Tappet roller pin (4)	First 1929- 45" twins	----
214-29	18545-29	Tappet roller pin (4)	Later 1929 - 45" twins, all 1930 to 1952 twins	----
221-15	221-15	Tappet screw (17/64-32)	1915 to 1934 side valve singles, 1921 to 1939 - 45" twins	----
223-15	223-15	Tappet screw nut (17/64-32)	1915 to 1939	----
234-29		Tappet bushing (4)	First 1929- 45" twins	black
045	2275	Tappet bushing screw (4)	First 1929- 45" twins	nickel
234-30	18605-30	Tappet guide, front (2)	Later 1929 to 1957 - 45" twins, 1930 to 1938 - 74" & 80" twins	black paint
235-30	18606-30	Tappet guide, rear (2)	Later 1929 to 1957 - 45" twins, 1930 to 1938 - 74" & 80" twins	black paint
057	2329	Tappet guide screw (8)	Later 1929 - 45" twins, all 1930 to 1952 twins	nickel
0365	7231	Shakeproof washer (8) (nipb)	Later 1929 - 45" twins, all 1930 to 1952 twins	park
237-29		Tappet guide gasket (4)	First 1929- 45" twins	paper
237-30	18631-30	Tappet guide gasket (4)	Later 1929 to 1957 - 45" twins, 1930 to 1939 - 74" & 80" twins	paper

<b>PISTONS &amp; CONNECTING RODS</b>					
253-29A	22251-29	Piston with rings and pin	Later 1929 to 1957 - 45" twins	-----	
260-29	22445-29	Piston rings (6)	1929 to 1934 - 45" twins (except T-slot)	-----	
262-29		Piston guide ring (4)	1929 to 1931 - 45" twins	-----	
263-29		Inner cushion ring (2)	1929 to 1931 - 45" twins	-----	
275-29		Piston pin (2)	1929 to 1931 - 45" twins	-----	
280-24		Piston pin lock ring (4)	1924 to 1931 except iron pistons, all C singles	-----	
283-29		Front connecting rod, complete	1929 to 1931 - 45" twins	-----	
284-29		Rear connecting rod, complete	1929 to 1931 - 45" twins	-----	
289-29		Set connecting rods, complete w/ rollers crank pin	1929 to 1931 - 45" twins	-----	
301-29	24365-29	Crank pin roller retainer (4)	1929 to 1957 - 45" twins	-----	
305-29	9241	Crank pin roller, .560" long	1929 to 1957 - 45" twins	-----	
2289-17	9301	Crank pin roller, .270" long	1929 to 1957 - 45" twins	-----	
309-29	24370-29	Set of rollers and retainers	1929 to 1957 - 45" twins	-----	
<b><u>FLYWHEEL GROUP</u></b>					
338-29		Left flywheel only	1929 to 1931 - 45" twins	-----	
339-29		Right flywheel only	1929 to 1931 - 45" twins	-----	
348-29	23960-29	Crank pin	1929 to 1957 - 45" twins	-----	
352-29	24000-29	Sprocket shaft	1929 to 1957 - 45" twins	-----	
355-29		Gear shaft	1929 to 1936 - 45" twins	-----	
357-26	24060-26	Flywheel thrust collar (.072", .083", .095", .109" - specify thickness)	1926 to 1934 singles, 1929 to 1957 - 45" twins	-----	
361-12	23985-12	Shaft keys (2) for sprocket & gear shaft	1912 to 1957	-----	
1650-18	23985-18	Crank pin key (1)	1929 - 45" twins, 1930 to 1957 all twins	-----	
364-12		Flywheel shaft nut, 11/16"-18 thrd.	1912 to 1929, 1930 to 1934 singles	-----	
364-29	7974	Gear & sprocket shaft nut, (2) (5/8"-18)	1929 to 1957 - 45" twins	-----	
364-12	364-12	Crank pin nut	1929 to 1957 - 45" twins	-----	
368-12	23982-12	Shaft nut lock washer (2)	1929 to 1936 - 45" twins	-----	
368-29	24016-29	Lock washer for shaft nut 364-29 (2)	1912 to 1929, 1930 to 1934 singles, 1929 to 1957 - 45" twins	-----	
030	1187	Lock washer screw (4)	1929 to 1957 - 45" twins	-----	
372-21	23972-21	Flywheel steel washer (2)(.062")(staked)	1912 to 1957	-----	

<b>CRANK CASE &amp; FITTINGS</b>				
402-29		Set of crank cases	1929 to 1931 - 45" twins	aluminum
406-29		Left crank case	1929 to 1931 - 45" twins	aluminum
410-29		Right crank case	1929 to 1931 - 45" twins	aluminum
413-29		Right crank case bushing	1929 to 1936 - 45" twins	-----
416-29		Left bearing bushing	1929 to 1936 - 45" twins	-----
417-29	24720-29	Left roller bearing retainer (2)	1929 to 1957 - 45" twins	-----
304-15	9321	Left bearing roller (24), .360" long	1917 to 1929 twins, 1930 to 1957 - 45" twins	-----
419-29	24730-29	Sprocket shaft roller bearing, complete	1929 to 1957 - 45" twins	-----
421-26		Chain lubricating bushing	1926 to 1934 singles, 1929 to 1936 - 45" twins	-----
423-29		Left bearing bushing screw (3)	1929 to 1936 - 45", 74" & 80" twins, C singles twins	-----
437-26	4379	Motor fastening bolt (4) (3/8-24)	1926 to 1934 singles & 45" twins, 1930 to 1957 - 45" twins	park
0128	7809	Motor fastening bolt castle nut (4)	1919 to 1957	park
0224	6395	Crank case bolt plain washer (4)	1926 to 1929 singles & 45" twins, 1930 to 1957	park
0291	528	Castle nut cotter pin (4) (nipb)	1926 to 1929 singles & 45" twins, 1930 to 1957	park
442-10	24811-10	Casing stud, 1-5/8" (3)	1911 to 1929, 1930 to 1934 singles, 1929 to 1957	nickel
442-29		Crank case bolt, 1/4 x 1-7/32" (1)	1929 to 1931 - 45" twins	nickel
443-29		Crank case bolt, 5/16 x 2-5/8" (2)	1929 to 1936 - 45" twins	nickel
444-29		Casing stud, 4" (1)	1929 to 1936 - 45" twins	nickel
451-09		Casing stud nut (9)	1911 to 1929, 1930 to 1934 singles, 1929 to 1936	nickel
477-29		Oil drain valve	1929 to 1931 - 45" twins	nickel
479-29		Drain valve head spring	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	black paint
480-29		Drain valve plain washer	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	park
481-29		Drain valve lock ring	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	-----
483-29		Drain valve cork washer	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	cork
485-29		Drain valve lever (#10-32)	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	nickel
0105	7634	Drain valve nut	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	nickel
0253	7025	Lock washer (nipb)	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	park
487-29		Drain valve upper spring	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	black paint
489-29		Packing washer, felt	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	felt
490-29		Packing washer, steel	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	-----
491-29		Drain valve lever catch	1929 to 1936 - 45" twins	park
<b>CRANK CASE RELIEF PARTS</b>				
543-29		Relief pipe	1929 - 45" twins	dull nickle?
544-26		Relief pipe nipple	1926 to 1934 singles, 1929 to 1931 - 45" twins	nickel

<b>GEAR CASE COVERS</b>				
584-29		Gear cover only (2 dowel pin holes)	First 1929 - 45" twins	aluminum
584-29A		Gear cover only (4 dowel pin holes)	Later 1929 & 1930 - 45" twins	aluminum
598-29		Gear cover gasket	1929 to 1931 - 45" twins	paper
047	2278	Gear cover screw, 13/16"	1929 to 1936 - 45" twins	nickel
<b>CAMS, TIMING GEARS &amp; BUSHINGS</b>				
604-29		Pinion gear	1929 to 1931 - 45" twins	-----
361-12	23985-12	Pinion gear key	1929 - 45" twins, 1930 to 1936 all twins	-----
0142	7984	Pinion nut	1929 - 45" twins, 1930 to 1936 45", 74" & 80" twins	-----
610-29		Front inlet cam gear & shaft	1929 to 1931 - 45" twins	-----
611-29		Rear inlet cam gear & shaft	1929 to 1931 - 45" twins	-----
612-29		Front exhaust cam gear & shaft	1929 to 1931 - 45" twins	-----
613-29		Rear exhaust cam gear & shaft	1929 to 1931 - 45" twins	-----
632-29A		Generator drive gear	Later 1929 to 1931 - 45" twins	-----
1654-29	25860-29	Generator gear key)	1929 to 1931 - 45" twins	-----
0117	7752	Generator gear nut	Later 1929 to 1931 - 45" twins	park
0259	7040	Generator gear lock washer	Later 1929 to 1931 - 45" twins	park
638-29		Oiler drive shaft	1929 to 1931 - 45" twins	-----
640-29		Timer shaft & cam with cork washer	1929 - 45" twins, 1930 to 1936 45", 74" & 80" twins	-----
641-29		Inlet cam gear shaft (2)	1929 to 1936 - 45" twins	-----
642-26	25546-26	Cam gear key	1926 to 1929 singles & 45" twins, all 1930 to 1936	-----
660-29		Cam gear shaft bushing, left (4)	1929 to 1936 - 45" twins	brass
662-26		Cam gear shaft bushing, right (2)	1926 to 1934 singles, 1929 to 1933 - 45" twins	brass
662-29		Timer shaft bushing, right	1929 - 45" twins, 1930 to 1936 45", 74" & 80" twins	brass
662-29A		Oiler shaft bushing, right	1929 to 1931 - 45" twins, 1930 to 1933 - 74" twins	brass
663-26		Cam shaft fiber washer, 1/64" thick	1926 to 1929 singles & 45" twins, 1930 to 1936	fiber
664-26		Cam shaft fiber washer, 1/32" thick	1926 to 1929 singles & 45" twins, 1930 to 1936	fiber

<b>MECHANICAL OILERS</b>				
587-29		Oil pump assembly	1929 - 45" twins	black paint
589-29		Oil pump gasket	1929 - 45" twins, 1930 all twins, first 1931 74" twins	paper
591-29		Oil pump lock nut (1-7/16-22)	1929 - 45" twins, 1930 & 1931 all twins, 1932 & 1933-74" twins	nickel
668-22		Oiler plunger	Later 1922 to 1933, 1934 singles	steel
670-22		Oiler plunger spring	Later 1922 to 1933, 1934 singles	-----
672-29		Oiler adjusting screw (#10-32)	1929 - 45" twins, 1930 & 1931 all twins, 1932 & 1933, 1934 singles	nickel?
674-22		Oiler adjusting washer, .0125"	1922 to 1936 - 45", 74" & 80" twins - all singles	nickel
0202		Oiler adjusting screw washer, .0625"	Later 1922 to 1933, 1934 singles, 1934 to 1936 twins	nickel
682-22		Oiler chamber screw	Later 1922 to 1929, 1930 - 74" twins, 1931 to 1933 all models, 1934 singles	flat nickel
699-28		Oiler main shaft disc	1928 to 1933, 1934 singles	-----
701-28		Oiler cam shaft	1928 to 1933, 1934 singles	-----
0108	7691	Cam shaft nut	1928 to 1933, 1934 singles	park
0256	7035	Cam shaft nut lock washer (nipb)	1928 to 1933, 1934 singles	park
703-28		Cam shaft spring washer	1928 to 1933, 1934 singles	-----
705-28		Adjusting plate	1928 to 1933, 1934 singles	park
021	1062	Adjusting plate screw	1928 to 1933, 1934 singles	park
0252	7015	Lock Washer (2) (nipb)	1928 to 1933, 1934 singles	park
707-28		Adjusting plate gasket	1928 to 1933, 1934 singles	-----
708-28		Adjusting plate spacer	1928 to 1933, 1934 singles	
711-29		Cam shaft control lever	1929 - 45" twins	nickel
714-28		Oiler direction plate	1928 to 1934 singles, 1929 - 45" twins, 1930 to 1933 all twins	-----
722-29		Oiler cover	1929 & 1930 - 45" twins	nickel
045	2275	Oiler cover screw	1929 & 1930 - 45" twins	nickel
725-29		Oiler cover cap	1929 to 1933 - 45" twins	nickel
735-29		Oil chamber cap screw (7/8-18)	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	flat nickel
737-29		Oil chamber spring	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	park
739-29		Spring sleeve	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	-----
741-29		Cork packing washer	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	cork

<b>MUFFLERS &amp; EXHAUST PIPES</b>					
			Muffler & all fittings (four tubes)	1929	black
			Front exhaust pipe	1929 to 1931 - 45" twins	black
			Rear exhaust pipe	1929 to 1931 - 45" twins	black
			Front muffler pipe	1929 to 1931 - 45" twins	black
	4000		Front end connection pinch bolt	1929 to 1931 - 45" twins	park
	3974		Front end bracket bolt	1929 to 1931 - 45" twins	park
	7040		Bracket bolt lock washer	1929 to 1931 - 45" twins	park
			Front end connection bracket	1929 to 1931 - 45" twins	park
			Rear exhaust pipe connection	1929 to 1931 - 45" twins	park
	4000		Connection pinch bolt	1929 to 1931 - 45" twins	park
			Connection bolt (3-5/16")	1929 to 1931 - 45" twins	park
	7752		Connection bolt nut	1929 to 1931 - 45" twins	park
	7040		Connection bolt lock washer (nipb)	1929 to 1931 - 45" twins	park
			Center clamp bolt	All 1929, 1930 to 1934 singles, 1929 to 1938 - 45" twins	park
	7793		Clamp bolt nut	All 1929, 1930 to 1934 singles, 1929 to 1938 - 45" twins	park
	7045		Lock washer (nipb)	All 1929, 1930 to 1934 singles, 1929 to 1938 - 45" twins	park
			Muffler rear end complete (four tubes)	1929	black
			Rear end front bracket	1929 to 1931 singles & 45" twins	park
	4000		Bracket bolt	1929 to 1934 singles & 45" twins	park
	7752		Bracket bolt nut	1929 to 1934 singles & 45" twins	park
	7040		Lock washer (2) (nipb)	1929 to 1934 singles & 45" twins	park
	2775		Bracket clamp screw	1929 to 1931 singles & 45" twins, 1932 to 1934	park
			Rear end frame clamp (2)	1929 singles & 45" twins, 1930 - 21" singles	park
	2762		Frame clamp bolt (2)	All 1929, 1930 & 1931 - 45" twins & singles	park
	7691		Frame clamp bolt nut (2)	All 1929, 1930 & 1931 - 45" twins & singles	park
			Double clamp - rear right	All 1929, 1930 - 21" singles	park
			Double clamp - rear left	1929	park
			Double clamp center bolt	1929 & 1930, 1931 to 1934 singles	park
	2775		Double clamp top bolt (2)	1929 & 1930, 1931 singles	park
	7695		Nut for 1074-29 & 053	1929 & 1930, 1931 to 1934 singles	park

<b>INLET PIPE &amp; CARBURETORS</b>				
1102-29		Inlet pipe complete	1929 to 1931 - 45" twins	-----
1107-29		Inlet pipe only	1929 to 1931 - 45" twins	park
1110-29		Carburetor support	1929 to 1935 - 45" twins	park
0127	7793	Carburetor support nut	1929 - 45" twins, 1930 to 1957 all twins	park
0261	7045	Support nut lock washer (nipb)	1929 - 45" twins, 1930 to 1957 all twins	park
1112-29		Inlet nipple	1929 to 1931 - 45" twins	nickel
1115-29		Inlet packing nut (2)	1929 to 1931 - 45" twins	nickel
1118-29		Inlet packing bushing (2)	1929 to 1931 - 45" twins	brass
1121-29		Inlet pipe gasket (paper)	1929 to 1940 - R & W 45" twins	paper
1123-15		Inlet pipe screw, upper (1)	1915 to 1923 - 61", 1929 - 45" twins	
1123-29		Inlet pipe screw (3) (1/4-24)	1929 to 1940 - R & W 45" twins	park
0256	7035	Inlet pipe screw lock washer (3) (nipb)	1929 to 1940 - R & W 45" twins	park
1133-29		Schebler carburetor	1929 - 45" twins	flat nickel



<b>CARBURETOR PARTS, DELUXE &amp; LINKERT</b>				
1226-29		Carburetor body	1929 - 45" twins	flat nickel
1231-29		Air intake shaft, Schebler	1929 - 45" twins	
1236-26		Air intake shaft spring, Schebler	1929 - 45" twins	
1238-29		Throttle lever, Schebler	1929 to first 1933 - 45" twins	flat nickel
032	1206	Throttle lever lock screw, Schebler	1924 to 1948	
		& Linkert		
024	1070	Throttle stop screw, Schebler & Linkert	1924 to 1948	
011	997	Throttle stop lock screw, Schebler & Linkert	1924 to 1954	
1242-26	27275-26	Throttle shaft, Schebler & Linkert	1926 to 1934 - 45" twins	
1245-24	27290-24	Throttle shaft bushing, Schebler & Linkert	1924 to 1937	
1247-26		Throttle disc, Schebler & Linkert	1926 to 1934 A & B singles & 45" twins	brass
010	993	Throttle disc screw, Schebler & Linkert	1924 to 1957	
0251	7010	Lock washer (2) (nipb)	1924 to 1957	
1251-24		Idle passage plug, Schebler (5/16-32)	1924 to 1933 twins	nickel
1254-24		High speed needle valve, (3-5/16"),	1924 & early 1925, 1929 - 45" twins	nickel
1257-28		Nozzle retainer spring, Schebler	1928 to 1933 twins	
1258-29		Main nozzle, Schebler	1929 to 1933 - 45" twins	brass
1261-29		Low speed needle valve, Schebler	1929 to first 1933 - 45" twins	nickel
1262-27	27345-27	Spring collar, Schebler & Linkert	1927 to 1952 twins	flat nickel
1263-24	27327-24	Drill plug, Schebler & Linkert (3) (#10-32)	1924 to 1957	
1265-29		3/4" venturi, Schebler, 1" carburetors	1929 to first 1933 - 45" twins	pot metal
1265-29A	27360-29	7/8" venturi, for 1" Scebler & Linkert	1929 to first 1933 high compression 45" twins, later 1933 to 1935 R & RL, 1936 low compression 45", later 1933 VC	pot metal
1267-24	27370-24	Bowl assembly, Linkert	1924 to 1939 - 74" twins, 1929 to 1957 - 45" twins	nickel
1268-29	27375-29	Bowl locknut, Schebler & Linkert (3/4-20)	1929 - 45" twins, 1930 to 1957 all twins	nickel
1202-11		Bowl cap	1924 to 1929 twins	
1269-28	27376-28	Bowl loc knut gasket, Schebler & Linkert	1928 to 1939 twins	copper
1204-21		Bowl cork washer, Schebler	1924 to 1929 twins, 1932 & first 1933 twins	
1271-24		Float, Schebler	1924 to first 1933 twins	
1195-16		Float lever	1924 to 1930 twins	
1196-11	27383-11	Float lever pin, Schebler & Linkert (1/4-28)	1924 to 1933 except later 1932 & 1933 - 74" twins, 1933 to 1957 twin Linkerts	
1197-16	27384-16	Float lever pin bearing screw, Schebler & Linkert (1/4-28)	1924 to 1933 except later 1932 & 1933 - 74" twins, 1933 to 1950 twin Linkerts	
1198-11		Float valve	1924 to 1930, 1931 to 1934 singles	
1199-16		Float valve nut	1924 to 1930, 1931 to 1934 singles	
1296-26	27405-26	Friction spring, Schebler & Linkert	1926 to 1957	
1297-26	27406-26	Friction ball, Schebler & Linkert (5/32" ball)	1926 to 1957	

<b>AIR INTAKE &amp; CLEANER GROUP</b>				
1401-28		Air cleaner & clamp	1928 to 1932	gloss black
1403-28		Air cleaner clamp	1928 to 1932	nickel
039	1222	Air cleaner clamp screw	1928 to 1932	nickel
0105	7634	Clamp screw nut	1928 to 1932	nickel
1406-29		Air cleaner connection, complete	1929 - 45" twins	aluminum
1408-29		Connection screw, short (#10-24)	1929 to 1931 - 45" twins, later 1930 to 1932 - 74" twins	nickel
1409-29		Connection screw, long (#10-24)	1929 to 1931 - 45" twins, later 1930 to 1932 - 74" twins	nickel
1410-28		Connection cover	1928 & 1929 - all twins, 1930 & 1931 - 45" twins	nickel
1411-28		Connection cover washer	1928 to 1932	nickel
036	1202	Connection cover screw (#10-32)	1928 to 1932	nickel
<b>GENERATOR &amp; RELAY</b>				
1501-29		Generator assembly	1929 to 1931 - 45" twins	gloss black
4785-26		Relay assembly	1926 to 1937	black
4786-26		Relay cover	1926 to 1937	black
4787-26	2762 W	Relay mounting & bracket screw (2) (1/4-24)	1926 to 1957	nickel
0108	7691	Relay mounting screw nut (2) (1/4-24)	(for 4787-26 screw)	nickel
016	2582	Contact blade screw (2) (#6-32)	1926 to 1957	nickel
018	2626	Terminal wire screw, (2) (#8-32)	1926 to 1941	nickel
<b>FRAME &amp; FIELDS</b>				
1505-29		Frame upper end	1929 45" twins, 1930 & 1931 all twins	aluminum
1506-29		Frame screw (2)	1929 - 45" twins	park
1507-24		Field coil (2)	1924 to 1929	-----
1511-29		Pole piece (2)	1929 - 45" twins	-----
1512-18	30280-18	Pole piece screw (4)	1918 to 1957	park
1515-20		Field connection insulation	Later 1920 to 1929	-----
1520-24	9900	Lead terminal	1924 to 1957	-----
1527-29		Generator gasket	1929 to 1931 - 45" twins	paper
072	4300	Generator fastening bolt (3)	1929 to 1931 - 45" twins	park
0261	7045	Fastening bolt lockwasher (3) (nipb)	1929 to 1931 - 45" twins	park
1531-15		Generator wrench	1915 to 1934	-----
1532-29A		Drive shaft assembly	1929 & 1930 - 45" twins	-----
1532-30		Generator drive shaft only	1929 & 1930 - 45" twins	-----
1533-29		Drive shaft coupling	First 1929 - 45" twins	
1534-29		Drive shaft bushing, left side	1929 to 1931 - 45" twins	bronze
1535-29		Drive shaft bushing, right side	1929 to 1931 - 45" twins	bronze
1536-29		Drive shaft bevel gear, 32 teeth	1929 & 1930 - 45" twins	-----
1649-29		Armature bevel gear, 16 teeth	1929 - 45" twins	-----
632-29A		Generator drive gear	Later 1929 to 1931 - 45" twins	-----

0259	7040	Generator drive gear lock washer (nipb)	Later 1929 to 1931 - 45" twins	park
0117	7752	Generator drive gear nut (nipb)	Later 1929 to 1931 - 45" twins	park
1536-29A		Bevel gear pin, (for 1536-29)	1929 & 1930 - 45" twins	-----
1536-29B		Bevel gear shim (2)(0.002")	1929 to 1931 - 45" twins	steel
1537-29		Gear housing cover	1929 to 1931 - 45" twins	aluminum
047	2278	Gear housing cover screw (3)	1929 to 1931 - 45" twins	nickel
1538-29		Housing cover gasket	1929 to 1931 - 45" twins	paper
1539-29		End thrust washer	1929 to 1931 - 45" twins	copper
<b><u>TIMER BASE &amp; RIGHT END PLATE, TO 1936</u></b>				
1540-29		Timer base	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	nickel
<b><u>CIRCUIT BREAKER (TIMER) &amp; WIRING</u></b>				
1565-29		Circuit breaker (timer) assembly	1929 - 45" twins	
1566-29		Circuit breaker only	1929 - 45" twins	nickel
035	1190	Circuit breaker mounting screw (2)	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	nickel
0254	7021	Spring washer (nipb)	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	nickel
1567-29		Circuit breaker cover	1929 - 45" twins	nickel
1568-29	1568-29	Breaker cover retainer	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	nickel
1569-18		Contact screw	1918 to 1929, 1930 to 1934 singles	
0105		Contact screw lock nut	1918 to 1929, 1930 to 1934 singles	
1573-18		Breaker lever	1918 to 1929, 1930 to 1934 singles	
1574-18		Breaker lever spring	1918 to 1929, 1930 to 1934 singles	
1575-22		Breaker lever ground connection	Later 1922 to 1929, 1930 to 1934 singles	
1577-20		Breaker lever retaining spring	1920 to 1929, 1930 to 1934 singles	
010	993	Earth wire screw (nipb)	1920 to 1929, 1930 to 1934 singles	
018	2626	Control wire securing screw (nipb)	1920 to 1929, 1930 to 1934 singles	
1596-29	31976-30	Spark plug cable, long	1929 - 45" twins	fabric
1597-29	31970-30	Spark plug cable, short	1929 - 45" twins	fabric
1599-27	31681-27	Cable packing seal (2)	1927 to 1957	rubber
1599-27A	31681-27	Cable packing nut (2)	1927 to 1957	nickel
0211	6280	Packing washer (nipb) (2)	1927 to 1957	
1598-27	32049-27	Spark plug terminal (hollow tube)	1927 to 1939	
1611-29		Timer ground wire (6-3/4" black)	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	-----
1613-29		Low tension wire (to coil)	1929 - 45" twins	fabric
1614-18	9913	Low tension wire terminal	1918 to 1947	brass
0105		Low tension wire nut	1918 to 1929	nickel
1617-29		Low tension wire insulating washer	1929 - 45" twins	
1627-29		Timer adjusting plate	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	nickel

<b>ARMATURE GROUP</b>				
1636-29		Armature & winding	1929 - 45" twins	-----
1639-29		Armature spacing shim	1929 to 1931 - 45" twins	stainless
1641-29		Oil retainer (upper end)	1929 to 1931 - 45" twins	steel
1642-29	30985-29	Armature bakelite washer	1929 - 45" twins, 1930 & 1931 all twins	bakelite
1643-29		Armature steel washer, (.025", .033", .070", .072")	1929 & 1930 - 45" twins, later 1930 to 1957 all twins	park
1644-18	31009-18	Armature bearing complete, small	1918 to 1948	-----
1646-29		Lower bearing plate	1929 to 1931 - 45" twins	steel
1647-29		Upper bearing plate	1929 - 45" twins, 1930 & 1931 all twins	aluminum
1647-29A	31017-29	Bearing plate spring ring, 1-5/16" dia.	1929 - 45" twins, 1930 to 1957 all twins	-----
035	1190	Upper bearing plate screw (3)	1929 to 1931 - 45" twins	nickel
023		Lower bearing plate screw (3)	1929 45" twins, 1930 & 1931 all twins	nickel
1649-29		Armature bevel gear, 16 teeth	1930 - 45" twins	-----
0129	7789	Armature shaft nut	1929 - 45" twins, 1930 to 1957 all twins	park
0261	7045	Armature shaft lock washer (nipb)	1929 - 45" twins, 1930 to 1957 all twins	park
1654-29	25860-29	Drive gear key	1929 to 1931 - 45" twins	-----
1655-29		Bevel gear bushing (1) (2-piece)	1929 to 1931 - 45" twins	brass
1656-29		Gear retaining plate	1929 to 1931 - 45" twins	copper
046	1818	Retaining plate screw (4)	1929 to 1931 - 45" twins	nickel
<b>BRUSH PLATE GROUP</b>				
1661-26		Main brush plate (2)(pos. & neg.)	1926 to 1931, 1932 to 1934 singles	-----
1662-29		Third brush plate	1929	
1663-26		Main brush plate insulator (2)	1926 to 1931, 1932 to 1934 singles	bakelite
1664-29		Positive brush plate insulator	1929 - 45" twins	
1666-29		Negative brush ground (strap)	1926 to 1931, 1932 to 1934 singles	copper
036	1202	Brush plate screw (4)	1926 to 1957	nickel
1669-26		Large brush & spring (2)	1930 to 1934 C singles, 1930 to 1957 - 45" twins front only	-----
1671-26	30427-26	Small brush & spring	1926 to 1957 all models	-----
1674-26	30430-26	Brush spring, small	1926 to 1957 all models	-----
010	993	Brush wire screw (3)	1924 to 1952	nickel
1690-29		Third brush plate stop (2)	1929	
1696-29A		Commutator end cover	1929 - 45" twins	gloss black
010	993	Commutator end cover screw (2)	1924 to 1929, 1930 to 1934 singles, 1930 to 1957 all twins	nickel

<b>SPARK COIL GROUP</b>				
1722-29		Spark coil & cables	1929 - 45" twins	black
1723-29	31735-29	Spark coil U bolt (2) (1/4-20)	1929 to 1947 - 45" twins, 1930 to 1939 - 74" & 80" twins	park
1724-29	31731-29	U bolt strap (2)	1929 - 45" twins, 1930 to 1947 all twins	park
0107	7688	U bolt nut (4)	1929 - 45" twins, first 1930 twins, later 1933	park
0256	7035	U bolt lock washer (4) (nipb)	1929 to 1947 - 45" twins	park
021	1062	Coil terminal screw (2)	1924 to 1947	nickel
1735-29		Coil ground screw	1929 - 45" twins	
<b>MISCELLANEOUS WIRING AND TERMINALS</b>				
1741-29		Generator to relay wire	1929 - 45" twins	-----
1744-29		Generator to relay wire bracket	1929 - 45" twins	nickel
<b>DUCKWORTH CHAINS &amp; LINKS</b>				
2001-29	40006-29	Front chain, 100 links	1929 to 1952 - 45" twins	-----
2001-29A		Front chain, 102 links	1929 to 1935 - 45" twins, 1929 to 1934 singles	
2002-29		Rear chain (55")	1929 to 1934 - 45" twins	-----
2007-15	40053-15	Connecting link, 3/8" x 5/8" pitch chain	1915 to 1939 all twins, 1929 to 1934 singles	-----
2007-29	40054-29	Connecting link, for double chain	1929 to 1934 singles, 1929 to 1956 - 45" twins	-----
2008-12	40066-12	Connecting link spring (5/8" pitch chain)	1912 to 1957 except 1928 singles	-----
2008-29	40067-29	Connecting link spring (3/8" pitch chain)	1929 to 1934 singles, 1929 to 1957 - 45" twins	-----
2011-15	40077-15	Roller block, 3/8" x 5/8" pitch chain	1915 to 1939 twins, 1929 to 1934 singles	-----
2011-29	40080-29	Roller block (front chain) 3/16"x3/8" pitch chain	1929 to 1934 singles, 1929 to 1957 - 45" twins	-----
2013-15	40092-15	Offset link, 3/8"x5/8" pitch chain	1915 to 1939 twins, 1929 to 1934 singles	-----
2015-15	40094-15	Double repair link, 3/8" x 5/8" pitch chain	1915 to 1939 twins, 1929 to 1934 singles	-----
2015-29	40097-29	Double repair link (front chain)	1929 to 1934 singles, 1929 to 1957 - 45" twins	-----

<b>SPROCKETS</b>				
2031-29		31 tooth motor sprocket, cushion	Fits 1929 to 1934 singles & 45" twins	park
2030-29		26 tooth motor sprocket, cushion	1929 to 1934 singles & 45" twins	park
2030-29C	40225-29	17 tooth motor sprocket (special)	1929 to 1934 singles & 45" twins	park
2030-29A	40234-29	26 tooth motor sprocket, plain	Fits 1929 to 1952 singles & 45" twins	park
2030-29B	40237-29	29 tooth motor sprocket, plain	Fits 1929 to 1952 singles & 45" twins	park
2031-29A		31 tooth motor sprocket, plain	Fits 1929 to 1941 singles & 45" twins	park
2029-29A	40240-29	32 tooth motor sprocket	Fits 1929 to 1952 singles & 45" twins	park
2031-29B	40241-29	33 tooth motor sprocket, plain	Fits 1929 to 1952 singles & 45" twins	park
2029-29	40232-29	24 tooth motor sprocket, plain	Fits 1929 to 1952 singles & 45" twins	park
361-12	23985-12	Motor sproket key	1912 to 1957	park
2050-12	7991	Motor sprocket nut, for plain sprocket	1912 to 1929 - 61" & 74" twins, Fits 1929 to 1934 singles,	nickel
			1929 to 1957 - 45" twins	nickel
2050-29		Motor sprocket nut, for cushion sprocket	1929 to 1934 singles & 45" twins	nickel
2035-29		16 tooth sprocket (countershaft)	1929 singles & 45" twins	-----
2279-26		Countershaft sprocket key	1926 to 1934 singles, 1929 to 1957 - 45" twins	-----
2039-29A		Clutch sprocket (with key ring)	Later 1929 to 1931 Std, 45" twins & C singles,	-----
			1932 to 1934 B singles	
2046-29		28 tooth sprocket, rear wheel	Fit 1929 to 1934 singles & 45" twins	flat nickel
2042-29		30 tooth sprocket, rear wheel	1929 to 1934 - 45" twins	flat nickel
2047-29		32 tooth sprocket, rear wheel	1929 to 1934 singles & 45" twins	flat nickel
2048-29		36 tooth sprocket, rear wheel	1929 to 1934 singles & 45" twins	flat nickel
2045-29		38 tooth sprocket, rear wheel	1929 to 1934 singles & 45" twins	flat nickel
2043-29		40 tooth sprocket, rear wheel	1929 to 1934 singles & 45" twins	flat nickel
2049-29		45 tooth sprocket, rear wheel	Fit 1929 to 1934 singles & 45" twins	flat nickel
2052-29		Cushion sprocket hub	1929 to 1934 singles & 45" twins	park
2054-28		Cushion sprocket lock ring	1928 to 1934 singles & 45" twins	park
2055-28		Cushion sprocket washer	1928 to 1934 singles & 45" twins	park
2056-28		Rubber block (8)	1928 to 1934 singles & 45" twins	rubber

<b>STARTER CRANK GROUP</b>					
2076-26A	33051-26	Starter crank & pedal assembly	1926 to 1934 singles, 1929 to 1940 - 45" twins	-----	
2076-29	33058-29	Starter crank only	1929 to 1934 singles, 1929 to 1940 - 45" twins	park	
2078-26	4370	Starter crank clamp bolt	1926 to 1934 singles, 1929 to 1944 - 45" twins	park	
0129	7789	Crank bolt nut	1926 to 1934 singles, 1929 to 1939 - 45" twins	park	
0261	7045	Crank bolt lock washer (nipb)	1926 to 1934 singles, 1929 to 1939 - 45" twins	park	
2084-28	33084-28	Starter crank spring	Later 1928 to 1934 singles, 1929 to 1940 - 45" twins	black paint	
2086-26		Starter crank spring stud	1926 to 1934 singles, 1929 to 1934 - 45" twins	nickel	
2091-16		Starter pedal, complete	1915 to 1928 - 61" & 74" twins, all later 1929 to 1957	-----	
2092-17	33182-17	Pedal rubber (2)	1917 to 1939 twins, 1930 to 1934 singles	rubber	
2092-29		Pedal rubber	Early 1929 - 45" twins & 21" singles	rubber	
4156-28		Pedal rubber screw	Early 1929 - 45" twins & 21" singles		
2093-17	33190-17	Pedal rubber rod (2) (#10-24)	1917 to 1957	nickel	
0104	7620	Rod nut (4)	1917 to 1957	park	
0254	7021	Rod nut lock washer (4) (nipb)	1917 to 1957	park	
2095-16	33192-16	Pedal pin	1916 to 1939 - 61", 74" & 80" twins, later 1929 to 1934 singles, late 1929 to 1957 - 45" twins	park	
2095-29		Pedal pin	Early 1929 - 45" twins & 21" singles	park	
2096-17	33201-17	Pedal pin cover	1917 to 1939 - 61", 74" & 80" twins, later 1929 to 1934 singles, late 1929 to 1950 - 45" twins	nickel	
0129	7789	Starter pedal pin nut	1916 to 1957	park	
0224	6395	Pedal pin plain washer	1917 to 1957	park	
0261	7045	Pedal pin lock washer (nipb)	1917 to 1957	park	
2098-17	33203-17	Pedal end plate (2)	1917 to 1957	nickel	
2099-29	33210-29	Pedal end cover	1929 to 1957	nickel	
2100-16	4336	Pedal pin bolt (3/8-24)	1916 to 1957	park	
0226	6379	Plain washer for 2100-16 (nipb)	1916 to 1957	park	
2102-16		Pedal pin spring washer	1916 to first 1930	park	
2102-29		Pedal rubber washer	Early 1929 - 45" twins & 21" singles		
<b>STARTER PARTS</b>					
2165-28		Starter clutch	Later 1928 to 1934 singles & 45" twins	-----	
2166-26	33390-26	Starter clutch spring	1926 to 1934 singles, 1929 to 1957 - 45" twins	-----	
2168-26	33455-26	Countershaft spring	1926 to 1934 singles, 1929 to 1957 - 45" twins	-----	
2172-26	33456-26	Tripper bolt (2)	1926 to 1934 singles, 1929 to 1957 - 45" twins	-----	
2173-26	33458-26	Tripper bolt nut (2)	1926 to 1934 singles, 1929 to 1940 - 45" twins	nickel	

<b>THREE SPEEDS &amp; CONTROLS</b>				
2202-29		Three speed & clutch, complete	1929 to 1933 singles & 45" twins, 1934 singles	-----
2204-26		Shifter lever (early style)	1926 to 1934 singles, 1929 and 1930 - 45" twins	nickel
2206-16		Shifter lever stud	1916 to 1936, except 1936 - 61" twins	nickel
0113	0113	Stud nut for 2206-16	1915 to 1936	park
0259	7040	Stud nut lock washer (nipb)	1915 to 1936	park
2208-26		Shifter guide	1926 to 1929 singles, 1929 - 45" twins, 1930 - 21" singles	nickel
2210-16		Guide clamp nut (1-11/16"-24)	1916 to 1936, except 1936 - 61" twins	nickel
2212-28		Shifter rod	1928 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
0112		Shifter rod nut (5/16"-24)	1915 to 1936 twins (except 1936 - 61" ) 1928 to 1934 singles	park
4068-14		Shifter rod end	1925 to 1936 twins (except 1936 - 61" ) 1928 to 1934 singles	nickel
2225-25		Shifter rod end bolt (short) (5/16-24)	1925 to 1936, all models except 1936 - 61" twins	nickel
0113	0113	Bolt nut (5/16"-24)	1925 to 1936	park
0259	7040	Bolt lock washer (nipb)	1925 to 1936	park
0207	6220	Shifter rod washer (nipb)	1925 to 1936	park
0296	512	Shifter rod cotter pin (nipb)	1925 to 1936	park
2236-28		Shifter bell crank	1928 to 1934 singles, 1929 to 1937 - 45" twins	park
2237-29		Bell crank stud	1929 to 1934 singles, 1929 to 1935 - 45" twins	nickel
0129	7789	Bell crank stud nut (3/8"-24)	1926 to 1934 singles, 1929 to 1935 - 45" twins	park
0226	6379	Bell crank stud plain washer	1928 to 1934 singles, 1929 to 1935 - 45" twins	park
0225		Bell crank stud plain washer (left side) (nipb)	1928 to 1934 singles, 1929 to 1935 - 45" twins	park
0290	510	Bell crank stud cotter pin (nipb)	1928 to 1934 singles, 1929 to 1935 - 45" twins	park
2238-28		Bell crank rod	1928 to 1934 singles & 45" twins	park
0207	6220	Bell crank rod washer (2)	1926 to 1934 singles, 1929 to 1935 - 45" twins	park
0290	510	Bell crank rod cotter pin (2) (nipb)	1926 to 1934 singles, 1929 to 1935 - 45" twins	park
2239-26		Gear lock plate	1926 to first 1930 singles & 45" twins	cad
2242-26		Gear shifter shaft	1926 to 1930 singles & 45" twins	cad
0129	7789	Shaft nut (3/8"-24)	1915 to 1936, except 1936 - 61" twins	park
0261	7045	Shaft nut lock washer (nipb)	1915 to 1936, except 1936 - 61" twins	park
2243-26		Gear shifter shaft bushing	1926 to 1934 singles & 45" twins	bronze
2244-26		Gear shifter shaft spring	1926 to 1934 singles & 45" twins	park
2245-26	34459-26	Gear shifter shaft leather washer	1926 to 1934 singles & 45" twins	leather
2251-26		Gear shifter plunger	1926 to 1934 singles, 1929 to 1937 - 45" twins	-----
2168-26	33455-26	Gear shifter plunger spring	1926 to 1934 singles, 1929 to 1937 - 45" twins	park
2255-26		Plunger bushing	1926 to 1934 singles & 45" twins	nickel
2256-26		Plunger bushing nut	1926 to 1934 singles & 45" twins	nickel
2258-29		Gear box only	1929 to 1934 singles & 45" twins	aluminum
2260-28A		Gear box cover (starter side)	Later 1928 & 1929 singles & 45" twins	aluminum
2262-26		Gear box cover gasket (starter side)	1926 to 1934 singles & 45" twins	paper
047	2278	Gear box cover screw (4)	1926 to 1934 singles, 1929 to 1957 - 45" twins	nickel
2270-26		Inspection hole cover	1926 to 1934 singles & 45" twins	nickel



2271-26		Inspection hole cover gasket	1926 to 1934 singles & 45" twins	paper
030	1187	Inspection hole cover screw (4)	1926 to 1934 singles & 45" twins	park
0254		Cover screw lock washer (4)(nipb)	1926 to 1934 singles & 45" twins	park
2272-26		Main shaft, 6-1/2"	1926 to 1934 singles & 45" twins	-----
364-12		Main shaft nut (right side)	1926 to 1934 singles, 1929 to 1940 - 45" twins	nickel
2278-26	35216-26	Main shaft lock washer	1926 to 1934 singles, 1929 to 1941 - 45" twins	park
2279-26	35195-26	Main shaft & clutch gear key (2)	1926 to 1934 singles, 1929 to 1957 - 45" twins	-----
2289-25	9220	Roller bearing roller (for 2286-25 and 2291-26)	1925 to 1936	-----
2290-28		Outer roller race, right	1928 & 1929 singles & 45" twins	-----
2291-26		Roller retainer, right (2)	1926 to 1934 singles, 1929 to 1934 - 45" twins	-----
2292-26		Main shaft spacer, right	1926 to 1934 singles & 45" twins	-----
2516-26		Main shaft spacer, left (.090" to .140" thick)	1926 to 1934 singles, 1929 to 1940 - 45" twins	-----
2294-28		Felt oil retainer	1928 to 1934 singles & 45" twins	felt
2296-26		Low speed gear	1926 to first 1932 singles & 45" twins	-----
2513-26		Clutch gear	1926 to 1933 singles & 45" twins	-----
2297-26		Low speed gear bushing	1926 to 1934 singles & 45" twins	-----
2298-26		Sliding gear	1926 to 1934 singles & 45" twins	-----
2300-28		Countershaft	Later 1928 to 1934 singles & 45" twins	-----
2303-28		Countershaft gear	Later 1928 to 1934 singles & 45" twins	-----
2304-28		Countershaft gear bushing (1)	Later 1928 to 1934 singles & 45" twins	-----
2312-26	36035-26	Countershaft bushing, left	1926 to 1934 singles, 1929 to 1937 - 45" twins	-----
2314-28		Countershaft bushing, right	Later 1928 to 1934 singles & 45" twins	-----
2318-26	34725-26	Gear box bottom stud (2)	1926 to 1934 singles, 1929 to 1957 - 45" twins	park
0133	7835	Gear box bottom stud nut (2)	1926 to 1934 singles, 1929 to 1940 - 45" twins	park
0230	6490	Bottom stud plain washer (2)	1926 to 1934 singles, 1929 to 1940 - 45" twins	park
0266		Bottom stud lock washer (2)(nipb)	1926 to 1934 singles, 1929 to 1939 - 45" twins	park
2326-26	2326-26	Oil filler plug	1926 to 1934 singles & 45" twins, 1938 & 1939 twins	nickel
2328-27	34736-27	Gear box adjusting screw	Later 1927 to 1934 singles, 1929 to 1957 - 45" twins	park
2345-28		Sprocket cover	1928 to 1934 singles & 45" twins	paint
2346-28		Sprocket cover stud (4)	1928 to 1934 singles & 45" twins	cad
0117	7752	Sprocket cover bolt nut (8)	1926 to 1934 singles, 1929 to 1957 - 45" twins	park
0259	7045	Sprocket cover bolt lock washer (8) (nipb)	1926 to 1934 singles, 1929 to 1957 - 45" twins	park
2349-26	44255-26	Alemite extension (on sprocket cover)(5/16-32)	1926 to 1934 singles, 1929 to 1940 - 45" twins	cad
0340	9850	Alemite connection (1)	1924 to 1936, except 1936 - 61" twins	nickel

<b>CLUTCH GROUP - 45" TWINS &amp; SINGLES</b>				
2409-29		Foot clutch lever	1929 to 1934 singles, 1929 to 1937 - 45" twins	cad
2410-14		Hinged toe piece	1926 to 1929 singles & 45" twins	
2411-14		Hinged toe piece pin	1914 to 1929 singles & 45" twins	
2412-14		Hinged toe piece spring	1914 to 1929 singles & 45" twins	
2413-29		Clutch rod stud	1929 to 1934 singles, 1929 to early 1934 - 45" twins	park
2414-29		Clutch rod stud spacer	1929 to 1934 singles, 1929 to 1936 - 45" twins	park
0129	7789	Clutch rod stud nut	1929 to 1934 singles, 1929 to 1936 - 45" twins	park
0261	7045	Stud nut lock washer (nipb)	1929 to 1934 singles, 1929 to 1936 - 45" twins	park
2415-26		Foot lever spring bolt	Later 1926 to 1934 singles, 1929 to 1937 - 45" twins	park
2415-26A		Spring bolt lock washer	Later 1926 to 1934 singles, 1929 to 1937 - 45" twins	park
2417-29		Brass friction disc (2)	1926 to 1934 singles, 1929 to 1937 - 45" twins	nickel
2417-29A		Steel friction disc (1)	1926 to 1934 singles, 1929 to 1937 - 45" twins	nickel
2419-26		Foot clutch lever spring	1926 to 1934 singles, 1929 to 1935 - 45" twins	park
2421-29		Friction spring washer	1929 to 1934 singles, 1929 to 1937 - 45" twins	park
0340	9850	Alemite connection (1)	1929 to 1937 - 45" twins, all singles	nickel
2422-29		Clutch lever rod end	1929 singles & 45" twins	nickel
2424-29		Clutch lever rod (14-1/4")	1929 to 1937 - 45" twins	nickel
0105	7634	Rod nut	All 45" twins, all singles	nickel
2427-29		Clutch release lever	1929 & 1930 singles & 45" twins	park
0212	6310	Clutch release lever washer	1926 to 1934 singles & 45" twins	park
2436-26	2436-26	Clutch release lever finger	1926 to 1934 singles, 1929 to 1940 - 45" twins	park
2446-29		Clutch push rod (8-3/8")	1929 to 1934 singles & 45" twins	-----
2456-26		Inner ball race	1929 to 1937 - 45" twins, all singles	-----
2457-26		Outer ball race	1926 to 1934 singles, 1929 to 1937 - 45" twins	-----
2458-26		Ball retainer & balls	1929 to 1937 - 45" twins, all singles	-----
2463-26		Push rod adjusting screw	1926 to 1933 singles & 45" twins, 1934 singles	park
2464-26	8870	Push rod ball	1926 to 1934 singles, 1929 to 1940 - 45" twins	-----
2465-26		Push rod adjusting screw nut	1926 to 1934 singles, 1929 to 1940 - 45" twins	park
2279-26		Clutch key	1926 to 1934 singles, 1929 to 1940 - 45" twins	-----
2513-26		Clutch gear	1926 to 1933 singles & 45" twins, 1934 singles	-----
2514-26		Clutch gear bushing	1926 to 1934 singles & 45" twins	-----
2516-26		Main shaft spacer (.090" to .0140" thick)	1926 to 1934 singles, 1929 to 1940 - 45" twins	-----
2518-28		Outer roller race (in gear box)	1928 to 1934 singles & 45" twins	-----
3993-23		Roller retainer	1926 to 1934 singles & 45" twins	-----
2289-25	9220	Roller bearing roller (16)	1926 to 1934 singles & 45" twins	-----
2520-26		Roller bearing spacer	1926 to 1934 singles & 45" twins	-----
2521-26		Thrust retainer & balls	1926 to 1934 singles & 45" twins	-----
2522-26		Thrust race	1926 to 1933 singles & 45" twins, 1934 singles	-----
2524-28		Cork packing washer	1928 to 1934 singles & 45" twins	cork
2528-28		Inner clutch disc	1928 to 1934 singles & 45" twins	-----

2530-26		Inner clutch disc lock washer	1926 to 1934 singles & 45" twins	-----
2531-26		Inner clutch disc nut	1926 to 1934 singles & 45" twins	-----
2532-29		Clutch disc rivet (6) (later 1929)	Later 1929 to 1934 singles & 45" twins	-----
2533-26	2533-26	Fiber, clutch sprocket drive disc, key ring side, 6-9/32" dia. (1) rivets to sprocket	1926 to 1934 singles, 1929 to 1940 - 45" twins	fiber
2533-29	2533-29	Fiber, clutch sprocket drive disc, key ring side, 6-3/64" dia. (1) rivets to sprocket	Later 1929 to 1934 singles, 1929 to 1939 - 45" twins	fiber
2485-29	8233	Sproket friction disc & key ring rivet (6) 3/16" x 9/16" tubular (later 1929)	Later 1929 to 1939 - 45" twins, 1929 to 1934 singles	-----
2534-29	37862-29	Fiber outer clutch disc, notched edge (2)	Later 1929 to 1934 singles, 1929 to 1940 - 45" twins	fiber
2535-29		Steel friction disc (1) (later 1929)	Later 1929 to 1934 singles, later 1929 to first 1932 Std. 45" twins	-----
2039-29A		Clutch sprocket (with key ring)	Later 1929 to 1931 Std. 45" twins & C singles	-----
2537-26		Inner roller race	1926 to 1930 singles & 45" twins	-----
2538-26		Roller retainer	1926 to 1934 singles & 45" twins	-----
2289-17	9301	Clutch sprocket roller (16)	1926 to 1934 singles & 45" twins	-----
2539-26		Clutch sprocket bearing washer (2)	1926 to 1930 singles & 45" twins	-----
2540-26		Clutch bearing spring washer (2)	1926 to 1934 singles & 45" twins	-----
2543-29		Clutch key ring	Later 1929 to 1931 Std. 45" twins & singles, 1932 to 1934 B singles	-----
2544-29		Outer clutch disc	First 1929 singles & 45" twins	-----
2544-29A		Outer clutch disc	Later 1929 to first 1932 singles & Std. 45" twins, 1932 to 1934 B singles	-----
2546-29		Clutch spring (14) (3/8" x 1-9/32")	Later 1929 to 1933 singles & 45" twins, 1934 singles	park
2546-29A		Clutch spring (12)(7/16" x 1-1/4")	Early 1929	park
2547-29		Clutch spring collar (for 12 springs)	Early 1929 singles & 45" twins	-----
2547-29A		Clutch spring collar (for 14 springs)	Later 1929 to 1933 singles & 45" twins	-----
2548-29		Clutch spring adjusting nut	1929 to 1933 singles & 45" twins	-----
2550-26		Clutch thrust cap	1926 to 1933 singles & 45" twins, 1934 singles	park
2463-26		Push rod adjusting screw	1926 to 1933 singles & 45" twins, 1934 singles	park
041	2723	Clutch thrust cap screw (6)	1926 to 1934 singles, 1926 to 1933 - 45" twins	park
2551-29	6208	Push rod steel washer (1)	1929 to 1934 singles, 1929 to 1940 - 45" twins	-----
2552-29	2552-29	Push rod cork washer (2)	1929 to 1934 singles, 1929 to 1940 - 45" twins	cork
2554-29		Thrust cap gasket	Later 1929 to 1933 singles 45" twins, 1934 singles	paper

FRONT FORK GROUP				
2602-26		Set of forks, complete (black)	1926 to 1934 - 21" singles, first 1929 - 45" twins	paint
2602-29		Set of forks, complete (black)	Later 1929 C singles & 45" twins	paint
2605-26		Rigid fork (black)	1926 to 1934 - 21 singles, first 1929 - 45" twins	paint
2605-29		Rigid fork (black)	Later 1929 C singles & 45" twins	paint
2607-26		Spring fork (black)	1926 to 1934 - 21 singles, first 1929 - 45" twins	paint
2607-29		Spring fork (black)	Later 1929 C singles & 45" twins	paint
2618-26		Upper fork spring (4-3/4")	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
2620-26		Cushion spring (5")	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
2622-26		Buffer spring (3")	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
2623-23		Flat check spring	1926 to 1929 singles & 45" twins, 1930 to 1936 - 45", 74" &	park
			80" twins, 1937 - 45" twins	
2631-26		Spring rod (7/16" x 9-11/16")	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
2632-26		Spring rod bushing	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	bronze
2634-26	45647-30	Spring rod nut, upper end (2)	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	nickel
0133	7835	Spring rod lock nut, upper end (2)	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
2636-26		Rocker plate (2)	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
2639-26		Short rocker plate stud	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	nickel
2640-26		Long rocker plate stud	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	nickel
0129	7789	Rocker plate stud nut, 3/8" (6)	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
0261	7045	Rocker plate stud nut lock washer (nipb)	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
0117	7752	Rocker plate stud nut, 5/16" (2)	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
0259	7040	Rocker plate stud nut lock washer (nipb)	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
2644-30	7863	Rear stud spacer nut (2) (7/16"-20)	1929 to 1939 - 45" twins, 1930 to 1934 C singles	park
0265	7055	Spacer nut lock washer (nipb)	1929 to 1939 - 45" twins, 1930 to 1934 C singles	park
2644-26		Rocker plate stud spacer nut	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
2645-13		Rocker plate bushing (4)	1913 to 1929, 1930 to 1934 - 21" singles	
0340	9850	Alemite fitting (4)	1924 to 1937	nickel
225	6400	Rocker plate stud washer (4)	1913 to 1929, 1930 to 1934 - 21" singles	park
2654-29		Triple clamp	1929 electric singles & 45" twins, 1930 - 21" singles	park+paint
2655-29		Triple clamp bolt (2) (3/8-24)	1929 electric singles & 45" twins, 1930 - 21" singles	park+paint
0117	7752	Triple clamp stud nut (5/16") (2)	1929 & 1930 singles & 45" twins, 1931 to 1936 - 45", 74" & 80"	park
0259	7040	Triple clamp stud washer (2) (nipb)	twins, 1931 to 1934 singles	park

<b>HEAD FITTINGS</b>				
2751-26		Head cup	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	nickel
2753-26		Upper head cone	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	nickel
2755-26		Lower head cone	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	nickel
2757-26		Head cone washer	1926 to 1934 singles, all 45" twins	park
2759-26		Head cone lock nut	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	nickel
0280		Head cup ball (32) (1/4")	1911 to 1929, 1930 to 1934 - 21" singles	-----
<b>FRAME &amp; FITTINGS</b>				
2801-26		Frame only (black)	1926 to 1929 singles & 45" twins, 1930 - 21" singles	paint
2818-26	53404-26	Luggage carrier (specify color)	1926 to 1934 singles, 1929 to 1941 - 45" twins	paint
2819-26		Set of parts to attach luggage carrier	1926 to 1934 singles, 1929 to 1941 - 45" twins	park
050	2756	Luggage carrier clamp screw	1914 to 1941	park
0108	7691	Clamp screw nut	1914 to 1941	park
2820-26	53433-26	Luggage carrier stud	1926 to 1934 singles, 1929 to 1941 - 45" twins	park
0129	7789	Luggage carrier stud nut (3/8")	1926 to 1934 singles, 1929 to 1941 - 45" twins	park
0131	7871	Luggage carrier stud nut (7/16")	1926 to 1934 singles, 1929 to 1941 - 45" twins	park
2823-26	4304	Rear mudguard brace bolt (2)	1926 to 1934 singles, 1929 to 1941 - 45" twins	park
0129	7789	Brace bolt nut (2)	1926 to 1934 singles, 1929 to 1941 - 45" twins	park
2824-11		Rear axle adjusting clip	1926 to 1929 singles & 45" twins, 1930 - 21" singles	park
2827-12		Rear axle adjusting screw, short	1912 to first 1926 twins, 1926 to 1929 singles & 45" twins, 1930 - 21" singles	park
2832-12		Adjusting screw nut (2)	1912 to first 1926 twins, 1926 to 1929 singles & 45" twins, 1930 - 21" singles	park
0340	9850	Alemite fitting (frame tube for seat post)	1924 to 1937	nickel
0340	9850	Alemite fitting (bottom of frame for rear brake cross-over)	1924 to 1937	nickel

<b>FOOTBOARD &amp; FRONT STAND GROUP</b>				
2928-29		Front footboard support rod	1929 - 45" twins	park
2929-29		Rear footboard support rod	1929 to 1931 - 45" twins	park
0142	7984	Footboard support rod nut, large	1926 to 1931 singles & 45" twins, 1932 to 1934 singles	park
2934-29		Right footboard sidebar	1929 to 1931 - 45" twins	park
2936-29		Left footboard sidebar	1929 to 1931 - 45" twins	park
0225	6400	Sidebar clamp washers (4) (nipb)	1926 to 1934 singles, 1929 to 1952 - 45" twins	park
0129	7789	Sidebar clamp nut (4)	1926 to 1934 singles, 1929 to 1957 - 45" twins	park
2938-14	2938-14	Footboard complete (2)	1914 to 1939	park
2940-14	2940-14	Footboard pad (2)	1914 to 1939	rubber
2941-14	50616-14	Footboard pad rivet (28)	1918 to 1939	park
2944-14		Footboard hinge (4)	1914 to 1939	park
2945-14	50628-14	Footboard hinge rivet (8)	1914 to 1939	park
2948-29		Footboard stud, 2-27/32" (2)(right side)	1929 to 1931 - 45" twins, 1930 to 1934 singles	park
2951-24	50650-24	Footboard stud, 2-15/32" (2)(left side)	1924 to 1929 twins, 1929 to 1933 singles, 1930 to 1957 - 45" twins	park
0129	7789	Footboard stud nut (4)	1914 to 1957	park
0225	7045	Footboard stud lock washer (4) (nipb)	1914 to 1952	park
2954-14	50635-14	Footboard hinge bolt (4) (1/4-24)	1914 to 1957	park
0108	7691	Footboard hinge bolt nut (4)	1914 to 1957	park
0256	7035	Lock washer (4) (nipb)	1914 to 1957	park
2956-29A		Footbrake lever	early 1929	park
2956-29		Footbrake lever	later 1929 to 1931 - 45" twins	park
0340	9850	Alemite connection (1) (footbrake lever)	1924 to 1937	nickel
2960-26		Brake lever stud (3/8-24)	1926 to 1931 singles & 45" twins, 1932 to 1934 singles	park
0129	7789	Brake lever stud nut	1926 to 1936, 1937 to 1957 - 45" twins	park
0261	7045	Stud nut lock washer (nipb)	1926 to 1936, 1937 to 1957 - 45" twins	park
2964-23		Brake lever spring	1923 to 1929 twins, 1930 & 1931 - 45" twins	park
3001-29		Front stand with fittings	1929 - 45" twins	paint
3006-29		Front stand catch	1929 - 45" twins	park
044	1311	Front stand catch bolt (2)	1925 to 1941	park
0106	7654	Front stand catch bolt nut (2)	1925 to 1950	park
062		Front stand bolt	1925 to 1929, 1930 to 1934 - 21" singles	park
0117		Front stand bolt nut	1925 to 1929, 1930 to 1934 - 21" singles	park

<b>REAR STAND GROUP</b>					
3051-26		Rear stand		1926 to 1929 singles & 45" twins, 1930 - 21" singles	paint
3060-26		Stand shoulder bolt (2) (3/8-24)		1926 to 1929 singles & 45" twins, 1930 to 1936 except 61"	park
3060-26A		Shoulder bolt washer (2) (nipb)		1926 to 1929 singles & 45" twins, 1930 to 1936 except 61"	park
3061-24	49345-24	Rear stand spring (2)		1924 to 1935	park
0129	7789	Stand shoulder bolt nut (2)		1926 to 1929 singles & 45" twins, 1930 to 1957	park
0261	7045	Shoulder nut lock washer (2) (nipb)		1926 to 1929 singles & 45" twins, 1930 to 1938	park
3067-29		Stand catch		1929 to 1933 C singles & 45" twins, 1934 C singles	park
051	2762	Stand catch bolt (2)		1925 to 1952	park
0108	7691	Stand catch bolt nut (2)		1925 to 1952	park
0256	7035	Lock washer (2) (nipb)		1925 to 1952	park

<b>SEAT POST GROUP</b>				
3101-26	47066-26	Seat bar bracket	1926 to 1934 singles, 1929 to 1939 - 45" twins	black
3103-29	51911-29	Seat bar plate	1929	black
0318	8580	Seat bar rivet (3)	1929 to 1941 twins	black
3106-29		Seat bar	1929 - 45" twins & C singles	black
068	4042	Seat bar bolt, front	1926 to 1934 singles, 1929 to 1957 - 45" twins	park
0117	7752	Seat bar bolt nut	1926 to 1934 singles, 1929 to 1936 - 45" twins, 1936 - 61", all 1937 to 1939	park
0259	7040	Bolt nut lock washer (nipb)		park
3111-29	51918-29	Seat bar clevis pin	1929 to 1957 twins and all C singles	park
3112-29	51920-29	Clevis pin spring	1929 to 1931 twins & C singles, 1932 to 1957	park
3113-29	47581-29	Seat post bushing	1929 to 1957 singles & 45" twins, 1929 to 1936-74" & 80" twins	bronze
3115-29	51625-29	Seat plunger	1929 to 1957 singles & 45" twins, 1929 to 1936-74" & 80" twins	cad
3117-29	51640-29	Plunger link	1929 to 1957	cad
3118-29	51642-29	Plunger link rivet	1929 to 1957	nickel
3119-13	51644-13	Plunger link bushing	1929 to 1957	steel
3127-29		Seat post lower spring (2)(6-1/2", 20-1/2 coils)	First 1929	
3128-29	51770-29	Set of lower springs	1929	-----
186-10	51780-30	Seat post auxiliary spring (2-3/4")	1925 to 1957	-----
3137-29		Seat post rod	All 1929, 1930 - 21" singles	nickel
3138-29		Cushion spring guide collar (1-3/4" long)	First 1929	
3138-29A		Cushion spring guide collar (1-3/8" long) (2)	Later 1929 & 1930 to 1957 - for 230 lbs. & over	
3141-25		Plunger lock nut (1-1/2")	1925 to first 1929	
3141-29	51633-29	Plunger lock nut (1-5/16") (3/8-24)	Later 1929 to 1957 - 45" twins, 1929 to 1936 - 74" & 80" twins & singles	park
3143-25	51672-25	Seat post rod nut (3/8-24)	1925 to 1957	park
3144-25	51674-25	Rod lock nut (3/8-24)	1925 to 1957	park
0261	7045	Lock nut spring washer (nipb)	1925 to 1957	park
3147-29		Spring adjusting nut (7/8" O.D.)	First 1929	
3147-29A	51795-29	Spring adjusting nut (13/16" O.D.) (3/8-24)	Later 1929 to 1957 - 45" twins, 1929 to 1936 - 74" & 80" twins & singles	park
0129	7789	Adjusting nut lock nut (2?)	1925 to 1957	park



<b>SADDLE GROUP</b>				
3181-25	52004-25	Saddle top	1925 to 1933 twins & C singles	tan leather
3182-25	52090-25	Pommel	1925 to 1933 twins & C singles	black paint
0314	8515	Pommel rivets (doz.)	1925 to 1933 twins & C singles	black paint
3185-18		Pommel, Mesinger	1918 to 1933 twins & C singles	black paint
3187-29		Pommel bolt, Mesinger (3/8-20)	1925 to 1933 twins & C singles	park
0225	6395	Pommel bolt plain washer	1925 to 1957 twins, 1930 to 1934 C singles	park
0261	7045	Pommel bolt lock washer (nipb)	1925 to 1957 twins, 1930 to 1934 C singles	park
3191-18		Adjusting screw (1/4-24 x 2" fillister head)	1918 to 1930 twins & C singles	flat nickel
3193-18		Tension spring cap	1918 to 1930 twins & C singles	flat nickel
3195-18		Pommel bolt nut	1918 to 1930 twins & C singles	flat nickel
3203-25		Tension spring	1925 to 1930 twins & C singles	
3205-25		Rear bracket bolt (4) (5/16-24)	1925 to 1933 twins & C singles	black paint
3207-18		Rear bracket bolt nut (4) (5/16-20)	1918 to 1933	nickel
0214	6320	Rear bracket bolt flat washer (4) (nipb)	1918 to 1933	park
0259	7040	Rear bracket bolt lock washer (4) (nipb)	1918 to 1933	park

<b>HANDLEBARS &amp; CONTROLS</b>					
	3307-29A		Std. Handlebars bare	1929 & 1930 singles & 45" twins	black paint
	3310-09	53030-36	Handlebar grip, black (2)	1911 to 1934	rubber
	3312-16		Right spiral (2)	1916 to 1934	nickel
	3316-16		Handlebar plunger (2)	1916 to 1930	-----
	305-15	9281	Roller pin (2)	1916 to 1948	-----
	3320-10	56278-10	Plain roller (2)	1911 to 1930	-----
	3322-09		Wire fastening screw (2) (5/16-18)	1911 to 1930	
	3324-09	56420-09	Control wire end (2)	1911 to 1948	
	3326-09	56373-09	Control wire (2)	1911 to 1948	-----
	3330-10		Handlebar end nut (2) (7/8-24)	1911 to 1930	park
	3332-10		Handlebar plug (2)	1911 to 1930	aluminum
	3334-12		Control coil & plug (54") (2)	1912 to 1930	nickel
	3338-12		Control coil only (54") (2)	1912 to 1931	nickel
	3339-28		Oiler control coil	1928 to 1936, except 1936 - 61" twins	nickel
	3341-28		Control coil adjusting sleeve (3/8-24)	1928 to 1936, except 1936 - 61" twins	nickel
	3341-29		Control coil adjusting sleeve, lower (3/8-24)	1929 to 1933 - 45" twin, 1930 to 1936 - 74" & 80" twins	nickel
	129	7789	Adjusting sleeve lock nut	1928 to 1936, except 1936 - 61" twins	park
	3342-14		Leather coil housing (2)	1914 to 1936 (except 1936 - 61" twins), 1937 & 1938 - 45" twins	leather
	3343-09		Control coil nuts (1/4-14 LH)	1911 to 1930	nickel
	3344-26	56495-26	Control coil clamp (left)	1926 to 1934 singles, 1929 to 1950 - 45" twin	park/cad
	3345-26		Control coil clamp (right)	1926 to 1934 singles, 1929 to 1941 - 45" twin	park/cad
	035	1190	Control coil clamp screw (2)	1913 to 1936, except 1936 - 61" twins, 1937 to 1950 - 45" twins	park/cad
	3362-29		Control connection block	1929 - 45" twin, 1930 to 1936 - 45", 74" & 80" twins	nickel
	3363-28		Carburetor control rod	1928 to 1931 side valve singles & 45" twins, 1932 to 1934 singles	nickel
	3370-29A		Carburetor control connection	1929 to 1936 - 45" twin, first 1930 - 74" twins	nickel
	3373-29		Timer control wire connection	1929 - 45" twin, 1930 to 1936 - 45", 74" & 80" twins	
	021	1062	Control sleeve screw	1911 to 1936	park
	0202		3/16" plain washer for control	1911 to 1929	park
	0207	6220	1/4" plain washer for control	1911 to 1929	park
	3392-29		Control coil bracket, front	1929 - 45" twin, all 1930 & 1931 twins	park
	3393-29		Control coil bracket, rear	1929 - 45" twin, 1930 to 1936 - 45", 74" & 80" twins	park
	3394-29		Control coil clip (on drive case cover)	1929 - 45" twin, 1930 to 1936 - 45", 74" & 80" twins	park
	042	2686	Screw for 3394-29	1929 - 45" twin, 1930 to 1936 - 45", 74" & 80" twins	park
	0201	6182	Plain washer for clip (nipb)	1929 - 45" twin, 1930 to 1936 - 45", 74" & 80" twins	park

<b><u>TOOL BOX GROUP</u></b>				
3452-29		Tool box	1929 - 45" twins & C singles	paint
3456-29		Tool box cover	1929 - 45" twins & C singles, 1932 to 1934 - 21" singles	paint
3464-26	64340-26	Tool box key	1926 to 1929 electric twins, 1930 to 1954	nickel
051	2762	Tool box screw (2)	1929 - 45" twins & C singles, 1932 to 1934 - 21" singles	park
0108	7691	Tool box screw nut (2)	1929 - 45" twins & C singles, 1932 to 1934 - 21" singles	park
<b><u>TANK GROUP</u></b>				
3501-26		Right tank	1926 to 1930 - 21" singles, first 1929 - 45" twins	paint
3501-29		Right tank	Later 1929 C singles & 45" twins	paint
3502-26		Left gasoline & oil tank	1926 to 1930 - 21" singles, first 1929 - 45" twins	paint
3502-29		Left gasoline & oil tank	Later 1929 C singles & 45" twins	paint
3505-26		Tank buffers (2)	1926 to 1934 singles, 1929 to 1937 - 45" twins	rubber
3507-16		Tank cap (1-1/2"-24)	1916 to 1934	nickel
3511-16		Cap seat (1-1/2"-24)	1916 to 1936, except 1936 - 61" twins	
3512-16		Oil cap seat (1-1/2"-24)	1916 to 1936, except 1936 - 61" twins	
3517-25		Primer pump, complete (1-1/2"-24)	1925 to 1934	
3519-14		Primer pump nut (1-1/2"-24)	For 3517-25	
3520-14		Plunger knob	For 3517-25	
3521-25		Plunger rod with washer	For 3517-25	
3522-14		Plunger spring	For 3517-25	-----
3524-14		Priming pump leather washer	For 3517-25	leather
3529-10		Tank clip screw (2) (1/4-24)	1911 to 1936, except 1936 - 61" twins	park
0108	7691	Clip screw nut (2) (1/4-24)	1917 to 1936 for 3529-10	park
0257	0257	Lock washer (2) (nipb)	1917 to 1936 for 3529-10	park
3530-25		Clip screw tank spacer (2)	For 3529-10	park
3532-18	3665	Top of tank screw (5) (7/32"-32)	1919 to 1936, 1937 to 1950 - 45" twins	nickel
3532-18S	3666	Top of tank screw, oversize (5) (1/4-28)	1919 to 1936, 1937 to 1950 - 45" twins	nickel
3533-18	61820-18	Tank screw spring washer (5)	1919 to 1936, 1937 to 1950 - 45" twins	nickel

<b>HAND OIL PUMPS, OIL PIPES &amp; GAS PIPES</b>				
3551-27		Oil pump body assembled	Later 1927 to 1936	
3553-27		Oil pump body assembled	Later 1927 to 1936	
3555-25		Oil pump plunger complete	1925 to 1936	nickel
3557-25		Oil pump plunger	1925 to 1936	nickel
3559-15		Plunger tube cap	1915 to 1936	nickel
3561-12		Plunger screw (5/16-40)	1912 to 1936	nickel
3563-12	37345-41	Plunger cup washer (2)	1912 to 1936	leather
0214	6320	Plunger washer steel (3)	1912 to 1936	
0290	510	Cotter pin (nipb)	1912 to 1936	
3564-27		Suction valve	Later 1927 to 1936	brass
3565-27		Suction spring	Later 1927 to 1936	-----
3566-27		Releasing spring	Later 1927 to 1936	-----
3567-27		Square oil pump top nut (nipb)	Later 1927 to 1936	
0283	8866	3/8" oil pump ball	Later 1927 to 1936	-----
3571-29		Drive case oil pipe	1929 to 1931 - 45" twins	dull nickel?
3572-29		Hand pump oil pipe	1929 to 1931 - 45" twins	dull nickel?
3577-15	63533-15	Oil pipe nipple 3/8" (15/32-24)	1915 to 1922, later 1927 to 1936, except 1936 - 61" twins	nickel
3578-27		Oil pump body nipple	Later 1927 to 1936, except 1936 - 61" twins	nickel
3579-15		Oil pipe nipple (soldered in tank)	1915 to 1936, except 1936 - 61" twins	paint
3581-15		Oil pipe nut (15/32-24)	1915 to 1936	nickel
3583-15	3583-15	Oil nipple cap	Use when oil pipe is disconnected	
3601-16	3601-16	Gas valve (1/8-27 NPT)	1916 to 1939, except 1937 to 1939 - 45" twins	nickel
3603-16	3603-16	Gas valve spring	1916 to 1939	flat nickel
0207	6220	Gas valve washer	1916 to 1939	flat nickel
3604-29		Gas pipe elbow	1929 to 1931 - 45" twins	nickel
3606-29		Gas pipe	1929 to 1931 - 45" twins	dull nickel?
0140	62371-15	Gas pipe nut (valve end) & vent & rocker arm oil pipes	1915 to 1949	nickel
3612-09		Gas pipe nut ( carburetor end) (15/32-24)	1911 to 1938	nickel
3615-15	63580-15	Gas pipe nipple (rear end) & vent & rocker arm oil pipes	1915 to 1950	nickel
3617-15	3617-15	Gas pipe nipple ( carburetor end)	1915 to 1931, 1932 to 1934 singles	nickel

<b>MUDGUARD GROUP</b>				
3701-29		Front mudguard less flap	First 1929 - 45" twins	paint
3702-29A		Front mudguard less flap	Later 1929 C singles & 45" twins	paint
3709-29		Rear mudguard & braces	1929 - 45" twins & C singles	paint
3712-29		Rear mudguard hinged end (specify color)	1929 - 45" twins	paint
030	1187	Mudguard side screw (12)	1921 to 1933 twins & C singles, 1934 C singles	paint
3726-29		Front mudguard brace, upper	1929 - 45" twins & C singles	paint
3727-29		Front mudguard brace, lower	1929 - 45" twins & C singles	paint
3730-29		Front mudguard brace clip, right	First 1929 - 45" twins	paint
3731-29		Front mudguard brace clip, left	First 1929 - 45" twins	paint
3730-29A		Front mudguard brace clip, right	Later 1929 C singles & 45" twins	paint
3731-29A		Front mudguard brace clip, left	Later 1929 C singles & 45" twins	paint
3736-29		Rear mudguard brace, center	1929 to 1933 twins & C singles, 1934 C singles	paint
3737-29		Rear mudguard end brace (2)	1929 to 1933 twins & C singles, 1934 C singles	paint
3743-23	5425	Brace bracket bolt (2) (5/16-24)	1923 to 1939 twins, 1930 to 1934 C singles	paint
0117	7752	Brace bracket bolt nut (2)	1923 to 1939	paint
0214	6320	Plain washer (2)	1923 to 1933, 1934 singles	paint
0259	7040	Lock washer (nipb)	1923 to 1933, 1934 singles	paint
0308	8523	3/16" x 9/16" round head rivets	For mudguard braces & clips	paint
0314	8515	3/16" x 3/8" truss head rivets	For mudguards to braces	paint
3745-29		Rear mudguard brace clip, right (1-piece)	1929 to 1939 - 45" twins, 1930 to 1934 C singles	paint
3746-29	59780-29	Rear mudguard brace clip, left	1929 to 1939 - 45" twins, 1930 to 1934 C singles	paint
3748-26	4013	Rear mudguard support bolt (2)	1926 to 1934 singles, 1929 to 1950 - 45" twins	park
0117		Support bolt nut (2)	1929 to 1939 - 45" twins, 1926 to 1934 singles	park
0214		Rear upper bolt flat washer (2)	1929 to 1939 - 45" twins, 1926 to 1934 singles	park
4417-29	66302-29	Rear bolt plate	1929 to 1934 singles, 1929 to 1937 - 45" twins	park
3749-26	2404	Front mudguard bolt	1926 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
0117	7752	Front mudguard bolt nut (2)	1930 to 1952	park
0259	7040	Mudguard bolt lock washer (2) (nipb)	1930 to 1952	park
3751-23		Rear mudguard end hinge	1923 to 1929, 1930 to 1934 - 21" singles	paint
0314	8515	Hinge rivets	1923 to 1950	paint
2823-26	4304	Rear mudguard brace bolt (2)	1926 to 1934 singles, 1929 to 1952 - 45" twins	park
0129	7789	Brace bolt nut (2)	1926 to 1934 singles, 1929 to 1930 - 45" twins	park
0226	6379	Bolt nut plain washer (2) (nipb)	1926 to 1934 singles, 1929 to 1930 - 45" twins	park
0261	7045	Bolt nut lock washer (2) (nipb)	1926 to 1934 singles, 1929 to 1930 - 45" twins	park
3757-26	59235-26	Mudguard flap	1926 to 1939 twins, 1930 to 1934 C singles	rubber
032	1206	Mudguard flap bolt (3)	1911 to 1939	park
0104	7620	Mudguard flap bolt nut (3)	1911 to 1950	park
0205	6203	Plain washer (3)	1911 to 1950	park
0254	7021	Lock washer (3) (nipb)	1911 to 1950	park

<b>CHAIN GUARDS</b>				
3801-29		Front chain guard	1929 to 1931 - 45" twins	paint
3804-29		Chain guard back, upper	1929 to 1931 - 45" twins	black
3805-29		Chain guard back, lower	1929 to 1931 singles, 45" twins, 1932 to 1934 singles	black
045	2275	Screws for chain guard back (2)	First 1929 singles & 45" twins	bare
058	1956	Screw for chain guard back (2)	Later 1929 to mid-1930 singles & 45" twins	bare
3807-26	60542-26	Front chain guard rear bracket	1926 to 1934 singles, 1929 to 195 - 45" twins	park
053	2775	Front chain guard rear screw	1926 to 1929, 1930 to 1934 singles, 1930 to 1957 - 45" twins	park
0108	7691	Nut for 053	1915 to 1929, 1930 to 1934 singles, 1930 to 1957 - 45" twins	park
3811-29	60569-29	Chain inspection hole cover (2)	1929 singles & 45" twins, all 1930 to 1936 - 74" & 80" twins, 1930 to 1957 - 45" twins	paint
048	2265	Chain guard cover screw (2)	1929 singles & 45" twins, all 1930 to 1936, 1937 to 1957 - 45" twins	park/paint
3812-29		Chain guard back slot cover	1929 to 1934 singles, 1929 to 1940 - 45" twins	
030	1187	Slot cover screw (2)	1929 to 1934 singles, 1929 to 1940 - 45" twins	park
0104	7620	Slot cover screw nut (2)	1929 to 1934 singles, 1929 to 1940 - 45" twins	park
0201	6182	Slot cover screw washer (2)	1929 to 1934 singles, 1929 to 1940 - 45" twins	park
3813-29		Bolt for chain guard back (2) (1/4-24)	1929 to 1934 singles, 1929 to 1940 - 45" twins	park
0108	7691	Nut for 3813-29 (2)	1929 to 1934 singles, 1929 to 1940 - 45" twins	park
3814-29	60640-29	Chain guard back spring (2)	1929 to 1934 singles, 1929 to 1957 - 45" twins	park
3815-29		Spring washer, small (2)	1929 to 1934 singles, 1929 to 1940 - 45" twins	park
0215	6327	Spring washer, large (2)	1929 to 1934 singles, 1929 to 1940 - 45" twins	park
3818-26		Rear chain guard (black)	1926 to 1934 singles & 45" twins	paint
051	2762	Rear chain guard screw, front end	1924 to 1936, except 1936 - 61" twins	paint
0207	6220	Rear chain guard screw washer (nipb)	1924 to 1936, except 1936 - 61" twins	park
3828-26	60347-26	Rear chain guard bracket stud	1926 to 1934 singles, 1929 to 1935 - 45" twins	park
524-25	60350-25	Rear chain guard bracket spring	1926 to 1934 singles, 1929 to 1957 - 45" twins	park
0108	7691	Bracket nut	1915 to 1939	park
0208	6227	Bracket stud plain washer (2)	1926 to 1934 singles, 1929 to 1957 - 45" twins	park

<b>FRONT WHEEL &amp; FRONT HUBS</b>				
3906-28		Front hub cpt. with brake shell	1928 to 1934 - 21" singles, 1929 - 45" twins & C singles	black
3908-28		Front hub shell	1928 to 1934 - 21" singles, 1929 - 45" twins & C singles	black
0340	9850	Alemite connection (1) in hub		nickel
3910-26		Front axle	1926 to 1934 - 21" singles, 1929 - 45" twins & C singles	park
0128	7809	Front axle nut (castellated) (2)	1926 to 1934 singles, 1929 to 1936 - 45" twins	park
0223	6408	Front axle washer, left side	1928 to 1934 - 21" singles, 1929 - 45" twins & C singles	park
0261	7045	Axle nut lock washer (nipb) (2)	1928 to 1934 - 21" singles, 1929 - 45" twins & C singles	park
0292	534	Axle nut cotter pin (nipb) (2)	1928 to 1934 - 21" singles, 1929 - 45" twins & C singles	park
3921-28		Front axle bushing	1928 to 1934 - 21" singles, 1929 - 45" twins & C singles	
3923-26		Front hub cone	1926 to 1934 - 21" singles, 1929 - 45" twins & C singles	nickel
3925-26		Cone spring ring (2)	1926 to 1934 - 21" singles, 1929 - 45" twins & C singles	-----
0280		1/4" balls (28)	1926 to 1934 - 21" singles, 1929 - 45" twins & C singles	-----
3926-26		Cone lock washer	1926 to 1934 - 21" singles, 1929 - 45" twins & C singles	park
3929-26		Cone lock nut	1926 to 1934 - 21" singles, 1929 - 45" twins & C singles	nickel
3932-28A		Left inner dirt guard	1928 to 1934 - 21" singles, 1929 - 45" twins & C singles	nickel
3935-28		Spoke flange, right side	1928 to 1934 - 21" singles, 1929 - 45" twins & C singles	black paint
0308	8523	Rivets for brake shell & spoke flange (5)	1928, 1929, 1930 to 1934 singles, 1930 to 1952 - 45" twins	black paint
<b>WHEEL RIMS &amp; SPOKES</b>				
3940-27		Tire rim, 18" clincher (for light spokes)	For 25" x 3.85" tires	black paint
3940-27		Tire rim, 18" clincher (for heavy spokes)	Fits 25" x 3.85" tires	black paint
3941-28B		Front rim, 18" clincher	1928 & 1929 for 25" x 3.85" tires	nickel
3943-27		Spoke, .148" x 8-9/16"	For 18" rim (25" x 3.85" tire)	nickel
3944-27		Spoke, .148" x 8-9/16"	For 18" rim (25" x 3.85" tire)	nickel
3945-28B		Front break shell spoke	For 18" rim (25" x 3.85" tire)	nickel
3947-16		Spoke nipple, light	1917 to 1929, 1930 to 1934 singles & 45" twins	nickel

<b>REAR WHEEL GROUP</b>				
3958-26		Rear hub assembled	1926 to 1930 singles, 1929 - 45" twins	
3960-26		Rear hub shell	1926 to 1931 singles & 45" twins	black paint
0340	9850	Alemite fitting (1) in hub	1924 to 1935	nickel
3963-26		Sprocket & brake drum lock nut	1926 to 1931 singles & 45" twins	nickel
3965-26		Right cone	1926 to 1930 singles, 1929 - 45" twins	nickel
3966-26		Right cone lock nut	1926 to 1930 singles, 1929 - 45" twins	nickel
3969-26		Left cone	1926 to 1930 singles, 1929 - 45" twins	nickel
0142		Left cone lock nut	1926 to 1930 singles, 1929 - 45" twins	nickel
3972-26		Cone spring ring	1926 to 1931 singles & 45" twins	-----
0283	8866	3/8" balls (22)	1926 to 1931 singles & 45" twins	-----
3995-26		Rear axle	1926 to 1930 singles, 1929 - 45" twins	nickel
0137		Rear axle nut (2)	1926 to 1931 singles & 45" twins	nickel
0233	6568	Rear axle washer (2)	1926 to 1931 singles & 45" twins	park?



<b>SERVICE BRAKE (REAR WHEEL)</b>					
4029-26		Brake bracket & bands assembled, latest type	1926 to 1930 singles, 1929 - 45" twins		park
4032-26		Brake shell	1926 to 1930 singles & 45" twins		black paint
3963-26		Brake shell & sprocket nut	1926 to 1931 singles & 45" twins		park
4036-27		Brake bracket	1927 to 1930 singles, 1929 - 45" twins		park
4037-26		Brake bracket nut	1926 to 1931 singles & 45" twins		park
4038-27		Brake band & lining, upper	1927 to 1930 singles & 45" twins		park
4039-27		Brake band & lining, lower	1927 to 1930 singles & 45" twins		park
4042-27		Brake lining, upper	1927 to 1930 singles & 45" twins		-----
4043-27		Brake lining, lower	1927 to 1930 singles & 45" twins		-----
4046-14		Brake band lining rivet	1914 to 1929, 1930 to 1934 singles & 45" twins		brass
4054-26		Brake lever	1926 to first 1929 singles & 45" twins		park
4054-29		Brake lever	Later 1929 & 1930 singles & 45" twins		park
4056-23		Brake stud connecting link	1923 to 1929, 1930 to 1934 singles & 45" twins		park
4063-23		Brake band pin (2)	Later 1929 to 1934 singles & 45" twins		park
0211	6280	Brake band pin washer	1923 to 1929, 1930 to 1934 singles & 45" twins		park
		Brake band pin cotter pin (2) (nipb)			park
4064-29		Brake rod adjusting nut	Later 1929 to 1931 singles & 45" twins		park
4065-26		Rear brake rod	1926 to first 1929 singles & 45" twins		park
4065-29		Brake rod	Later 1929 & 1930 singles & 45" twins		park
0117		Brake rod nut	1915 to 1929		park
4067-26		Brake rod clevis	1926 to first 1929 singles & 45" twins		park
4066-29		Brake rod spring	Later 1929 to 1934 singles & 45" twins		park
4068-29		Brake rod spring collars (2)	1929 to 1934 - 45" twins & singles		park
0207	6220	Clevis pin washer, 1/4" x 7/16"	1914 to 1929		park
4071-26		Brake arm clamp	1926 to 1929 singles & 45" twins		park
067		Brake arm & clamp bolt	1926 to first 1929 singles & 45" twins		park
4073-29A		Brake arm clamp bolt	Later 1929 to 1931 singles & 45" twins		park
0117	7752	Brake clamp bolt nut	1926 to 1931 singles & 45" twins		park
0214	6320	Brake arm bolt plain washer	1915 to 1929, 1930 & 1931 singles & 45" twins		park
4073-29		Front brake rod	1929 to 1931 - 45" twins		park
0212	6310	Brake rod washer (3)	1926 to 1934 singles & 45" twins		park
0290	510	Cotter pin (2) (nipb)	1926 to 1934 singles & 45" twins		park
4075-27		Brake crossover shaft	1927 to 1934 singles & 45" twins		park
4077-26		Brake shaft lever	1926 to 1934 singles & 45" twins		park
4078-26		Footbrake shaft lock washer	1926 to 1934 singles & 45" twins		park
4079-26		Footbrake shaft nut (7/16-20)	1926 to 1934 singles & 45" twins		park

<b>FRONT WHEEL BRAKE</b>				
4109-28		Front brake side cover	1928 & 1929 singles & 45 " twins, 1930 to 1934 - 21" singles	paint
4110-28A		Front brake shell	1928 & 1929 singles & 45 " twins, 1930 to 1934 - 21" singles	paint
4111-28A		Upper brake shoe & lining	1928 & 1929 singles & 45 " twins, 1930 to 1934 - 21" singles	molded
4112-28A		Lower brake shoe	1928 & 1929 singles & 45 " twins, 1930 to 1934 - 21" singles	molded
4113-28A		Brake shoe lining (2)	1928 & 1929 singles & 45 " twins, 1930 to 1934 - 21" singles	-----
2485-12		Brake lining rivets	1928 to 1930, 1932 to 1934 - 21" singles	brass
4116-28		Brake side cover bushing	1928 & 1929 singles & 45 " twins, 1930 to 1934 - 21" singles	bronze
4123-28A		Brake operating lever	1928 & 1929 singles & 45 " twins, 1930 to 1934 - 21" singles	park
4124-28		Brake operating stud (3/8-24)	1928 to 1930, 1932 to 1934 - 21" singles	park
4124-28A		Operating stud grease nipple (3/8-24)	Later 1928 to 1930, 1932 to 1934 - 21" singles	park
4125-28A	44486-28	Brake shoe spring (2)	1929 to 1939 - 45" twins	park
4126-28		Brake shoe spring	1928 & 1929 singles & 45 " twins, 1930 to 1934 - 21" singles	park

FRONT BRAKE CONTROL PARTS				
4130-28		Brake shackle	1928 to 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
4132-28		Brake shackle bushing (2)	1928 & 1929 singles & 45" twins, 1930 to 1934 - 21" singles	-----
4134-28		Brake shackle fork stud	1928 & 1929 singles & 45" twins, 1930 to 1934 - 21" singles	nickel
129	7789	Fork stud nut (1) (nipb)	1928 & 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
0261	7045	Fork stud lock washer (1) (nipb)	1928 & 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
4138-28	44225-30	Brake shackle band stud	1928 & 1929 singles & 45" twins, 1930 to 1934 - 21" singles	nickel
0127	7793	Band stud nut (1) (nipb)	1928 & 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
0214		Band stud plain washer (1)	1928 & 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
0261	7045	Band stud lock washer (1) (nipb)	1928 & 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
0340	9850	Alemite connection (3)	1928 to 1937	nickel
4143-28		Control coil	1928 to first 1930	nickel
4145-28	45153-28	Control wire	1928 to 1952	-----
4146-15	45158-15	Control wire end	1928 to 1952	-----
4149-28	4149-28	Hand lever & bracket complete	1928 to 1940	-----
4150-28	4150-28	Brake hand lever	1928 to 1940	nickel
4151-28	4151-28	Hand lever bracket	1928 to 1940	park
4153-28	45030-28	Bracket clamp	1928 to 1957	park
4154-28	4154-28	Bracket clamp screw (#10-24)	1928 to 1940	park
032	1206	Bracket clamp screw	1928 to 1940	park
053	2775	Handlebar clip bolt	1928 to 1952	park
4160-28	9980	Handlebar clip	1928 to 1952	park
4156-28	4156-28	Hand lever screw (1/4-24)	1928 to 1940	park
4157-28	4157-28	Screw spring washer	1928 to 1940	park
0108	7691	Bolt nut	1928 to 1950	park
0256	7035	Bolt nut washer (nipb)	1928 to 1950	park
4161-28A	9967	Coil spring clip	1928 & 1929 singles & 45" twins, 1930 to 1934 - 21" singles	park
4162-28		Coil clip (to fork bracket)	1928 & 1929, 1930 to 1934 - 21" singles	park
064		Coil clip bolt	1928 & 1929, 1930 to 1934 - 21" singles	park
0117		Coil clip bolt nut	1928 & 1929, 1930 to 1934 - 21" singles	park
4165-28	38674-28	Control coil adjusting sleeve (7/16-20)	1928 to 1940	park
4166-28	7827	Adjusting sleeve nut (7/16-20)	1928 to 1940	park
4170-28	45172-28	Control wire lower connection	1928 to 1940	park
4171-29	45182-29	Lower connection clamp nut	1928 to 1952	park
4069-26	490	Clevis pin	1928 to 1952	nickel
0207	6220	Clevis pin washer (nipb)	1928 to 1957	
0290	510	Clevis pin cotter pin (nipb)	1928 to 1957	

<b>BATTERIES &amp; BATTERY PARTS</b>				
4303-29	66006-29	HM5 battery, less case, fully charged	1929 to 1936 singles & 45" twins, 1936 - 61" twins, all 1937 to 1957	
4304-29		HM5 battery, less case, dry	1929 to 1936 singles & 45" twins, 1936 - 61" twins, all 1937 to 1957	
4357-26	4357-26	Plate lock pin (1 ft. Length)	1926 to 1939 twins, 1929 to 1934 singles	
4359-29	66010-29	Rubber jar only	1929 to 1936 singles & 45" twins, 1936 - 61" twins, all 1937 to 1950	
4369-29	66012-29	Wood separator	1929 to 1936 singles & 45" twins, 1936 - 61" twins, all 1937 to 1950	
4371-29	66014-29	Rubber separator	1929 to 1936 singles & 45" twins, 1936 - 61" twins, all 1937 to 1950	
4381-29	66018-29	Filler plug	1929 singles & 45" twins, all 1930 to 1957	
4383-28	66021-28	Filler plug washer	Later 1928 twins, all 1929 to 1957	
<b>BATTERY CASE GROUP &amp; RELAY</b>				
4404-29	66202-29	Battery case only (black)	1929 to 1939 - 45" twins, 1930 to 1934 singles	paint
4407-29	66377-29	Battery case cover (black)	1929 to 1939 - 45" twins, 1929 to 1934 singles	paint
4409-24	66387-26	Cover bolt wing nut (2)	1924 & 1925, 1929 to 1957 - 45" twins, 1929 to 1934 singles	cad
4411-24	66385-24	Cover clamp bolt (2)	1924 & 1925, 1929 to 1940 - 45" twins, 1929 to 1934 singles	nickel
4413-24	66288-24	Clamp bolt lock pin (2)	1924 & 1925, 1929 to 1957 - 45" twins, 1929 to 1934 singles	park
3748-26	4013	Rear upper bolt (2)	1926 to 1939 - 45" twins, 1926 to 1934 singles	park
		Rear upper bolt flat washer (2) (nipb)	1926 to 1939 - 45" twins, 1926 to 1934 singles	park
4416-29		Battery box clamp, front	1929 singles & 45" twins	park
4417-29	66302-29	Rear bolt plate	1929 to 1937 - 45" twins, 1929 to 1934 singles	park
0117	7752	5/16" nut for battery box bolts 061 & 066 (3)	1930 to 1936, except 1936-61" twins, 1937 to 1957 - 45" twins	park
0259	7040	Bolt lock washer (3) (nipb)	1930 to 1936, except 1936-61" twins, 1937 to 1957 - 45" twins	park
3748-26		Rear bracket bolt	1926 to 1929 singles & 45" twins	park
0117	7752	Rear bracket bolt nut	1926 to 1929 singles & 45" twins	park
4427-15	66100-15	Rubber mat (2)	All 1915 to 1925, 1926 to 1935 singles & 45" twins, 1936 - 61", 1937 to 1957	rubber
4433-23	66112-23	New type terminal screw (2) (#10-24)	Fits 1923 to 1957	nickel
4433-23A	66115-23	Battery terminal felt oil washer (2)	All batteries	felt
4434-23	7628	Terminal screw nut (2) (#10-24)	For 4433-23	nickel
035	1190	Ground screw	Later 1922 to 1930, 1931 to 1934 singles	nickel
4785-26		Relay assembly	1926 to 1937	black/nickel
4786-26		Relay cover	1926 to 1937	black
4787-26	2762 W	Relay mounting & bracket screw (1/4-24)	1926 to 1950	nickel?
016	2582	Contact blade screw (2) (#6-32)	1926 to 1950	nickel?
020	1052	Terminal wire screw (2) (#8-32) round head	1926 to 1950	nickel

<b>SWITCHES AND PARTS</b>				
4505-29		Switch assembly complete	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins 1932 to 1934 C singles	-----
4506-29		Switch box fastening bolt (2)	First 1929	nickel
4506-29A		Switch box fastening bolt (2) (1/4-28)	Later 1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	flat nickel
0256	7035	Lock washer (2) (nipb)		park
4511-29		Switch bracket	1929, 1930 - 21" singles	park
032		Bracket to switch bolt	Later 1930 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	
0104		Nut for 032	Later 1930 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	
4514-29		Switch mounting plate	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	park
4517-29		Mounting plate insulator (2)	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	
4519-29		Switch cover	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	black
020	1052	Switch cover screw (sides) (2)	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	nickel
0252	7015	Switch cover screw lock washer (2) (nipb)	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	park
032	1206	Switch cover screw (front) (nipb)	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	park
0104	7620	Switch cover screw nut (nipb)	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	nickel
4521-26		Switch key (2)	1926 to 1936, except 1936 - 61" twins	flat nickel
4522-26		Ignition switch metal label (nipb)	1928 to 1936 - 45" twins & singles	nickel
4523-26		Light switch metal label (nipb)	1928 to 1936	nickel
4524-26		Switch label rivet (4) (nipb)	1928 to 1936	nickel
4526-26		Switch guide plate (2) (nipb)	1928 to 1936	
4544-28A		Tail lamp connection clamp	1928 to 1936 - 45" twins & singles	park
4545-28		Tail lamp connection bracket	1928 to 1936, except 1936 - 61" twins	-----
037	1210	Clamp screw	1928 to 1936, except 1936 - 61" twins	nickel
039	1222	Wire terminal screw	1928 to 1936, except 1936 - 61" twins	nickel
0105	7634	Nut for 037 & 039	1928 to 1936	nickel
0356	7118	Shakeproof washer (16) (nipb)	1928 to 1936	nickel
0354	7220	Shakeproof washer (12) (nipb)	1928 to 1936	nickel
4557-26		Switch handle (2)	1926 to 1936, except 1936 - 61" twins	nickel
4558-26		Switch handle set screw (2) (#2-62)	For 4557-26	nickel
4559-26		Switch contact & spring (4)	1926 to 1936, except 1936 - 61" twins	
4560-26		Grounding spring (1)	1926 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	
038	1218	Switch screw, long	1926 to 1936, except 1936 - 61" twins	
037	1210	Switch screw, short	1929 to 1931	
0105	7634	Switch screw nut ( ) (nipb)	1929 to 1931	
4561-26		Fiber washer	1926 to 1936, except 1936 - 61" twins	-----
4566-29		Switch lamp shield	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	nickel
05	2540	Shield screw (2)	For 4566-29	nickel

4567-29		Switch lamp bulb (D.C.)	1929 to 1931, 1932 to 1936 - 45" , 74" & 80" twins & C singles	-----
4568-29		Switch lamp lever	1929 to 1931, 1932 to 1936 - 45" , 74" & 80" twins & C singles	nickel
4570-29		Switch lamp socket	1929 to 1931, 1932 to 1936 - 45" , 74" & 80" twins & C singles	
4572-29		Switch lamp socket guide	1929 to 1931, 1932 to 1936 - 45" , 74" & 80" twins & C singles	
4574-29		Switch lamp connector & wires	1929 to 1931, 1932 to 1936 - 45" , 74" & 80" twins & C singles	-----
4580-29		Ammeter only	1929 to 1931, 1932 to 1936 twins & C singles	-----
4582-29		Ammeter stud nut (4)	1929 to 1931, 1932 to 1936 twins & C singles	nickel
0201	6182	Ammeter stud steel washer (3)	1929 to 1931, 1932 to 1936 twins & C singles	nickel
4601-29		Ignition switch stem, complete	1929 to 1931, 1932 to 1936 - 45" , 74" & 80" twins & C singles	
4602-26		Ignition switch cam	1926 to 1936, except 1936 - 61" twins	
4605-29		Light switch stem, complete	1926 to 1936, except 1936 - 61" twins	
4606-26		Lamp switch cam (fiber)	1926 to 1936, except 1936 - 61" twins	-----
4613-26		Switch stem spacer fiber	1926 to 1936, except 1936 - 61" twins	-----
4613-29		Ignition stem spacer	1929 to 1931, 1932 to 1936 - 45" , 74" & 80" twins & C singles	
4614-26		Switch stem end washer fiber	1926 to 1936, except 1936 - 61" twins	-----
4615-26		Switch stem clamp ring (2)	1926 to 1936, except 1936 - 61" twins	

<b>WIRING</b>					
1596-29	31976-30	Spark plug cable, long	1929 - 45" twins		cloth
1597-29	31970-30	Spark plug cable, short	1929 - 45" twins		cloth
1611-29		Timer ground wire (6-3/4" black)	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins		-----
1692-29		Positive brush wire (7-1/2" black)	1929 to 1931 - 45" twins & C singles, 1932 to 1934 singles		cloth
1741-29		Generator to relay wire (51" black)	1929 - 45" twins		-----
1744-29		Generator to relay wire bracket	1929 - 45" twins		
1520-24		Terminal	1924 to 1957		-----
1614-18	9913	Terminal & eyelet	1918 to 1947		-----
4701-29		Lighting cable (59-1/2" - 4 wires)	1929 to 1936, except 1936 - 61" twins		-----
4702-29		Headlight to switch wire	1929 to 1934		-----
4703-26		Horn & battery wire (15-1/2" red)	1925 to 1929 horn to switch, 1930 to 1936 - 45" twins,		-----
			battery to relay		
4704-18		Tail light wire & tubing	1918 to 1933, 1934 singles		-----
1735-29		Relay to ground wire (7" black)	1929 - 45" twins, 1930 to 1934 singles		-----
4706-29		Frame & switch box ground wire	1929 to 1936, except 1936 - 61" twins		-----
4711-29		Handlebar light switch wire	1929 to 1936, except 1936 - 61" twins		-----
4718-15		Copper tubing	all electrics		copper
4720-15		Small rubber tubing	all electrics		rubber
4724-15	9985	Small tubing clamp (rear guard)	1915 to 1930		park
4726-24		Wire clamp, large	1924 to 1930, 1931 to 1934 singles		park
4726-29		Timer to coil wire clamp	1929 to 1933 - 45" twins		park
4727-23	4727-23	Wire clamp, small	1923 to 1933 singles & 45" twins, 1934 singles		park
4728-25	9979	Wire clamp (1-1/4")	1925 & 1926, 1929 to 1939 twins		park
4729-25		3/8" tubing clamp	1925 to 1936		park
050	2756	Small tubing clamp bolt (nipb)	1915 to 1930		park
0108	7691	Small tubing clamp bolt nut (nipb)	1915 to 1930		park
0257	0257	Lock washer (nipb)	1915 to 1930		park
4730-26		Headlight and horn wire guard	1926 to 1930 singles, 1929 - 45" twins		park
		Complete wiring harness			-----
		Wire & wire loom			-----

<b>HANDLEBAR HORN &amp; LIGHT SWITCHES</b>					
4760-26	71800-26	Horn switch, complete	1926 to 1957	----	
4760-29	71840-29	Light switch, complete, less wires	1926 to 1957	----	
020	1052	Switch screw (4)	1926 to 1957		nickel
4762-26	71802-26	Horn switch button	1926 to 1957	----	
4764-26	71804-26	Horn switch button spring	1926 to 1957	----	
4764-29	71843-29	Light switch lever	1926 to 1957	----	
4766-26	71806-26	Horn switch wire insulation	1926 to 1957	----	
4766-29	71848-29	Light switch wire insulation	1926 to 1957	----	
4768-26	71811-26	Horn switch housing	1926 to 1957		nickel
4768-29	71845-29	Light switch housing	1926 to 1957		nickel
4770-29	71859-29	Light switch contact pin	1926 to 1957	----	
4771-29	71861-29	Light switch contact pin spring	1926 to 1957	----	
4776-26	71813-26	Horn switch contact plate	1926 to 1957	----	
4776-29	71851-29	Light switch contact block	1926 to 1957	----	
4777-26	71815-26	Horn switch spring stop washer	1926 to 1957	----	
4777-29	71856-29	Light switch retainer plate	1926 to 1957	----	
4778-26	70577-26	Switch wire rubber bushing	1926 to 1957	----	
<b><u>ELECTRIC HORN GROUP</u></b>					
4801-29A		Vibrator horn (Klaxon 11)			black
4806-29		Horn Housing	1929 to 1930		black
038	1218	Horn housing screw	1929 & 1930		
4809-29		Projector	1929 & 1930		black
053	2775	Projector collar screw (6)	1929 & 1930		park
0257	0257	Lock washer (6) (nipb)	1929 & 1930		park
0108	7691	Collar screw nut (6)	1929 & 1930		park
4810-29		Diaphragm screw	1929 & 1930		park
4811-29		Diaphragm screw nut	1929 & 1930		park
0208	6245	Adjusting screw steel washer, small	1929 & 1930		park
4814-29		Diaphragm	1929 & 1930		nickel
4824-29		Horn terminal screw (2) (#10-32)	1929 & 1930		nickel ?



<b>ELECTRIC HEADLAMP GROUP</b>				
4901-29A		Headlight & bracket complete	1929 - 45" twins & singles, 1930 - 21" singles	black
4905-29	67861-29	Body fastening bolt (7/16-20)	1929 to 1939	nickel
4906-29		Diffusing lens (Std.)	1929 & 1930	-----
4906-29A		Clear lens	1929 & 1930	-----
4910-29		Lens retainer spring (2)	1929 & 1930	
4912-29		Cork packing washer	1929 & 1930	cork
4914-29		Door only	1929 & 1930	nickel
4918-29		Door fastening screw (#12-24)	1929 & 1930	nickel
4919-29		Fastening screw lock ring	1929 & 1930	nickel
4922-29		Reflector	1929 & 1930	-----
4923-29		Reflector fastening screw (4) (#8-32)	1929 & 1930	
4925-29	68715-20	Bulb (double filament)	1929 & 1930	-----
4926-29		Bulb holder, complete (nipb)	1929 & 1930	-----
4932-29		Focus screw (#12-24)	1929 & 1930	nickel
4933-29		Focus spring	1929 & 1930	
4965-29		Lamp & horn bracket	1929 singles & 45" twins, 1930 - 21" singles	black
4965-29B		Headlight bracket	1929 - 45" twins & singles, 1930 - 21" singles	park
4971-29	4971-29	Headlight bracket washer, large (2)	1929 to 1936	park
0134	7839	Headlight fastening nut (2)	1929 to 1957 - 45" twins, 1929 to 1948 - 61", 74" & 80" twins	park
0265	7055	Headlight fastening nut lock washer (2) (nipb)		park
<b>TAIL LAMP GROUP</b>				
5051-15		Tail lamp complete	1915 to 1933	black
5054-20	68091-20	Red glass for tail lamp, bee-hive type	1920 to 1938	-----
5056-20	68105-20	Glass retainer (for 2-1/4" glass)	1920 to 1938	park
4927-15	68165-15	Lamp bulb	1915 to 1939	-----
5061-23	68155-23	Connector plug	1923 to 1938	rubber
5063-22	68157-22	Connector plug screw (2) (#4-36)	Later 1922 to 1938	
5065-25	68092-25	White glass (nipb)		-----
5067-25	68125-25	Paper gasket	1925 to 1938	paper
051	2762	Tail lamp screw (3)	1925 to 1946	park
0108	7691	Tail lamp screw nut (3)	1925 to 1938	park
0256	7035	Lock washer (3) (nipb)		park

<b>TRANSFERS</b>				
5917-08		Tank transfer, std. (red center) (2)	1908 to 1932	----
5919-08	62535-08	Frame head & tool box transfer		----
5920-08		Trade mark transfer (2) (battery box)		----
<b>JIFFY STAND PARTS</b>				
13200-26		Leg bracket	1926 to 1929 singles & 45" twins	park
13201-26		Leg	1926 to 1929 singles & 45" twins	park
13202-X		Spring	1926 to 1929	park
13203-X		Spring collar	1926 to 1929	park
13205-29		Leg stop	1929 singles & 45" twins	park
13206-X		Leg lock plate	1926 to 1929	park
13207-X		Leg bracket screw (2)	1925 to 1929, 1930 to 1934 singles	park
0131	7871	Leg nut	1926 to 1929	park
0229	6473	Leg washer	1926 to 1957	park
070		Leg stop bolt	1929 - 45" twins	
0120		Stop bolt nut	1929 - 45" twins	
13209-29A		3/4" spacer collar	1929 - 45" twins	

	<b>SCREWS</b>				
	05	2540	4-36 x 1/4" round head screw, lamp cover		
	010	993	6-32 x 1/4" fillister head screw		
	016	2582	6-32 x 3/8" round head screw		
	018	2626	8-32 x 3/8" round headscrew, handlebar sw.		
	020	1052	8-32 x 1/4" fillister head screw		
	021	1062	8-32 x 3/8" fillister head screw		
	023		8-32 x 1/2" flat head screw		
	024	1070	8-32 x 3/4" fillister head screw		
	030	1187	10-24 x 3/8" round or fillister head screw		
	032	1206	10-24 x 5/8" fillister head screw		
	035	1190	10-32 x 3/8" fillister head screw		
	036	1202	10-32 x 1/2" fillister head screw		
	037	1210	10-32 x 5/8" fillister head screw		
	038	1218	10-32 x 3/4" fillister head screw		
	039	1222	10-32 x 1" fillister head screw		
	041	2723	12-24 x 3/8" round head screw		
	042	2686	12-24 x 1/2" fillister head screw		
	044	1311	12-24 x 7/8" fillister head screw		
	045	2275	12-24 x 11/16" oval head screw		
	046	1818	12-24 x 11/16" flat head screw		
	047	2278	12-24 x 13/16" oval head screw (oiler cover)		
	048	2265	12-24 x 3/8" oval head screw		
	048A	2268	1/4-24 x 1/2" oval head screw, inspec. cvr.		
	050	2756	1/4-24 x 7/16" round head screw		
	051	2762	1/4-24 x 1/2" round head screw		
	053	2775	1/4-24 x 3/4" round head screw		
	057	2329	1/4-24 x 13/16" oval head screw (lifter body)		
	058	1956	5/16-18 x 13/16" oval head screw		
	061	3953	5/16-24 x 1/2" hex bolt		
	062				
	064	3974	5/16-24 x 3/4" hex bolt		
	066	4000	5/16-24 x 1" hex bolt		
	068	4042	5/16-24 x 1-13/16" hex bolt		
	072	4300	3/8-16 x 7/8" hex bolt		

	<b><u>NUTS</u></b>		<b><u>Hole dia.-TPI x Ht. x O.D.</u></b>		
	0103	7608	8-32 x 1/8" x 5/16" hex nut		
	0104	7620	10-24 x 5/16" hex nut		
	0105	7634	10-32 x 5/16" brass hex nuts		
	0106	7654	12-24 x 1/4" hex nut		
	0107	7688	1/4-20,NC,1/4" x 1/2" nut		
	0108	7691	1/4-24,NS, 5/32" x 7/16" nut		
	0109	7695	1/4-24, NS, 7/32" x 7/16" nut		
	0111	7748	5/16-18,NC, 17/64" x 1/2" nut		
	0112		5/16-24,NF, 17/64" x 7/16" nut		
	0113	0113	5/16-24,V, 3/16" x 1/2" nut		
	0117	7752	5/16-24,NF, 17/64" x 1/2" nut		
	0120	7782	3/8-16, 5/16" x 9/16" nut		
	0123	7804	3/8-24,NF, 1/2" x 9/16" nut		
	0127	7793	3/8-24,NF, 21/64" x 9/16" nut		
	0128	7809	3/8-24,NF,15/32 x 9/16" castle nut		
	0129	7789	3/8-24,NF, 1/4" x 9/16" nut		
	0131	7871	7/16-24, 1/4" x 3/4" nut		
	0133	7835	7/16-20,NF, 3/8" x 5/8" nut		
	0134	7839	7/16-20,NF, 1/2" x 5/8" nut		
	0137		1/2"-24 x 3/8" x 3/4" nut		
	0140	62371-15	15/32-24 special nut, oil pipe nipple		
	0142	7984	5/8-24,NEF, 7/32" x 7/8" nut		

<b>FLAT WASHERS (ID x OD x Thickness)</b>				
0201	6182	3/16" x 7/16" x 1/32"		
0202				
0205	6203	15/64" x 1/2" x 1/16"		
0207	6220	1/4" x 7/16" x .035", clevis pin		
0208	6245	1/4" x 5/8" x 1/16"		
0209	6227	1/4" x 1/2" x 1/16"		
0211	6280	9/32" x 15/32" x 1/32"		
0212	6310	5/16" x 9/16" x 1/32"		
0214	6320	5/16" x 11/16" x 1/16"		
0215	6327	5/16" x 15/16" x 1/16"		
0223	6408	3/8" x 1" x 1/16"		
0224	6395	3/8" x 13/16" x 1/16"		
0225	6400	3/8" x 13/16" x 7/64"		
0226	6379	3/8" x 5/8" x 3/64"		
0229	6473	29/64" x 51/64" x 1/16"		
0230	6490	7/16" x 15/16" x 1/8"		
0231	6520	29/64" x 1-1/8" x 3/32"		
0233	6568	1/2" x 27/32" x 1/8"		
<b>LOCK WASHERS (ID x Width x Thickness)</b>				
0251	7010	9/64" x 3/64" x 1/32" (#6) lock washer		
0252	7015	No. 8 x 5/32" x 1/32" (#8) lock washer		
0253	7025	3/16" x 3/32" x 3/64" (#10) lock washer		
0254	7021	3/16" x 1/16" x 3/64" lock washer		
0255	7030	7/32" x 1/16" x 3/64" (#12) lock washer		
0256	7035	1/4" x 1/8" x 1/16" lock washer		
0257	0257	1/4" x 3/32" x 3/64" lock washer		
0259	7040	5/16" x 1/8" x 1/16" lock washer		
0261	7045	3/8" x 1/8" x 1/16" lock washer		
0262	7050	3/8" x 7/32" x 1/16" lock washer		
0265	7055	7/16" x 1/8" x 1/16" lock washer		
0266		7/16" x 3/16" x 3/32" lock washer		
0268		1/2" x 3/16" x 1/16" lock washer		
0269	7065	9/16" x 1/8" x 3/32" lock washer		
0271	7070	5/8" x 3/16" x 1/16" lock washer		
0274	7075	3/4" x 1-5/16" x 3/32" lock washer		

<b><u>BALL BEARINGS</u></b>				
0280				
0282	8860	5/16" steel ball bearings		
0283	8866	3/8" steel ball bearings		
<b><u>COTTER PINS</u></b>				
0290	510	1/16" x 1/2" cotter pins		
0291	528	3/32" x 5/8" cotter pins		
0292	534	3/32" x 1" cotter pins		
0293	550	1/8" x 5/8" cotter pins		
0294	559	1/8" x 1-1/4" cotter pins		
<b><u>RIVETS</u></b>				
0308	8523	3/16" x 5/8", round head rivet		
0314	8515	3/16" x 3/8", truss head rivet		
0318	8580	1/4" x 9/16", round head rivet		
<b><u>TOOTHED (SHAKEPROOF) LOCK WASHERS</u></b>				
0354	7220	No. 10 x 3/16" (external teeth)		
0356	7118	No. 10 x 3/16" (internal teeth)		
0363	7230	No. 14 x 1/4" (external teeth)		
0365	7231	No. 14 x 1/4" (countersunk)		
0370	7233	No. 18 x 5/16" (countersunk)		
<b><u>GREASE FITTINGS</u></b>				
0340	9850	Alemite fitting		nickel