

1932 RL Parts List					
<u>Req'd.</u>	<u>Old No.</u>	<u>New No.</u>	<u>Description</u>	<u>Application</u>	<u>Finish</u>
	CYLINDER GROUP				
	2-32		Front cylinder only, taper bore	1932 to 1934 - 45" twins	gloss black
	3-32		Rear cylinder only, taper bore	1932 to 1934 - 45" twins	gloss black
	9-29		Front cylinder head (marked 6.8)	1929 to 1935 low compression 45" twins	gloss black
	10-29		Rear cylinder head (marked 6.8)	1929 to 1935 low compression 45" twins	gloss black
	9-29A		Front cylinder head (marked 5.5)	1929 to 1935 high compression 45" twins	gloss black
	10-29A		Rear cylinder head (marked 5.5)	1929 to 1935 high compression 45" twins	gloss black
	9-30B		Front cylinder head (marked 4.5)	1930 to 1935 DLD & RLD models	gloss black
	10-30B		Rear cylinder head (marked 4.5)	1930 to 1935 DLD & RLD models	gloss black
	11-29		Cylinder head gasket (2)	1929 to 1935 - 45" twins	copper
	14-26S	16801-26	Cylinder head stud, oversize, 7/16-24 x 3/8-16	1929 to 1950 - 45" twins	park
	14-29	16802-29	Cylinder head stud (1-15/16")	1929 to 1950 - 45" twins	park
	0120	7782	Cylinder head stud nut (6)	1926 to 1934 A & B singles, 1929 to 1952 - 45" twins	park
	15-26	16820-26	Cylinder head stud nut, long (8)	1926 to 1934 A & B singles, 1929 to 1950 - 45" twins	park
	0224	6395	Cylinder stud plain washer (14)	1926 to 1934 A & B singles, 1929 to 1950 - 45" twins	park
	29-29	16830-29	Cylinder base stud, 1-13/16" (8)	1929 to 1957 - 45" twins	park
	0123	7804	Cylinder base stud nut (8)	Later 1929 models, 1930 to 1934 singles, 1929 to 1957 - 45" twins	cad
	37-09A		Spark plug (No. 1)	1926 to 1934 singles, 1927 to 1939 twins	-----
	37-09B	32304-09	Spark plug (No. 2)	1926 to 1934 singles, 1927 to 1952 twins	-----
	37-09C	32302-09	Spark plug (No. 3)	1926 to 1934 singles, 1927 to 1952 twins	-----
	37-09D	320300-09	Spark plug (No. 4)	1926 to 1934 singles, 1927 to 1952 twins	-----
	37-09E	32306-09	Spark plug (No. 5)	1926 to 1934 singles, 1927 to 1952 twins	-----
	39-26	32370-26	Terminal nut for 37-09 (#8-32)	Harley-Davidson plugs	brass
	40-08	32342-08	Gasket for 37-09C	1926 to 1934 singles, 1927 to 1954 twins	-----
	46-29	16775-29	Cylinder base gasket (2)	1929 to 1957 - 45" twins	paper
	49-14		Cylinder primer (2) (1/8" NPT)	1915 to 1937	nickel

VALVE GROUP				
163-32	18070-32	Inlet valve	1932 to 1957 -45" twins	-----
165-32	18080-32	Exhaust valve	1932 to 1957 -45" twins	-----
166-32	18175-32	Valve guide (4)	1932 to 1940 -45" twins	
168-32	18201-32	Valve spring (4)	1932 to 1940 -45" twins	-----
170-30	18220-30	Valve spring collar (4)	First 1930 - 74" twins, 1932 to 1957 -45" twins	-----
172-30	18228-30	Valve key (8)	1930 to 1939 - 74" & 80" twins, 1932 to 1957 -45" twins	-----
173-31	18237-31	Upper valve cover	1931 to 1940 - 45" twins	cad
174-31	18255-31	Lower valve cover	1931 to 1957 - 45" twins	cad
175-29	18260-29	Valve cover packing (4)	1929 to 1957 - 45" twins	rubber
176-26	18630-26	Valve cover & guide gasket (4)	1926 to 1929 singles & 45" twins, 1930 to 1957	paper
200-29	18490-29	Tappet (4)	1926 to 1929 singles & 45" twins, 1930 to 1951	-----
208-29	18535-29	Tappet roller (4)	1929 - 45" twins, 1930 to 1957 - 45", 1930-1948 - 74" & 80" twins	-----
212-29	18540-29	Tappet roller bushing (4)	1929 - 45" twins, 1930 to 1952 all twins	-----
214-29	18545-29	Tappet roller pin (4)	1929 - 45" twins, 1930 to 1952 all twins	-----
221-15	221-15	Tappet screw (17/64-32)	Later 1929 - 45" twins, all 1930 to 1952 twins	-----
223-15	223-15	Tappet screw nut (17/64-32)	1915 to 1939	-----
234-30	18605-30	Tappet guide, front (2)	Later 1929 to 1957 - 45" twins, 1930 to 1938 - 74" & 80" twins	silver paint
235-30	18606-30	Tappet guide, rear (2)	Later 1929 to 1957 - 45" twins, 1930 to 1938 - 74" & 80" twins	silver paint
057	2329	Tappet guide screw (8)	Later 1929 - 45" twins, all 1930 to 1952 twins	cad
0365	7231	Shakeproof washer (8) (nipb)	Later 1929 - 45" twins, all 1930 to 1952 twins	park
237-30	18631-30	Tappet guide gasket (4)	Later 1929 to 1957 - 45" twins, 1930 to 1939 - 74" & 80" twins	paper
PISTONS & CONNECTING RODS				
253-29A	22251-29	Piston with rings and pin	Later 1929 to 1957 - 45" twins	-----
260-29	22445-29	Piston rings (6)	1929 to 1934 - 45" twins (except T-slot)	-----
262-32		Piston guide ring (4)	1932 to 1934 - 45" twins (except T-slot)	-----
263-32		Inner cushion ring (2)	1932 to 1934 - 45" twins (except T-slot)	-----
263-32A		Inner cushion ring, upper	1932 to 1934 - 45" twins (except T-slot)	-----
275-32		Piston pin (2)	1932 to 1957 - 45" twins	-----
280-32	22581-32	Piston pin lock ring (4)	1932 to 1957 all twins, later 1933 & 1934 - 21" singles	-----
283-32	24290-32	Front connecting rod, complete	1932 to 1935 - 45" twins	-----
284-32	24294-32	Rear connecting rod, complete	1932 to 1935 - 45" twins	-----
289-32		Set connecting rods, complete w/ rollers & crank pin	1932 to 1935 - 45" twins	-----
293-31		Piston pin bushing (2)	1931 to 1935 - 45" twins	-----
301-29	24365-29	Crank pin roller retainer (4)	1929 to 1957 - 45" twins	-----
305-29	9241	Crank pin roller, .560" long	1929 to 1957 - 45" twins	-----
2289-17	9301	Crank pin roller, .270" long	1929 to 1957 - 45" twins	-----
309-29	24370-29	Set of rollers and retainers	1929 to 1957 - 45" twins	-----

FLYWHEEL GROUP				
338-32	23916-32	Left flywheel only	1932 to 1957 -45" twins with aluminum pistons	-----
339-32		Right flywheel only	1932 to 1936 -45" twins with aluminum pistons	-----
338-32A		Left flywheel only	1932 to 1934 -45" twins with Dow metal pistons	
339-32A		Right flywheel only	1932 to 1934 -45" twins with Dow metal pistons	
348-29	23960-29	Crank pin	1929 to 1957 - 45" twins	-----
352-29	24000-29	Sprocket shaft	1929 to 1957 - 45" twins	-----
355-29		Gear shaft	1929 to 1936 - 45" twins	-----
357-26	24060-26	Flywheel thrust collar (.072",.083", .095", .109" - specify thickness)	1926 to 1934 singles, 1929 to 1957 - 45" twins	-----

361-12	23985-12	Shaft keys (2) for sprocket & gear shaft	1912 to 1957	-----
1650-18	23985-18	Crank pin key (1)	1929 - 45" twins, 1930 to 1957 all twins	-----
364-29	7974	Gear & sprocket shaft nut, 5/8"-18 thread (2)	1929 to 1957 - 45" twins	-----
364-12	364-12	Crank pin nut	1929 to 1936 - 45" twins	-----
368-12	23982-12	Shaft nut lock washer (2)	1912 to 1929, 1930 to 1934 singles, 1929 to 1957 - 45" twins	-----
368-29	24016-29	Lock washer for shaft nut 364-29 (2)	1929 to 1957 - 45" twins	-----
030	1187	Lock washer screw (4)	1912 to 1957	-----
372-21	23972-21	Flywheel steel washer (2)(.062")(staked)	1921 to 1935 twins & C singles, 1936 to 1957 - 45" twins	-----

CRANK CASE & FITTINGS					
402-32		Set of crank cases	1932 to 1936 - 45" twins	aluminum	
406-32		Left crank case	1932 to 1936 - 45" twins	aluminum	
410-32		Right crank case	1932 to 1936 - 45" twins	aluminum	
413-29		Right crank case bushing	1929 to 1936 - 45" twins	-----	
416-29		Left bearing bushing	1929 to 1936 - 45" twins	-----	
417-29	24720-29	Left roller bearing retainer (2)	1929 to 1957 - 45" twins	-----	
304-15	9321	Left bearing roller (24), .360" long	1917 to 1929 twins, 1930 to 1957 - 45" twins	-----	
419-29	24730-29	Sprocket shaft roller bearing, complete	1929 to 1957 - 45" twins	-----	
421-26		Chain lubricating bushing	1926 to 1934 singles, 1929 to 1936 - 45" twins	-----	
423-29		Left bearing bushing screw (3)	1929 to 1936 - 45", 74" & 80" twins, C singles twins	-----	
437-26	4379	Motor fastening bolt (4) (3/8-24)	1926 to 1934 singles & 45" twins, 1930 to 1957 - 45" twins	park	
0128	7809	Motor fastening bolt castle nut (4)	1919 to 1957	park	
0224	6395	Crank case bolt plain washer (4)	1926 to 1929 singles & 45" twins, 1930 to 1957	park	
0291	528	Castle nut cotter pin (4) (nipb)	1926 to 1929 singles & 45" twins, 1930 to 1957	park	
442-10	24811-10	Casing stud, 1-5/8" (2)	1911 to 1929, 1930 to 1934 singles, 1929 to 1957	dull nickel	
443-29		Crank case bolt, 5/16 x 2-5/8" (2)	1929 to 1931 - 45" twins	park	
444-29		Casing stud, 4" (1)	1929 to 1936 - 45" twins	dull nickel	
446-28		Casing stud, 4-7/16" (2)	1929 to 1936 - 45" twins	dull nickel	
451-09		Casing stud nut (10)	1911 to 1929, 1930 to 1934 singles, 1929 to 1936	cad	
477-30		Oil drain valve	1930 & 1931 - 74" twins, 1932 to 1936 - 45", 74" & 80" twins	cad?	
479-29		Drain valve head spring	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	park	
480-29		Drain valve plain washer	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	park	
481-29		Drain valve lock ring	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	-----	
483-29		Drain valve cork washer	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	cork	
485-29		Drain valve lever (#10-32)	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	cad	
0105	7634	Drain valve nut	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	cad	
0253	7025	Lock washer (nipb)	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	park	
487-29		Drain valve upper spring	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	black paint	
489-29		Packing washer, felt	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	felt	
490-29		Packing washer, steel	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	cad	
491-29		Drain valve lever catch	1929 to 1936 - 45" twins	park	
453-11	700	Timing hole plug	1932 to 1937 - 45" twins	cad	
CRANK CASE RELIEF PARTS					
543-32		Relief pipe	1932 to 1936 - 45" twins	tin plated	
551-32		Breather seal ring (brass)	1932 to 1936 - 45" twins		
552-32		Breather seal ring spring	1932 to 1936 - 45" twins		
041		Seal ring spring screw	1932 to 1936 - 45" twins		
553-32		Seal ring bushing	1932 to 1936 - 45" twins		

GEAR CASE COVERS				
581-32		Gear cover & oiler, complete	1932 & 1933 - 45" twins	-----
584-32		Gear cover only	1932 & 1933 - 45" twins	aluminum
598-32		Gear cover gasket	1932 to 1936 - 45" twins	paper
047	2278	Gear cover screw, 13/16" (15)	1929 to 1936 - 45" twins	cad
CAMS, TIMING GEARS & BUSHINGS				
604-32		Pinion gear	1932 to 1936 - 45" twins	-----
361-12	23985-12	Pinion gear key	1929 - 45" twins, 1930 to 1936 all twins	-----
0142	7984	Pinion nut	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	-----
610-32		Front inlet cam gear & shaft	1932 to 1936 - 45" twins	-----
611-32		Rear inlet cam gear & shaft	1932 to 1936 - 45" twins	-----
612-32		Front exhaust cam gear & shaft	1932 to 1936 - 45" twins	-----
613-32		Rear exhaust cam gear & shaft	1932 to 1936 - 45" twins	-----
619-32		Idling gear	1932 to 1936 - 45" twins	-----
632-32		Generator drive gear	1932 to 1936 - 45" twins	-----
632-32A	31073-32	Generator drive gear	1932 to 1936 Radio model	-----
634-32	327	Generator gear pin	1932 to 1957 twins	-----
636-30		Idling gear stud	1930 & 1931 - 74" twins, 1932 to 1939 - 45", 74" & 80" twins	-----
644-30	25794-30	Idling gear stud screw, 1-19/32"	1930 & 1931 - 74" twins, 1932 to 1939 - 45", 74" & 80" twins	-----
638-32		Oiler drive shaft	1932 & 1933 - 45" twins	-----
640-29		Timer shaft & cam with cork washer	1929 - 45" twins, 1930 to 1936 45", 74" & 80" twins	-----
641-29		Inlet cam gear shaft (2)	1929 to 1936 - 45" twins	-----
642-26	25546-26	Cam gear key	1926 to 1929 singles & 45" twins, all 1930 to 1936	-----
658-15		Small gear stud spring ring	1915 to 1931 - 61" & 74" Std. & L motors, 1926 to 1931 singles, 1932 to 1939	-----
660-29		Cam gear shaft bushing, left (4)	1929 to 1936 - 45" twins	brass
661-31	271	Cover bushing pin, 1/8"x1/4"	1931 to 1957	
662-26		Cam gear shaft bushing, right (2)	1926 to 1934 singles, 1929 to 1933 - 45" twins	brass
662-29		Timer shaft bushing, right	1929 - 45" twins, 1930 to 1936 45", 74" & 80" twins	brass
662-32		Oiler drive shaft bushing, right	1932 & 1933 - 45" twins	brass
663-26		Cam shaft fiber washer, 1/64" thick	1926 to 1929 singles & 45" twins, 1930 to 1936	fiber
664-26		Cam shaft fiber washer, 1/32" thick	1926 to 1929 singles & 45" twins, 1930 to 1936	fiber

MECHANICAL OILERS				
587-32		Oil pump assembly	1932 & 1933 - 45" twins	black paint
589-32		Oil pump gasket	1932 & 1933 - 45" twins	paper
591-32		Oiler mounting stud, 1-23/32" (3)	1932 & 1933 - 45" twins	cad?
591-32A		Oiler mounting stud, 2" (1)	1932 & 1933 - 45" twins	cad?
0108	7691	Oiler stud nut (4)	1932 & 1933 - 45" twins	park
0256		Oiler stud lock washer (4)	1932 & 1933 - 45" twins	park
668-22		Oiler plunger	Later 1922 to 1933, 1934 singles	steel
670-22		Oiler plunger spring	1929 - 45" twins, 1930 & 1931 all twins, 1932 & 1933, 1934 singles	park
672-29		Oiler adjusting screw (#10-32)	1922 to 1936 - 45", 74" & 80" twins - all singles	cad
674-22		Oiler adjusting washer, .0125"	Later 1922 to 1929 - 61", 1922 to 1936 - 45", 74" & 80" twins - all singles	cad
0202	6150	Oiler adjusting screw washer, .0625"	Later 1922 to 1933, 1934 singles, 1934 to 1936 twins	cad
682-22		Oiler chamber screw	Later 1922 to 1929, 1930 - 74" twins, 1931 to 1933 all models, 1934 singles	steel
699-28		Oiler main shaft disc	1928 to 1933, 1934 singles	steel
701-28		Oiler cam shaft	1928 to 1933, 1934 singles	steel
0108	7691	Cam shaft nut	1928 to 1933, 1934 singles	park
0256	7035	Cam shaft nut lock washer (nipb)	1928 to 1933, 1934 singles	park
703-28		Cam shaft spring washer	1928 to 1933, 1934 singles	-----
705-28		Adjusting plate	1928 to 1933, 1934 singles	cad
021	1062	Adjusting plate screw	1928 to 1933, 1934 singles	park
0253	7025	Lock Washer (2) (nipb)	1928 to 1933, 1934 singles	park
707-28		Adjusting plate gasket	1928 to 1933, 1934 singles	paper
708-28		Adjusting plate spacer	1928 to 1933, 1934 singles	cad ?
712-32		Cam shaft control lever	1932 & 1933 - 45" twins	cad
714-28		Oiler direction plate	1928 to 1934 singles, 1929 - 45" twins, 1930 to 1933 all twins	brass/paint
722-33		Oiler cover	1932 & 1933 - 45" twins	cad
045	2275	Oiler cover screw	1929 & 1930 - 45" twins, 1931 to 1933 all twins	cad
725-29		Oiler cover cap	1929 to 1933 - 45" twins	cad
735-29		Oil chamber cap screw (7/8-18)	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	steel
737-29		Oil chamber spring	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	park
739-29		Spring sleeve	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	-----
741-29		Cork packing washer	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	cork

MUFFLERS & EXHAUST PIPES					
1002-32	65210-32	Muffler and all fittings	1932 & 1933	black	
1006-32		Front exhaust pipe	1932 to 1934 - 45" twins	black	
1007-32	65490-32	Rear exhaust pipe	1932 to 1934 - 45" twins	black	
1032-29		Center clamp bolt	All 1929, 1930 to 1934 singles, 1929 to 1938 - 45" twins	park	
0127	7793	Clamp bolt nut	All 1929, 1930 to 1934 singles, 1929 to 1938 - 45" twins	park	
0261	7045	Lock washer (nipb)	All 1929, 1930 to 1934 singles, 1929 to 1938 - 45" twins	park	
1035-32		Muffler rear end cpt., less exhaust pipe	1932 & 1933	black	
1038-32		Rear end front bracket	1932 to 1934 - 45" twins	park	
066	4000	Bracket bolt	1929 to 1952 singles & 45" twins	park	
0117	7752	Bracket bolt nut	1929 to 1952 singles & 45" twins	park	
0259	7040	Lock washer (2) (nipb)	1929 to 1952 singles & 45" twins	park	
1039-32	2834	Front bracket bolt	1932 to 1952 - 45" twins	park	
0111	7748	Front bracket bolt nut	1932 to 1952 - 45" twins	park	
053	2775	Bracket clamp screw	1929 to 1931 singles & 45" twins, 1932 to 1934	park	
1044-31		Fishtail end for muffler	1931 to 1933 twins	black	
1061-32A	65510-32	Exhaust pipe clamp	1932 to 1957 - 45" twins	park	
3743-26	3974	Exhaust pipe clamp bolt	1932 to 1952 - 45" twins	park	
0117	7752	Exhaust pipe clamp bolt nut	1932 to 1957 - 45" twins, 1936 - 61" twins, 1937 to 1939	park	
1064-32A	65286-32	Rear hanger	1932 to 1952 - 45" twins	park	
064	3974	Rear hanger bolt (2)	1932 to 1952 - 45" twins	park	
0117	7752	Rear hanger bolt nut (2)	1932 to 1952 - 45" twins	park	

INLET PIPE & CARBURETORS					
1102-32		Inlet pipe complete	1932 to 1934 - R & RL	----	
1102-32A		Inlet pipe complete	1932 to 1935 - 45" model RLD	----	
1107-32		Inlet pipe only	1932 to 1934 - R & RL	park	
1107-32A		Inlet pipe only	1932 to 1935 - 45" model RLD	park	
1110-29		Carburetor support	1929 to 1935 - 45" twins	park	
0127	7793	Carburetor support nut	1929 - 45" twins, 1930 to 1957 all twins	park	
0261	7045	Support nut lock washer (nipb)	1929 - 45" twins, 1930 to 1957 all twins	park	
1112-32		Inlet nipple	1932 to 1957 - R & RL	cad	
1115-32		Inlet packing nut (2)	1932 to 1957 - 45" twins	cad	
1118-30A		Inlet packing bushing (2)	1930 & 1931 DLD, 1932 to 1939 - 45" twins	brass	
1121-21		Inlet pipe gasket (paper) for 1-1/4" carburetor	1930 TO 1939 RL, WL, DLD, RLD & WLD	paper	
1121-29		Inlet pipe gasket (paper) for 1" carburetor	1929 to 1939 - R & W 45" twins	paper	
1123-29		Inlet pipe screw, 1" carburetor (3) (1/4-24)	1929 to 1940 - R & W 45" twins, 1930 to 1933 - 74" truck motors	cad	
1123-30		Inlet pipe screw, 1-1/4" carburetor (3)	1930 to 1938 - 61", 74" & 80" twins, 1930 to 1940 DLD, RL, WL, RLD & WLD, 1939 WL, WLD, 61" twins	cad	
0256	7035	Inlet pipe screw lock washer (3) (nipb)	1929 to 1940 - R & W 45" twins	cad	
0259	7040	Inlet pipe screw lock washer, 1-1/4" carburetor (3)	1930 to 1938 - 61", 74" & 80" twins, 1930 to 1938 DLD, RL, WL, RLD & WLD, 1939 - WL, WLD, 61" twins	cad	
1133-30	27120-30	De Luxe Carburetor 1-1/8"	1930 to mid-1933 Std. & RL - 45" twins, 1930 to 1933 - 74" commercial motors	flat nickel	
1133-30A		De Luxe Carburetor 1-1/8", 7/8" venturi	1930 to mid-1933 - 45" twins, high compression	flat nickel	
1134-30A		De Luxe Carburetor 1-1/4" (1-1/16" venturi)	1930 to mid-1933 VL, DLD & RLD	flat nickel	

CARBURETOR PARTS, DELUXE & LINKERT				
1226-30		Carburetor body, use 1133-30	1930 to 1933 - 45" twins	flat nickel
1226-30A		Carburetor body (die cast), use 1134-30	Later 1930 to 1933, DLD & RLD	flat nickel
1231-30		Air intake shaft, Schebler	1930 to first 1933 - 45" twins	
1231-30A		Air intake shaft, Schebler	Later 1930 to first 1933 - 74" twins, DLD & RLD	
0103	7608		Later 1930 to first 1933 - 74" twins, DLD & RLD	
1232-24	27225-24	Air intake disc, Schebler & Linkert	1930 to 1939 all twins	
1233-30		Air intake lever, Schebler	Later 1930 to first 1933 - 74" twins, DLD & RLD	
1237-26		Air intake shaft spring, Schebler	1962 to 1934 singles, 1930 to 1933 - 45" twins	
1238-24		Throttle lever, Schebler & Linkert	1930 to 1933, DLD & RLD, later 1933 to 1935 - 45" twins	
1238-29		Throttle lever, Schebler	1929 to first 1933 - 45" twins	nickel
032	1206	Throttle lever lock screw, Schebler & Linkert	1924 to 1948	
024	1070	Throttle stop screw, Schebler & Linkert	1924 to 1948	
011	997	Throttle stop lock screw, Schebler & Linkert	1924 to 1954	
1242-26	27275-26	Throttle shaft, Schebler & Linkert	1926 to 1934 singles & 45" twins, 1930 to 1933 74" truck motors	
1243-24	27275-24	Throttle shaft, Schebler & Linkert, 1-1/4" carburetor	1924 to 1948 - 61", 74" & 80" twins, 1930 to 1952 high compression 45's	
1244-24	27280-24	Throttle disc., Schebler & Linkert, 1-1/4" carburetor	1930 to 1939 high compression 45's	
1245-24	27290-24	Throttle shaft bushing, Schebler & Linkert	1924 to 1937	
1247-26		Throttle disc, Schebler & Linkert	1926 to 1934 A & B singles & 45" twins	
1247-32	27291-32	Throttle shaft spring, Schebler & Linkert	1931 to 1933 twins	
010	993	Throttle disc screw, Schebler & Linkert	1924 to 1957	
0251	7010	Lock washer (2) (nipb)	1924 to 1957	
1250-30		Idle passage disc, Schebler	1930 to 1933, 1934 singles	
1251-24		Idle passage plug, Schebler (5/16-32)	1924 to 1933 twins	nickel
1254-27		High speed needle valve, (3-3/4"), Schebler & Linkert, 1-1/4" carburetors	1927 to 1939 - 74" & 80" twins, 1930 to 1939 high compression 45's	nickel
1254-30	27297-30	High speed needle valve, (3-9/16"), Schebler & Linkert 1" carburetors	1930 to 1957 - 45" twins, 1930 to 1933 - 74" truck motors	nickel
1257-28		Nozzle retainer spring, Schebler	1928 to 1933 twins	
1258-25		Main nozzle	1926 to 1934 singles, later 1925 to first 1932 - 61", & 74" twins, 1930 to first 1932 DLD & RLD	
1258-29		Main nozzle, Schebler	1929 to 1933 - 45" twins	
1258-32		Main nozzle, Schebler	Later 1932 to first 1933 - 74" twins & RLD	
1261-27		Low speed needle valve, Schebler & Linkert 1-1/4" carburetors	1930 to 1939 high compression 45's	nickel
1261-29		Low speed needle valve, Schebler	1929 to first 1933 - 45" twins	nickel
1262-27	27345-27	Spring collar, Schebler & Linkert	1927 to 1952 twins	
1263-24	27327-24	Drill plug, Schebler & Linkert (3) (#10-32)	1924 to 1957	
1264-27	27349-27	Needle valve spring, Schebler & Linkert	1927 to 1933 - 61" & 74" twins, 1930 to 1933, DLD & RLD, later 1933 to 1957 twins	

1152-11	27350-11	Needle valve adjusting screw, Schebler & Linkert	Later 1927 to 1933 - 61" & 74" twins, 1930 to 1933, DLD & RLD, later 1933 to 1957 twins	
1153-11	27351-11	Needle valve lock screw, Schebler & Linkert	Later 1927 to 1933 - 61" & 74" twins, 1930 to 1933, DLD & RLD	
1154-11	27349-11	Needle valve lock spring, Schebler & Linkert	Later 1927 to 1933 - 61" & 74" twins, 1930 to 1933, DLD & RLD	
1265-29		3/4" venturi, Schebler, 1" carburetors	1929 to first 1933 - 45" twins, 1930 to first 1933 - 74" truck motors	
1265-29A	27360-29	7/8" venturi, for 1" Schebler & Linkert	1929 to first 1933 high compression 45" twins, later 1933 to 1935 R & RL, 1936 low compression 45", later 1933 VC	
1265-30A	27362-30	1-1/16" venturi, for 1-1/4" Schebler & Linkert	1930 to 1933 VL, 1934 to 1939 - 74" & 80" twins, 1936 to 1939 - 61", all 1930 & later high compression 45" twins	
1267-24	27370-24	Bowl assembly, Linkert	1924 to 1939 - 74" twins, 1929 to 1957 - 45" twins	nickel ?
1268-29	27375-29	Bowl locknut, Schebler & Linkert (3/4-20)	1929 - 45" twins, 1930 to 1957 all twins	nickel/cad
1269-28	27376-28	Bowl locknut gasket, Schebler & Linkert	1928 to 1939 twins	
1204-21		Bowl cork washer, Schebler	1924 to 1929 twins, 1932 & 1933 twins	cork
1271-24		Float, Schebler	1924 to first 1933 twins	
1272-31		Float lever, Schebler	1931 to first 1933 - 45" twins, 1931 & first 1932 - 74" twins	
1196-11	27383-11	Float lever pin, Schebler & Linkert (1/4-28)	1924 to 1933 except later 1932 & 1933 - 74" twins, 1933 to 1957 twin Linkerts	
1197-16	27384-16	Float lever pin bearing screw, Schebler & Linkert (1/4-28)	1924 to 1933 except later 1932 & 1933 - 74" twins, 1933 to 1950 twin Linkerts	
1273-31		Float valve , Schebler	1931 to first 1933 twins	
1275-30		Bowl cover, Schebler	1930 to 1933 twins	
1276-30		Bowl cover gasket, Schebler	1930 to 1933 twins	cork?
1284-31		Float valve seat, Schebler	1931 to 1933 twins	
1383-24		Gasket inlet nipple washer, Schebler	1926 to 1934 singles, all 1930 to 1933	
1292-27		Needle valve lever, Schebler & Deluxe, for 1-1/4" carburetors	1930 to 1933, DLD & RLD, 1933 to 1939 Linkerts	
1292-30	27396-30	Needle valve lever, Schebler & Deluxe, for 1" carburetors	1930 to 1935 Std. & L 45" twins, 1936 to 1939 low compression 45"	nickel ?
1293-27	27397-27	Needle valve lever screw, Schebler & Deluxe,	1927 to 1933 - 61" & 74" twins, 1930 to 1933 DLD & RLD, 1933 to 1957 Linkerts	
1296-26	27405-26	Friction spring, Schebler & Linkert	1926 to 1957	
1297-26	27406-26	Friction ball, Schebler & Linkert (5/32" ball)	1926 to 1957	
<u>AIR INTAKE & CLEANER GROUP</u>				
1406-32		Air intake	1932 to 1934 - 45" twins	chrome
1409-29		Air intake screw (2)	Use for 1406-32	

GENERATOR & RELAY				
1501-30		Generator cpt. Less drive gear	1930 & 1931 - 74" twins, 1932 to 1948 - all twins	gloss black
4785-26		Relay assembly	1926 to 1937	black
4786-26		Relay cover	1926 to 1937	black
4787-26	2762 W	Relay mounting & bracket screw (2) (1/4-24)	1926 to 1957	cad
0108	7691	Relay mounting screw nut (2) (1/4-24)	(for 4787-26 screw)	cad
016	2582	Contact blade screw (2) (#6-32)	1926 to 1957	cad
018	2626	Terminal wire screw, (2) (#8-32)	1926 to 1941	cad
FRAME & FIELDS				
1504-32	30090-32	Frame	1932 to 1948 all twins	gloss black
1504-32A	30091-32	Frame	1932 to 1948 radio generator	gloss black
1505-32	30132-32	Right frame end	1932 to 1957 all twins	aluminum
1506-32	30012-32	Frame screw (2)	1932 to 1957 all twins	park
1506-32A	30013-32	Frame screw (2) 6-1/2"	1932 to 1957 radio generator	park
1507-32	30202-32	Shunt field coil	1932 to early 1952 all twins	-----
1508-32	30206-32	Regulating field coil	1932 to early 1952 all twins	-----
1507-32A	30203-32	Shunt field coil	1932 to 1957 radio generator	-----
1508-32A	30207-32	Regulating field coil	1932 to 1951 radio generator	-----
1663-32A	30228-32	Fiel coil terminal insulation (2)	1932 to 1957 all twins	-----
1511-30	30271-30	Pole piece (2)	1930 & 1931 - 74" twins & singles, all 1932 to early 1952	-----
1511-32	30276-32	Pole piece (2)	1932 to 1957 radio generator	-----
1512-18	30280-18	Pole piece screw (4)	1918 to 1957	park
1520-24	9900	Lead terminal (3)	1924 to 1957	-----
1523-32	2349	Generator fastening screw (2)	1932 to 1957 - 45"Twins	
1527-30	30143-30	Generator gasket	1930 & 1931 - 74" twins, 1932 to 1957 all twins	paper
1528-30	30025-30	Generator strap	1930 & 1931 - 74" twins, 1932 to 1957 - 45", 74" & 80" twins	
1529-30	30029-30	Generator strap washer	1930 & 1931 - 74" twins, 1932 to 1957 all twins	
0117	7752	Generator strap nut	1930 & 1931 - 74" twins, 1932 to 1957 all twins	
058	1956	Generator strap screw	1930 & 1931 - 74" twins, 1932 to 1957 all twins	
1531-15		Generator wrench	1915 to 1934	-----
TIMER BASE & RIGHT END PLATE, TO 1936				
1540-29		Timer base	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	cad

CIRCUIT BREAKER (TIMER) & WIRING					
1565-30		Circuit breaker (timer) assembly	1930 to 1936 - 45", 74" & 80" twins		
1566-30		Circuit breaker only	1930 to 1936 - 45", 74" & 80" twins		cad
035	1190	Circuit breaker mounting screw (2)	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins		cad
0254	7021	Spring washer (nipb)	1930 to 1936 - 45" twins		cad
1567-30		Circuit breaker cover	1930 to 1936 - 45", 74" & 80" twins		cad
1568-29	1568-29	Breaker cover retainer	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins		cad
1569-30	32661-30	Contact plate & point	1930 to 1948 all twins		
1570-30	32666-30	Contact plate spring washer	1930 to 1948 all twins		
018	2626	Contact plate screw (2)	1930 to 1948 all twins		cad
1573-30	32625-30	Breaker lever	1930 to 1948 all twins		
1574-30	32629-30	Breaker lever spring	1930 to 1948 all twins		
010	993	Earth wire screw (nipb)	1930 to 1950 all twins		
018	2626	Control wire securing screw (nipb)	1930 to 1950 all twins		
1596-30	31976-30	Spark plug cable, long	1930 to 1952 - 45", 74" & 80" twins		fabric
1597-30	31970-30	Spark plug cable, short	1930 to 1952 - 45", 74" & 80" twins		fabric
1599-27	31681-27	Cable packing seal (2)	1927 to 1957		rubber
1599-27A	31681-27	Cable packing nut (nipb) (2)	1927 to 1957		cad
0211	6280	Packing washer (nipb) (2)	1930 to 1952 - 45" twins		cad
1598-32		Radio spark cable & shield bushing	1932 to 1935		
1598-27		Spark plug terminal (hollow tube)	1927 to 1955		
1602-30	9976	Spark plug wire clamp	1930 to 1938 - 45" twins, 1939 to 1957 - 61", 74", 80" & Servi-Cars		park
1611-29		Timer ground wire (6-3/4" black)	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins		-----
1613-30		Circuit breaker to coil wire (26" black)	1930 to 1957		fabric
1614-18	9913	Low tension wire terminal	1918 to 1947		brass
0103	7608	Low tension stud nut, hexagon	1930 to 1950 all twins		cad
1616-30		Low tension stud nut, round (#8-32)	1930 to 1936 - 45", 74" & 80" twins		
1617-30		Low tension stud insulator	1930 to 1936 - 45", 74" & 80" twins		
1618-30	6106	Low tension stud fiber washer	1930 to 1957 all twins		fiber
1619-30		Low tension stud brass washer	1930 to 1946 all twins		brass
1627-29		Timer adjusting plate	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins		cad
1629-30	32726-30	Condenser	1930 to 1948 all twins		-----
020	1052	Condenser screw	1930 to 1948 all twins		cad
0253	7025	Spring washer (nipb)	1930 to 1948 all twins		cad

ARMATURE GROUP				
1636-32	30851-32	Armature & winding only	1932 to 1957 all twins	-----
1636-32A	30852-32	Armature & winding only	1932 to 1948 radio generator	-----
1639-18	30890-18	Armature spacing shim (0.018")	1918 to 1939 except 1929 to 1957 - 45" twins	stainless
1641-30		Oil retainer, outer	1930 & 1931 - 74" twins, 1932 & first 1933 twins	steel
1641-30A	31020-30	Oil retainer, inner	1930 & 1931 - 74" twins, 1932 & first 1933 twins	
037		Oil retainerscrew	1930 & 1931 - 74" twins, 1932 & first 1933 twins	
1642-30	31015-30	Bearing housing gasket	1930 & 1931 - 74" twins, 1932 to 1957 all twins	
1643-29		Armature steel washer, (.025",.033",.070",.072")	1929 & 1930 - 45" twins, later 1930 to 1941 all twins	park
1643-30	6551	Washer, small (0.072")	1930 & 1931 - 74" twins, 1932 to 1950 all twins	
1644-18	31009-18	Armature bearing complete, small	1918 to 1939	-----
1644-30	31009-30	Armature bearing complete, large	1930 to 1948	-----
1646-31	31035-31	Drive end oil deflector	Later 1931 - 74" twins, 1932 to 1957 all twins, except radio	steel
1646-32	31036-32	Drive end oil deflector	1932 to 1957 radio generator	steel
1647-29A	31017-29	Bearing plate spring ring, 1-5/16" dia.	1929 - 45" twins, 1930 to 1957 all twins	-----
1647-32		Drive end bearing housing	1932 to 1947 twins	
1647-31A	8314	Drive end bearing housing rivet (4)	Later 1931 - 74" twins, 1932 to 1957 all twins	
1647-31B	31040-31	Drive end spring	Later 1931 - 74" twins, 1932 to 1957 all twins, except radio	
1647-31C	31041-31	Drive end felt washer	Later 1931 - 74" twins, 1932 to 1948 all twins	
1647-31D	31045-31	Drive end spring ring	Later 1931 - 74" twins, 1932 to 1957 all twins	
1647-31E	31046-31	Drive end washer plate	Later 1931 - 74" twins, 1932 to 1957 all twins	
0129	7789	Armature shaft nut	1929 - 45" twins, 1930 to 1957 all twins	park
0261	7045	Armature shaft lock washer (nipb)	1929 - 45" twins, 1930 to 1957 all twins	park
1654-32	31078-32	Generator clutch	1932 to 1957 radio generator	
1655-32	31079-32	Generator clutch spring	1932 to 1957 radio generator	
1656-32	31081-32	Clutch spring collar	1932 to 1936, 1937 to 1939 - 61" radio generator	
634-32A	238	Spring collar or oil slinger pin (3/32" x 1/2")	1932 to 1957 radio	

BRUSH PLATE GROUP				
1661-32	30351-32	Main brush holder (2)	1932 to 1952 all twins	----
1662-32	30385-32	Third brush holder	1932 to 1957 all twins	steel
1663-32	30365-32	Positive brush holder insulation	1932 to 1952 all twins	bakelite
1663-32A	30228-32	Field coil terminal insulation (2)	1932 to 1919 all twins	
1664-32	30460-32	Positive terminal screw (2)	1932 to 1957 all twins	
0105	7634	Terminal screw nut (4)	1932 to 1957 all twins	
1665-32	30463-32	Terminal screw bushing (2)	1932 to 1957 all twins	
1666-32	6186	Terminal insulating washer (2)	1932 to 1957 all twins	
1667-32	30367-32	Negative brush holder screw nut	1932 to 1957 all twins	copper
036	1202	Brush plate screw (4)	1926 to 1957	cad
1669-32	30450-32	Large brush & spring (2)	1932 to early 1952 all twins	----
1671-26	30427-26	Small brush & spring	1926 to 1957 all models	----
1674-26	30430-26	Brush spring, small	1926 to 1957 all models	----
1674-32	30453-32	Large brush spring (2)	1926 to 1957 twins	
010	993	Brush wire screw (3)	1924 to 1952	cad
1696-32	30137-32	Commutator end cover	1932 to 1957 all twins	gloss black
1696-32A		Commutator end cover	1932 to first 1937 Radio generator	gloss black
1697-30	30138-30	Commutator end cover gasket	1930 to 1931 - 74" twins, 1932 to 1957 all twins	
037	1210	Commutator end cover screw (2)	1929 - 45" twins, 1930 to 1957 all twins	cad
SPARK COIL GROUP				
1722-30	31602-30	Spark coil & cables	1930 to 1936 - 74" & 80" twins, 1930 to 1939 - 45" twins	black
1722-32	31603-32	Spark coil & cables, cpt. (1939 style)	1932 to 1941 twins for Radio service	black
1723-29	31735-29	Spark coil U bolt (2) (1/4-20)	1929 to 1947 - 45" twins, 1930 to 1939 - 74" & 80" twins	park
1724-29	31731-29	U bolt strap (2)	1929 - 45" twins, 1930 to 1947 all twins	park
0256	7035	U bolt lock washer (4)	1929 to 1947 - 45" twins	park
1725-30		Coil mounting plate screw (4) (1/4-20)	1930 to 1932 twins, 1933 to 1947 - 45" twins	park
1728-30	31726-30	Coil mounting plate	1930 to 1932 twins, 1933 to 1947 - 45" twins	park
021	1062	Coil terminal screw (2)	1924 to 1947	cad

DUCKWORTH CHAINS & LINKS					
2001-29	40006-29	Front chain, 100 links	1929 to 1952 - 45" twins	-----	
2001-29A		Front chain, 102 links	1929 to 1935 - 45" twins, 1929 to 1934 singles	-----	
2002-29		Rear chain (55")	1929 to 1934 - 45" twins	-----	
2007-15	40053-15	Connecting link, 3/8" x 5/8" pitch chain	1915 to 1939 all twins, 1929 to 1934 singles	-----	
2007-29	40054-29	Connecting link, for double chain	1929 to 1934 singles, 1929 to 1956 - 45" twins	-----	
2008-12	40066-12	Connecting link spring (5/8" pitch chain)	1912 to 1957 except 1928 singles	-----	
2008-29	40067-29	Connecting link spring (3/8" pitch chain)	1929 to 1934 singles, 1929 to 1957 - 45" twins	-----	
2011-15	40077-15	Roller block, 3/8" x 5/8" pitch chain	1915 to 1939 twins, 1929 to 1934 singles	-----	
2011-29	40080-29	Roller block (front chain) 3/16"x3/8" pitch chain	1929 to 1934 singles, 1929 to 1957 - 45" twins	-----	
2013-15	40092-15	Offset link, 3/8"x5/8" pitch chain	1915 to 1939 twins, 1929 to 1934 singles	-----	
2015-15	40094-15	Double repair link, 3/8" x 5/8" pitch chain	1915 to 1939 twins, 1929 to 1934 singles	-----	
2015-29	40097-29	Double repair link (front chain)	1929 to 1934 singles, 1929 to 1957 - 45" twins	-----	

SPROCKETS				
2031-29		31 tooth motor sprocket, cushion	Fits 1929 to 1934 singles & 45" twins	park
2030-29		26 tooth motor sprocket, cushion	1929 to 1934 singles & 45" twins	park
2030-29C	40225-29	17 tooth motor sprocket (special)	1929 to 1934 singles & 45" twins	park
2030-29A	40234-29	26 tooth motor sprocket, plain	Fits 1929 to 1952 singles & 45" twins	park
2030-29B	40237-29	29 tooth motor sprocket, plain	Fits 1929 to 1952 singles & 45" twins	park
2031-29A		31 tooth motor sprocket, plain	Fits 1929 to 1941 singles & 45" twins	park
2029-29A	40240-29	32 tooth motor sprocket	Fits 1929 to 1952 singles & 45" twins	park
2031-29B	40241-29	33 tooth motor sprocket, plain	Fits 1929 to 1952 singles & 45" twins	park
2029-29	40232-29	24 tooth motor sprocket, plain	Fits 1929 to 1952 singles & 45" twins	park
361-12	23985-12	Motor sproket key	1912 to 1957	park
2050-12	7991	Motor sprocket nut, for plain sprocket	1912 to 1929 - 61" & 74" twins, Fits 1929 to 1934 singles, 1929 to 1957 - 45" twins	cad
2050-29		Motor sprocket nut, for cushion sprocket	1929 to 1934 singles & 45" twins	cad
2035-30		16 tooth sprocket (countershaft)	1929 singles & 45" twins	-----
2279-26		Countershaft sprocket key	1926 to 1934 singles, 1929 to 1957 - 45" twins	-----
2039-31		Clutch sprocket (with key ring)	1931 DLD, 1932 to 1934 - 45"twins & singles	-----
2046-29		28 tooth sproket, rear wheel	Fit 1929 to 1934 singles & 45" twins	cad
2042-29		30 tooth sproket, rear wheel	1929 to 1934 - 45" twins	cad
2047-29		32 tooth sproket, rear wheel	1929 to 1934 singles & 45" twins	cad
2048-29		36 tooth sproket, rear wheel	1929 to 1934 singles & 45" twins	cad
2045-29		38 tooth sproket, rear wheel	1929 to 1934 singles & 45" twins	cad
2043-29		40 tooth sproket, rear wheel	1929 to 1934 singles & 45" twins	cad
2049-29		45 tooth sproket, rear wheel	Fit 1929 to 1934 singles & 45" twins	cad
2052-29		Cushion sprocket hub	1929 to 1934 singles & 45" twins	park
2054-28		Cushion sprocket lock ring	1928 to 1934 singles & 45" twins	park
2055-28		Cushion sprocket washer	1928 to 1934 singles & 45" twins	park
2056-28		Rubber block (8)	1928 to 1934 singles & 45" twins	rubber

STARTER CRANK GROUP					
2076-26A	33051-26	Starter crank & pedal assembly	1926 to 1934 singles, 1929 to 1940 - 45" twins	-----	
2076-29	33058-29	Starter crank only	1929 to 1934 singles, 1929 to 1940 - 45" twins	park	
2078-26	4370	Starter crank clamp bolt	1926 to 1934 singles, 1929 to 1944 - 45" twins	park	
0129	7789	Crank bolt nut	1926 to 1934 singles, 1929 to 1939 - 45" twins	park	
0261	7045	Crank bolt lock washer (nipb)	1926 to 1934 singles, 1929 to 1939 - 45" twins	park	
2084-28	33084-28	Starter crank spring	Later 1928 to 1934 singles, 1929 to 1940 - 45" twins	black paint	
2086-26		Starter crank spring stud	1926 to 1934 singles, 1929 to 1934 - 45" twins	cad	
2091-16		Starter pedal, complete	1915 to 1928 - 61" & 74" twins, all later 1929 to 1957	-----	
2092-17	33182-17	Pedal rubber (2)	1917 to 1939 twins, 1930 to 1934 singles	rubber	
2093-17	33190-17	Pedal rubber rod (2) (#10-24)	1917 to 1957	cad	
0104	7620	Rod nut (4)	1917 to 1957	park	
0254	7021	Rod nut lock washer (4) (nipb)	1917 to 1957	park	
2095-16	33192-16	Pedal pin	1916 to 1939 - 61", 74" & 80" twins, later 1929 to 1934 singles,	park	
			late 1929 to 1957 - 45" twins		
2096-17	33201-17	Pedal pin cover	1917 to 1939 - 61", 74" & 80" twins, later 1929 to 1934 singles,	cad	
			late 1929 to 1939 - 45" twins		
0129	7789	Starter pedal pin nut	1916 to 1957	park	
0224	6395	Pedal pin plain washer	1917 to 1957	park	
0261	7045	Pedal pin lock washer (nipb)	1917 to 1957	park	
2098-17	33203-17	Pedal end plate (2)	1917 to 1957	cad	
2099-29	33210-29	Pedal end cover	1929 to 1957	cad	
2100-16	4336	Pedal pin bolt (3/8-24)	1916 to 1957	park	
0226	6379	Plain washer for 2100-16 (nipb)	1916 to 1939	park	
2101-31	33213-31	Pedal pin bushing	Later 1931 to 1957		
2102-30	33215-30	Pedal pin spring washer	Later 1930 to 1957	park	
STARTER PARTS					
2165-28		Starter clutch	Later 1928 to 1934 singles & 45" twins	-----	
2166-26	33390-26	Starter clutch spring	1926 to 1934 singles, 1929 to 1957 - 45" twins	park	
2168-26	33455-26	Countershaft spring	1926 to 1934 singles, 1929 to 1957 - 45" twins	park	
2172-26	33456-26	Tripper bolt (2)	1926 to 1934 singles, 1929 to 1957 - 45" twins	park	
2173-26	33458-26	Tripper bolt nut (2)	1926 to 1934 singles, 1929 to 1940 - 45" twins	cad	

THREE SPEEDS & CONTROLS				
2202-29		Three speed & clutch, complete	1929 to 1933 singles & 45" twins, 1934 singles	-----
2204-26		Shifter lever (later style)	1931 to 1936 - 45" twins	nickel
2205-31	33745-31	Gear shifter ball, black	1931 to 1957	
2206-16		Shifter lever stud	1916 to 1936, except 1936 - 61" twins	cad
0113	0113	Stud nut for 2206-16	1915 to 1936	park
0259	7040	Stud nut lock washer (nipb)	1915 to 1936	park
2208-30		Shifter guide	1930 o 1934 - 45" twins & singles	nickel
2210-16		Guide clamp nut (1-11/16"-24)	1916 to 1936, except 1936 - 61" twins	nickel
2212-32		Shifter rod	1932 to 1934 - 45" twins, 1935 - 45" twins	cad/park
0112		Shifter rod nut (5/16"-24) (2)	1915 to 1936 twins (except 1936 - 61") 1928 to 1934 singles	cad/park
4068-14		Shifter rod end	1925 to 1936 twins (except 1936 - 61") 1928 to 1934 singles	cad
2225-25		Shifter rod end bolt (short) (5/16-24)	1925 to 1936, all models except 1936 - 61" twins	cad
0113	0113	Bolt nut (5/16"-24)	1925 to 1936	park
0259	7040	Bolt lock washer (nipb)	1925 to 1936	park
0207	6220	Shifter rod washer (nipb)	1925 to 1936	park
0296	512	Shifter rod cotter pin (nipb)	1925 to 1936	park
2236-28		Shifter bell crank	1928 to 1934 singles, 1929 to 1937 - 45" twins	park
2237-29		Bell crank stud	1929 to 1934 singles, 1929 to 1935 - 45" twins	cad
0129	7789	Bell crank stud nut (3/8"-24)	1926 to 1934 singles, 1929 to 1935 - 45" twins	park
0226	6379	Bell crank stud plain washer	1928 to 1934 singles, 1929 to 1935 - 45" twins	park
0225		Bell crank stud plain washer (left side) (nipb)	1928 to 1934 singles, 1929 to 1935 - 45" twins	park
0290	510	Bell crank stud cotter pin (nipb)	1928 to 1934 singles, 1929 to 1935 - 45" twins	park
2238-28		Bell crank rod	1928 to 1934 singles & 45" twins	park
0207	6220	Bell crank rod washer (2)	1926 to 1934 singles, 1929 to 1935 - 45" twins	park
0290	510	Bell crank rod cotter pin (2) (nipb)	1926 to 1934 singles, 1929 to 1935 - 45" twins	park
2239-30		Gear lock plate	Later 1930 to first 1932 singles & 45" twins	cad
2239-32		Gear lock plate	Later 1932 to 1934 singles & 45" twins	cad
2242-31		Gear shifter shaft	1931 to 1934 - 45" twins & singles	cad
0129	7789	Shaft nut (3/8"-24)	1915 to 1936, except 1936 - 61" twins	park
0261	7045	Shaft nut lock washer (nipb)	1915 to 1936	park
2243-26		Gear shifter shaft bushing	1926 to 1934 singles & 45" twins	bronze
2244-26		Gear shifter shaft spring	1926 to 1934 singles & 45" twins	park
2245-26	34459-26	Gear shifter shaft leather washer	1926 to 1934 singles & 45" twins	leather
2251-26		Gear shifter plunger	1926 to 1934 singles, 1929 to 1937 - 45" twins	-----
2168-26	33455-26	Gear shifter plunger spring	1926 to 1934 singles, 1929 to 1937 - 45" twins	park
2255-26		Plunger bushing	1926 to 1934 singles & 45" twins	cad
2256-26		Plunger bushing nut	1926 to 1934 singles & 45" twins	cad
2258-29		Gear box only	1929 to 1934 singles & 45" twins	aluminum
2260-30		Gear box cover (starter side)	1930 to 1934 singles & 45" twins	aluminum
2262-26		Gear box cover gasket (starter side)	1926 to 1934 singles & 45" twins	paper

047	2278	Gear box cover screw (4)	1926 to 1934 singles, 1929 to 1957 - 45" twins	cad
2270-26		Inspection hole cover	1926 to 1934 singles & 45" twins	cad
2271-26		Inspection hole cover gasket	1926 to 1934 singles & 45" twins	paper
030	1187	Inspection hole cover screw (4)	1926 to 1934 singles & 45" twins	park
0254		Cover screw lock washer (4)(nipb)	1926 to 1934 singles & 45" twins	park
2272-26		Main shaft, 6-1/2"	1926 to 1934 singles & 45" twins	-----
364-12		Main shaft nut (right side)	1926 to 1934 singles, 1929 to 1940 - 45" twins	cad
2278-26	35216-26	Main shaft lock washer	1926 to 1934 singles, 1929 to 1941 - 45" twins	park
2279-26	35195-26	Main shaft & clutch gear key (2)	1926 to 1934 singles, 1929 to 1957 - 45" twins	-----
2289-25	9220	Roller bearing roller (for 2286-25 and 2291-26)	1925 to 1936	-----
2290-26		Outer roller race, right	1926 & 1927 singles, 1930 to 1934 singles & 45" twins	-----
2291-26		Roller retainer, right (2)	1926 to 1934 singles, 1929 to 1934 - 45" twins	-----
2292-26		Main shaft spacer, right	1926 to 1934 singles & 45" twins	-----
2516-26		Main shaft spacer, left (.090" to .140" thick)	1926 to 1934 singles, 1929 to 1940 - 45" twins	-----
2294-28		Felt oil retainer	1928 to 1934 singles & 45" twins	felt
2296-26		Low speed gear	1926 to first 1932 singles & 45" twins	-----
2296-32		Low speed gear	Later 1932 to 1934 singles & 45" twins	-----
2513-26		Clutch gear	1926 to 1933 singles & 45" twins	-----
2297-26		Low speed gear bushing	1926 to 1934 singles & 45" twins	-----
2298-26		Sliding gear	1926 to 1934 singles & 45" twins	-----
2300-28		Countershaft	Later 1928 to 1934 singles & 45" twins	-----
2303-28		Countershaft gear	Later 1928 to 1934 singles & 45" twins	-----
2304-28		Countershaft gear bushing (1)	Later 1928 to 1934 singles & 45" twins	-----
2312-26	36035-26	Countershaft bushing, left	1926 to 1934 singles, 1929 to 1937 - 45" twins	-----
2314-28		Countershaft bushing, right	Later 1928 to 1934 singles & 45" twins	-----
2318-26	34725-26	Gear box bottom stud (2)	1926 to 1934 singles, 1929 to 1957 - 45" twins	park
0133	7835	Gear box bottom stud nut (2)	1926 to 1934 singles, 1929 to 1940 - 45" twins	park
0230	6490	Bottom stud plain washer (2)	1926 to 1934 singles, 1929 to 1940 - 45" twins	park
0266		Bottom stud lock washer (2)(nipb)	1926 to 1934 singles, 1929 to 1939 - 45" twins	park
2326-26	2326-26	Oil filler plug	1926 to 1934 singles & 45" twins	cad
2328-27	34736-27	Gear box adjusting screw	Later 1927 to 1934 singles, 1929 to 1957 - 45" twins	park
2345-28		Sprocket cover	1928 to 1934 singles & 45" twins	cad?
2345-32A	2345-32A	Sprocket cover upper bushing	1932 to 1940 - 45" twins	
2345-32B	2345-32B	Sprocket cover lower bushing	1932 to 1940 - 45" twins	
2346-28		Sprocket cover stud (4)	1928 to 1934 singles & 45" twins	cad
2346-32		Sprocket cover pin	1932 to 1940 - 45" twins	
0117	7752	Sprocket cover bolt nut (8)	1926 to 1934 singles, 1929 to 1957 - 45" twins	park
0259	7045	Sprocket cover bolt lock washer (8) (nipb)	1926 to 1934 singles, 1929 to 1957 - 45" twins	park
2349-26	44255-26	Alemite extension (on sprocket cover)(5/16-32)	1926 to 1934 singles, 1929 to 1940 - 45" twins	cad
0340	9850	Alemite connection (1)	1924 to 1936, except 1936 - 61" twins	nickel

CLUTCH GROUP - 45" TWINS & SINGLES				
2409-29		Foot clutch lever	1929 to 1934 singles, 1929 to 1937 - 45" twins	cad
2413-29		Clutch rod stud	1929 to 1934 singles, 1929 to early 1934 - 45" twins	park
2414-29		Clutch rod stud spacer	1929 to 1934 singles, 1929 to 1936 - 45" twins	park
0129	7789	Clutch rod stud nut	1929 to 1934 singles, 1929 to 1937 - 45" twins	park
0261	7045	Stud nut lock washer (nipb)	1929 to 1934 singles, 1929 to 1937 - 45" twins	park
2415-26		Foot lever spring bolt	Later 1926 to 1934 singles, 1929 to 1937 - 45" twins	cad
2415-26A		Spring bolt lock washer	Later 1926 to 1934 singles, 1929 to 1937 - 45" twins	cad
2417-29		Brass friction disc (2)	1929 to 1934 singles, 1929 to 1937 - 45" twins	nickel
2417-29A		Steel friction disc (1)	1929 to 1934 singles, 1929 to 1937 - 45" twins	cad
2419-26		Foot clutch lever spring	1929 to 1934 singles, 1929 to 1935 - 45" twins	cad
2420-30		Friction stud washer (1-3/16")	1930 to 1937 - 45" twins, 1930 to 1934 C singles	cad
2421-29		Friction spring washer	1929 to 1934 singles, 1929 to 1937 - 45" twins	park
0340	9850	Alemite connection (1)	1929 to 1937 - 45" twins, all singles	nickel
2422-30B		Clutch lever rod end	1930 to 1934 singles, 1930 to 1937 - 45" twins	cad
2424-29		Clutch lever rod (14-1/4")	1929 to 1937 - 45" twins	cad
0105	7634	Rod nut	All 45" twins	cad
2427-31		Clutch release lever	1931 to 1934 - 45" twins & singles	cad
0212	6310	Clutch release lever washer	1926 to 1934 singles & 45" twins	park
2429-31		Clutch release lever stop	1931 to 1934 - 45" twins & singles	park
032		Clutch release lever stop screw	1931 to 1934 - 45" twins & singles	park
2436-26	2436-26	Clutch release lever finger	1926 to 1934 singles, 1929 to 1940 - 45" twins	park
2446-29		Clutch push rod (8-3/8")	1929 to 1934 singles & 45" twins	-----
2456-26		Inner ball race	1929 to 1937 - 45" twins, all singles	-----
2457-26		Outer ball race	1926 to 1934 singles, 1929 to 1937 - 45" twins	-----
2458-26		Ball retainer & balls	1929 to 1937 - 45" twins, all singles	-----
2463-26		Push rod adjusting screw	1926 to 1933 singles & 45" twins, 1934 singles	park
2464-26	8870	Push rod ball	1926 to 1934 singles, 1929 to 1940 - 45" twins	-----
2465-26		Push rod adjusting screw nut	1926 to 1934 singles, 1929 to 1940 - 45" twins	park
2279-26		Clutch key	1926 to 1934 singles, 1929 to 1940 - 45" twins	-----
2513-26		Clutch gear	1926 to 1933 singles & 45" twins, 1934 singles	-----
2514-26		Clutch gear bushing	1926 to 1934 singles & 45" twins	-----
2516-26		Main shaft spacer (.090" to .0140" thick)	1926 to 1934 singles, 1929 to 1940 - 45" twins	-----
2518-28		Outer roller race (in gear box)	1926 to 1934 singles, 1929 to 1934 - 45" twins	-----
3993-23		Roller retainer	1926 to 1934 singles, 1929 to 1934 - 45" twins	-----
2289-25	9220	Roller bearing roller (16)	1926 to 1934 singles & 45" twins	-----
2520-26		Roller bearing spacer	1926 to 1934 singles & 45" twins	-----
2521-26		Thrust retainer & balls	1926 to 1934 singles & 45" twins	-----
2522-26		Thrust race	1926 to 1933 singles & 45" twins, 1934 singles	-----
2524-28		Cork packing washer	1928 to 1934 singles & 45" twins	cork
2528-28		Inner clutch disc	1928 to 1934 singles & 45" twins	-----

2530-26		Inner clutch disc lock washer	1926 to 1934 singles & 45" twins	-----
2531-26		Inner clutch disc nut	1926 to 1934 singles & 45" twins	-----
2532-29		Clutch disc rivet (6)	Later 1929 to 1934 singles & 45" twins	-----
2533-26	2533-26	Fiber, clutch sprocket drive disc, key ring side, 6-9/32" dia. (1) rivets to sprocket	1926 to 1934 singles, 1929 to 1940 - 45" twins	fiber
2533-29	2533-29	Fiber, clutch sprocket drive disc, key ring side, 6-3/64" dia. (1) rivets to sprocket	Later 1929 to 1934 singles, 1929 to 1939 - 45" twins	fiber
2485-29	8233	Sproket friction disc & key ring rivet (6) 3/16" x 9/16" tubular	Later 1929 to 1939 - 45" twins, 1929 to 1934 singles	-----
2534-29	37862-29	Fiber outer clutch disc, notched edge (2)	Later 1929 to 1934 singles, 1929 to 1940 - 45" twins	fiber
2535-29		Steel friction disc (1)	Later 1929 to 1934 singles, later 1929 to first 1932 Std. 45" twins	-----
2535-31		Steel friction disc (2)	1931 DLD, later 1932 to 1939 - 45" twins, 1932 to 1934 C singles	-----
2039-31		Clutch sprocket (with key ring)	1931 DLD, 1932 to 1934 - 45" twins & C singles	
2537-31		Inner roller race	1931 to 1934 - 45" twins & singles	-----
2538-26		Roller retainer	1926 to 1934 singles & 45" twins	-----
2289-17	9301	Clutch sprocket roller (16)	1926 to 1934 singles & 45" twins	-----
2539-31		Clutch sprocket bearing washer (2)	1931 to 1934 - 45" twins & singles	-----
2540-26		Clutch bearing spring washer (2)	1926 to 1934 singles & 45" twins	-----
2540-31		Clutch bearing spring washer (2)	1931 to 1934 - 45" twins & singles	-----
2543-31	37743-31	Clutch key ring	1931 DLD, 1932 to 1940 - 45" twins & C singles	-----
2544-29A		Outer clutch disc	Later 1929 to first 1932 singles & Std. 45" twins	-----
2544-31		Outer clutch disc	1931 DLD, later 1932 & 1933 - 45" twins, 1932 to 1934 C singles	-----
2546-29		Clutch spring (14) (3/8" x 1-9/32")	1926 to 1933 singles & 45" twins, 1934 singles	park
2547-29A		Clutch spring collar (for 14 springs)	1926 to 1933 singles & 45" twins	-----
2548-29		Clutch spring adjusting nut	1926 to 1933 singles & 45" twins	-----
2550-26		Clutch thrust cap	1926 to 1933 singles & 45" twins, 1934 singles	park
2463-26		Push rod adjusting screw	1926 to 1933 singles & 45" twins, 1934 singles	park
041	2723	Clutch thrust cap screw (6)	1926 to 1934 singles, 1926 to 1933 - 45" twins	park
2551-29	6208	Push rod steel washer (1)	1929 to 1934 singles, 1929 to 1940 - 45" twins	-----
2552-29	2552-29	Push rod cork washer (2)	1929 to 1934 singles, 1929 to 1940 - 45" twins	cork
2554-29		Thrust cap gasket	Later 1929 to 1933 singles & 45" twins, 1934 singles	paper

FRONT FORK GROUP				
2602-30		Set of forks, complete (black)	1930 to 1934 singles, 1930 to 1939 - 45" twins	paint
2605-30		Rigid fork (black)	1930 to 1934 singles, 1930 to 1939 - 45" twins	paint
2607-30		Spring fork (black)	1930 to 1934 singles, 1930 to 1939 - 45" twins	paint
2618-30		Upper fork spring (5-19/32")	1930 to 1934 singles, 1930 to 1939 - 45" twins	park
2620-30		Cushion spring (5-7/8")	1930 to 1934 singles, 1930 to 1936 - 45" twins	park
2622-30	46057-30	Cushion bumper spring (3-1/8")	1930 to 1934 singles, 1930 to 1941 - 45" twins	park
2623-23		Flat check spring	1926 to 1929 singles & 45" twins, 1930 to 1936 - 45", 74" & 80", 1937 - 45" twins	park
2631-31A		Spring rod	1931 to 1939 - 45" twins, 1930 to 1934 C singles	park
2632-31	45643-31	Spring rod bushing	1931 to 1939 twins, 1930 to 1934 C singles	cad
2633-30A	45645-30	Spring rod nut, lower end (2) (3/8-24)	1930 to 1939 twins, 1930 to 1934 singles	steel
2634-30	45647-30	Spring rod nut, upper end (2) (1/2-18)	1930 to 1935 twins, 1930 to 1934 C singles	cad
2634-30A	7905	Spring rod lock nut, upper end (2) (1/2-18)	1930 to 1935 twins, 1930 to 1934 C singles	park
2636-30A	45661-30	Rocker plate (2)	1930 to 1939 - 45" twins, 1930 to 1934 C singles	park
2640-30A	45674-30	Left front rocker plate stud (7/16-20)	1930 to 1939 - 45" twins, 1930 to 1934 C singles	cad
2640-30B	45675-30	Right front rocker plate stud (7/16-20)	1930 to 1939 - 45" twins, 1930 to 1934 C singles	cad
2640-30C	45676-30	Rear rocker plate stud (2) (no front stand)	1930 to 1939 - 45" twins, 1930 to 1934 C singles	cad
2640-30D	45677-30	Rear rocker plate stud (2) (with front stand)	1930 to 1939 - 45" twins, 1930 to 1934 C singles	cad
2642-30	45680-30	Rocker plate stud nut lock tab (2)	1930, 1931 to 1936 - 45" twins, 1930 to 1934 C singles	park
0128	7809	Rocker plate stud nut, castellated	1931 to 1952 twins, 1931 to 1934 singles (with front stand)	park
2641-30	7859	Rocker plate stud nut, large (2) (7/16"-20)	1930, 1931 to 1952 - 45" twins, 1931 to 1934 C singles	park
0127	7793	Rocker plate stud nut (3/8")	1931 to 1952 - 45" twins, 1931 to 1934 C singles	park
0265	7055	Rocker plate stud nut lock washer (nipb)	1929 to 1939 - 45" twins	park
2644-30	7863	Rear stud spacer nut (2) (7/16"-20)	1930 to 1939 - 45" twins, 1930 to 1934 C singles	park
0265	7055	Spacer nut lock washer (nipb)	1930 to 1939 - 45" twins	park
2645-30A	45668-30	Rocker plate bushing (4)	1930 to 1939 - 45" twins, 1930 to 1934 C singles	----
0340	9850	Alemite fitting (4)	1924 to 1937	nickel
0231	6520	Rocker plate stud washer (4)	1930 to 1939 - 45" twins, 1930 to 1934 C singles	park
2651-30		Fork stem bushing	1930 to 1939 - 45" twins, 1930 to 1934 singles	
2653-31		Triple clamp	1931 to 1936 - 45", 74" & 80" twins, 1931 to 1934 C singles	
2655-32		Triple clamp bolt & switch box support	1932 to 1936 - 45", 74" & 80" twins, 1932 to 1934 C singles	
0117	7752	Triple clamp stud nut (5/16")	1929 & 1930 singles & 45" twins, 1931 to 1936 - 45", 74" & 80" twins, 1931 to 1934 singles	

HEAD FITTINGS				
2752-30	48310-30	Head cup, upper & lower	1930 to 1957 - 45" twins, 1930 to 1934 C singles	cad
2754-30		Upper head cone	1930 to 1939 - 45" twins, 1930 to 1934 C singles	cad
2756-30		Lower head cone	1930 to 1938 - 45" twins, 1930 to 1934 C singles	cad
2757-26		Head cone washer	1926 to 1934 singles, all 45" twins	park
2758-30		Head cone spring washer	1930 to 1938 - 45" twins, 1930 to 1934 C singles	park
2759-30		Head cone lock nut	1930 to 1938 - 45" twins, 1930 to 1934 C singles	cad
0282	8860	Head cup ball (30) (5/16")	1930 to 1957 twins, 1930 to 1934 C singles	-----
2763-30	48150-30	Steering head lock	1930 to 1936 - 45", 74" & 80" twins, 1930 to 1934 C singles	-----
2764-30	48155-30	Head lock key (specify letter & number)	1930 to 1936 - 45", 74" & 80" twins, 1930 to 1934 C singles	-----
2765-30A	48152-30	Lock plunger (5/16" shoulder) later 1930	Later 1930 to 1936 - 45", 74" & 80" twins, 1930 to 1934 C singles	-----
2766-30	48153-30	Plunger spring	1930 to 1936 - 45", 74" & 80" twins, 1930 to 1934 C singles	-----
STEERING DAMPER				
2777-30		Steering damper assembly complete	1930 to 1936 - 45" twins, 1930 to 1934 C singles	-----
2778-30		Steering damper lever	1930 to 1936 - 45", 74" & 80" twins, 1930 to 1934 C singles	chrome
2780-30		Steering damper rod	1930 to 1936 - 45" twins, 1930 to 1934 C singles	cad
2782-30		Steering damper screw	1930 to 1936 - 45" twins, 1930 to 1934 C singles	cad
2783-30	46779-30	Steering damper plain washer	1930 to 1957 twins, 1930 to 1934 C singles	cad
2784-30	46775-30	Adjusting washer	1930 to 1957 all twins, 1930 to 1934 C singles	cad
2785-30	46746-30	Adjusting nut	1930 to 1957 all twins, 1930 to 1934 C singles	cad
0129	7789	Rod nut	1930 to 1957 all twins, 1930 to 1934 C singles	cad
2787-30	46777-30	Release spring	1930 to 1952 all twins, 1930 to 1934 C singles	cad
2788-30	6373	Release spring washer	1930 to 1938 all twins, 1930 to 1934 C singles	cad
2789-30		Steering damper rod pin	1930 to 1938 all twins, 1930 to 1934 C singles	cad
2790-30	46727-30	Fiber friction washer (2)	1930 to 1952 all twins, 1930 to 1934 C singles	-----
2791-30	46717-30	Steel disc	1930 to 1952 all twins, 1930 to 1934 C singles	-----
2792-30A		Frame head bracket	1930 to 1936 - 45" twins, 1930 to 1934 C singles	cad
0340	9850	Alemite fitting ()		nickel

FRAME & FITTINGS				
2801-32A		Frame (black)	1932 to 1934 - 45" twins	paint
2806-32		Cylinder bracket	1932 to 1950 - 45" twins	park
2807-30		Cylinder bracket bolt	1930 to 1936 - 61", 74" & 80" twins, 1932 to 1950 - 45" twins	park
0127	7793	Cylinder bracket bolt washer 0.025"	1930 & 1931 - 74" & 80" twins, 1932 to 1950 all twins	park
2641-30		Cylinder bracket bolt nut	1930 to 1936 - 61", 74" & 80" twins, 1932 to 1938 - 45" twins	park
2818-26	53404-26	Luggage carrier (specify color)	1926 to 1934 singles, 1929 to 1941 - 45" twins	paint
2819-26		Set of parts to attach luggage carrier	1926 to 1934 singles, 1929 to 1941 - 45" twins	park
050	2756	Luggage carrier clamp screw (3)	1914 to 1941	park
0108	7691	Clamp screw nut (3)	1914 to 1941	park
0209	6227	Clamp screw washer (3)	1926 to 1934 singles, 1929 to 1941 - 45" twins	park
2820-26	53433-26	Luggage carrier stud	1926 to 1934 singles, 1929 to 1941 - 45" twins	park
0129	7789	Luggage carrier stud nut (3/8")	1926 to 1934 singles, 1929 to 1941 - 45" twins	park
0131	7871	Luggage carrier stud nut (7/16")	1926 to 1934 singles, 1929 to 1941 - 45" twins	park
2823-26	4304	Rear mudguard brace bolt (2)	1926 to 1934 singles, 1929 to 1941 - 45" twins	park
0129	7789	Brace bolt nut (2)	1926 to 1934 singles, 1929 to 1939 - 45" twins	park
0224	6395	Brace bolt flat washer (2)	1926 to 1934 singles, 1929 to 1941 - 45" twins	park
0261	7045	Brace bolt lock washer (2)	1926 to 1934 singles, 1929 to 1941 - 45" twins	park
2827-30	41575-30	Rear axle adjusting screw (2)	1926 to 1934 C singles, 1929 to 1939 - 45" twins	park
0117	7752	Adjusting screw nut (2)	1930 to 1939 - 45" twins, 1930 to 1934 singles	park
0340	9850	Alemite fitting (frame tube for seat post)	1924 to 1937	nickel
0340	9850	Alemite fitting (bottom of frame for rear brake cross-over)	1924 to 1937	nickel

FOOTBOARD & FRONT STAND GROUP				
2928-32		Front footboard support rod	1932 to 1937 - 45" twins	park
2929-32		Rear footboard support rod	1932 to 1937 - 45" twins	park
2932-14	8038	Footboard support rod nut, large (front only)	1930 to 1934 C singles, 1930 to 1957 - 45" twins front only	park
2932-32	50516-32	Support rod nut, rear	1932 to 1957 - 45" twins	
2934-32		Right footboard sidebar	1932 to 1934 - 45" twins	park
2936-32		Left footboard sidebar	1932 & 1937 - 45" twins	park
0225	6400	Sidebar clamp washers (4) (nipb)	1926 to 1934 singles, 1929 to 1952 - 45" twins	park
0129	7789	Sidebar clamp nut (4)	1926 to 1934 singles, 1929 to 1957 - 45" twins	park
2938-14	2938-14	Footboard complete (2)	1914 to 1939	park
2940-14	2940-14	Footboard pad (2)	1914 to 1939	rubber
2941-14	50616-14	Footboard pad rivet (28)	1918 to 1939	park
2944-14		Footboard hinge (4)	1914 to 1939	park
2945-14	50628-14	Footboard hinge rivet (8)	1914 to 1939	park
2949-28		Footboard stud, 2-25/32"	1929 to 1931 - 45" twins, 1930 to 1934 singles	park
2951-24	50650-24	Footboard stud, 2-15/32" (2)(left side)	1924 to 1929 twins, 1929 to 1933 singles, 1930 to 1957 - 45" twins	park
0129	7789	Footboard stud nut (4)	1914 to 1957	park
0261	7045	Footboard stud lock washer (4) (nipb)	1914 to 1952	park
2954-14	50635-14	Footboard hinge bolt (4) (1/4-24)	1914 to 1957	park
0108	7691	Footboard hinge bolt nut (4)	1914 to 1957	park
0256	7035	Lock washer (4) (nipb)	1914 to 1957	park
2956-32		Footbrake lever	1932 to 1934 - 45" twins	cad
0340	9850	Alemite connection (1) (footbrake lever)	1924 to 1937	nickle
2960-30		Brake lever stud	1930 & 1931 - 74" twins, 1932 to 1938 - 45" twins, 1932 to 1936 - 74" & 80" twins	park
0129	7789	Brake lever stud nut	1926 to 1936, 1937 to 1957 - 45" twins	park
0261	7045	Stud nut lock washer (nipb)	1926 to 1936, 1937 to 1957 - 45" twins	park
2964-26		Brake lever spring	1926 to 1934 singles, 1930 to 1939 - 61", 74" & 80" twins, 1932 & 1934 - 45" twins	black
3001-30A		Front stand with fittings	1930 to 1933 C singles & twins	paint
3006-30		Front stand catch	1930 to 1933 C singles & twins	park
044	1311	Front stand catch bolt (2)	1925 to 1941	paint
0106	7654	Front stand catch bolt nut (2)	1925 to 1950	park
3011-30	49343-30	Front stand collar	1930 to 1934 C singles, 1930 to 1952 twins	park
0128	7809	Front stand castellated nut (2)	1925 to 1939 - 61", 74" & 80" twins, 1930 to 1934 C singles, 1930 to 1952 - 45" twins	park
3061-24	49345-24	Front stand spring	1925 to 1929 - 61" & 74" twins, 1930 to 1952 twins, 1930 to 1934 C singles	park

REAR STAND GROUP				
3051-30A		Rear stand	1930 to 1935 - 45" twins, 1930 C singles, 1931 to 1934 all singles	paint
3060-26		Stand shoulder bolt (2) (3/8-24)	1926 to 1929 singles & 45" twins, 1930 to 1936	park
3060-26A		Shoulder bolt washer (2) (nipb)	1926 to 1929 singles & 45" twins, 1930 to 1936	park
3061-24	49345-24	Rear stand spring (2)	1924 to 1935	park
0129	7789	Stand shoulder bolt nut (2)	1926 to 1929 singles & 45" twins, 1930 to 1957	park
0261	7045	Shoulder nut lock washer (2) (nipb)	1926 to 1929 singles & 45" twins, 1930 to 1938	park
3067-29		Stand catch	1929 to 1933 C singles & 45" twins, 1934 C singles	park
051	2762	Stand catch bolt (2)	1925 to 1952	park
0108	7691	Stand catch bolt nut (2)	1925 to 1952	park
0256	7035	Lock washer (2) (nipb)	1925 to 1952	park
SEAT POST GROUP				
3101-26	47066-26	Seat bar bracket	1926 to 1934 singles, 1929 to 1939 - 45" twins	black
3103-29	51911-29	Seat bar plate	1930 to 1939 twins	black
0318	8580	Seat bar rivet (3)	1929 to 1941 twins	black
3105-30	51900-30	Seat bar	1929 - 45" twins & C singles	black
068	4042	Seat bar bolt, front	1926 to 1934 singles, 1929 to 1957 - 45" twins	park
0117	7752	Seat bar bolt nut	1926 to 1934 singles, 1929 to 1936 - 45" twins, 1936 - 61", all 1937 to 1939	park
0259	7040	Bolt nut lock washer (nipb)	1926 to 1934 singles, 1929 to 1936 - 45" twins	park
3111-29	51918-29	Seat bar clevis pin	1929 to 1957 twins and all C singles	park
3112-29	51920-29	Clevis pin spring	1929 to 1931 twins & C singles, 1932 to 1957	park
3113-29	47581-29	Seat post bushing	1929 to 1957 singles & 45" twins, 1929 to 1936 - 74" & 80" twins	bronze
3115-29	51625-29	Seat plunger	1929 to 1957 singles & 45" twins, 1929 to 1936 - 74" & 80" twins	cad
3117-29	51640-29	Plunger link	1929 to 1957	cad
3118-29	51642-29	Plunger link rivet	1929 to 1957	cad
3119-13	51644-13	Plunger link bushing	1929 to 1957	steel
3121-30	51600-30	Seat plunger assembly, std. (150-230 lbs.)	1930 to 1957 - 45" twins, 1930 to 1934 - 74" & 80" twins - C single	-----
3122-30	51602-30	Seat plunger assembly 130 lbs. or less	1930 to 1957 - 45" twins, 1930 to 1934 - 74" & 80" twins - C single	-----
3123-30	51601-30	Seat plunger assembly, std. (130-150 lbs.)	1930 to 1957 - 45" twins, 1930 to 1934 - 74" & 80" twins - C single	-----
3124-30	51603-30	Seat plunger assembly, over 230 lbs.	1930 to 1957 - 45" twins, 1930 to 1934 - 74" & 80" twins - C single	-----
3128-29	51770-29	Set of lower springs	Later 1929 to 1957 - 45" twins, 1929 to 1936 - 74" & 80" twins & sin	-----
3128-31	51774-31	Cushion spring flat wire (2) 5-1/8"	1931 to 1957	
3129-31	51775-31	Cushion spring (1) 2-13/16"	1931 to 1957	
3129-31A	51773-31	Cushion spring for riders over 230 lbs.	1931 to 1957	
3133-30	51777-30	Seat post recoil spring (1")	Later 1930 to 1957	-----
186-10	51780-30	Seat post auxiliary spring (2-3/4")	1925 to 1957	-----
3135-30	51778-30	Seat post auxiliary spring (3")	1930 to 1934 singles, 1930 to 1939	-----
3137-30	51660-30	Seat post rod	1930 to 1957 - 45" twins, 1930 to 1936 - 74" & 80" twins & C singles	cad
3138-29A		Cushion spring guide collar (1-3/8" long) (2)	Later 1929 & 1930 to 1957 - for 230 lbs. & over	

3138-31	51791-31	Guide collar (2)	1931 to 1957	
3141-29	51633-29	Plunger lock nut (1-5/16") (3/8-24)	Later 1929 to 1957 - 45" twins, 1929 to 1936 - 74" & 80" twins & singles	park
3143-25	51672-25	Seat post rod nut (3/8-24)	1925 to 1957	park
3144-25	51674-25	Rod lock nut (3/8-24)	1925 to 1957	park
0261	7045	Lock nut spring washer (nipb)	1925 to 1957	park
3147-29A	51795-29	Spring adjusting nut (13/16" O.D.) (3/8-24)	Later 1929 to 1957 - 45" twins, 1929 to 1936 - 74" & 80" twins & singles	park
0129	7789	Adjusting nut lock nut (2?)	1925 to 1957	park
SADDLE GROUP				
3181-25	52004-25	Saddle top	1925 to 1933 twins & C singles	tan leather
3182-25	52090-25	Pommel	1925 to 1933 twins & C singles	black
0314	8515	Pommel rivets (doz.)	1925 to 1933 twins & C singles	black
3187-29		Pommel bolt, Mesinger (3/8-20)	1918 to 1933 twins & C singles	park
225	6395	Pommel bolt plain washer	1925 to 1933 twins & C singles	park
0261	7045	Pommel bolt lock washer (nipb)	1925 to 1957 twins, 1930 to 1934 C singles	park
0233		Nose clip bolt washer	1925 to 1957 twins, 1930 to 1934 C singles	park
3195-18		Pommel bolt nut	1918 to 1933 twins	park
3205-25		Rear bracket bolt (4) (5/16-24)	1925 to 1933 twins & C singles	nickel
3207-18		Rear bracket bolt nut (4) (5/16-20)	1918 to 1933	nickel
0214	6320	Rear bracket bolt flat washer (4) (nipb)	1918 to 1933	park
0259	7040	Rear bracket bolt lock washer (4) (nipb)	1918 to 1933	park
3209-31	52103-31	Rear stud spacer	1931 to 1957	park

HANDLEBARS & CONTROLS				
3303-31		Handlebars cpt. (Standard for 45" & solo for 74")	Fit 1931 to 1936 - 45", 74" & 80" twins	black
3305-31		Speedster handlebars cpt.	1931 to 1936 - 45" twins	black
3307-31A		Standard handlebars, bare	1931 to 1934 - 45" twins & singles	bare
3309-31A		Speedster handlebars cpt.	1931 to 1934 - 45" twins & singles	bare
3310-09	53030-36	Handlebar grip, black (2)	1911 to 1934	rubber
3312-16		Right spiral (2)	1916 to 1948	nickel
3316-31		Handlebar plunger (2)	1931 to 1939 - 45" twins	-----
305-15	9281	Roller pin (2)	1916 to 1939	-----
3320-10	56278-10	Plain roller (2)	1911 to 1939	-----
3321-31	56281-31	Roller block	1931 to 1948	-----
3322-31	56283-31	Wire fastening screw (2)	1911 to 1939	
3324-09	56420-09	Control wire end (2)	1911 to 1948	-----
3326-09	56373-09	Control wire (2)	1911 to 1948	-----
3330-31	3330-31	Handlebar end nut (2) (7/8-24)	1931 to 1939 - 45" twins	park
3332-31		Handlebar plug (2)	1931 to 1939 - 45" twins	aluminum
3333-31	56276-31	Plug set screw	1931 to 1948	
3334-32	56502-32	Control coil & plug (2)	1932 to 1948	nickel
3339-28		Oiler control coil	1928 to 1936, except 1936 - 61" twins	nickel
3341-28		Control coil adjusting sleeve (3/8-24)	1928 to 1936, except 1936 - 61" twins	park
3341-29		Control coil adjusting sleeve, lower (3/8-24)	1929 to 1933 - 45" twin, 1930 to 1936 - 74" & 80" twins	cad
129	7789	Adjusting sleeve lock nut	1928 to 1936, except 1936 - 61" twins	park
3342-14		Leather coil housing (2)	1914 to 1936 (except 1936 - 61" twins), 1937 & 1938 - 45" twins	leather
3344-26	56495-26	Control coil clamp (left)	1926 to 1934 singles, 1929 to 1950 - 45" twin	park/cad
3345-26		Control coil clamp (right)	1926 to 1934 singles, 1929 to 1941 - 45" twin	park/cad
035	1190	Control coil clamp screw (2)	1913 to 1936, except 1936 - 61" twins, 1937 to 1950 - 45" twins	park/cad
3362-29		Control connection block	1929 - 45" twin, 1930 to 1936 - 45", 74" & 80" twins	cad
3363-32A		Carburetor control rod	1932 to 1936 - 45" twins	cad
3370-29A		Carburetor control connection	1929 to 1936 - 45" twin, first 1930 - 74" twins	cad
3373-29		Timer control wire connection	1929 - 45" twin, 1930 to 1936 - 45", 74" & 80" twins	
3374-30		Oiler control wire connection	1930 to 1933, 1934 singles	
3375-30		Oiler control wire spring	1930 to 1933, 1934 singles	
3376-30		Oiler control wire sleeve	1930 to 1933, 1934 singles	
021	1062	Control sleeve screw	1911 to 1936	park
3392-32		Control coil bracket, front	1932 to 1936 - 45", 74" & 80" twins	park
042	2686	Control bracket screw (on lower tank)	1932 to 1936	
3393-29		Control coil bracket, rear	1929 - 45" twin, 1930 to 1936 - 45", 74" & 80" twins	park
3394-29		Control coil clip (on drive case cover)	1929 - 45" twin, 1930 to 1936 - 45", 74" & 80" twins	park
042	2686	Screw for 3394-29	1929 - 45" twin, 1930 to 1936 - 45", 74" & 80" twins	cad
0201	6182	Plain washer for clip (nipb)	1929 - 45" twin, 1930 to 1936 - 45", 74" & 80" twins	cad

<u>TOOL BOX GROUP</u>				
3452-31A		Tool box (specify color)	1931 to 1934 - 45" twins & C singles	paint
3456-31		Toll box door and lock (specify color)	1931 to 1934 - 45" twins & C singles	paint
3464-26	64340-26	Tool box key	1926 to 1929 electric twins, 1930 to 1954	cad
3475-31		Bracket bolt (2)	1931 to 1934 - 45" twins & C singles	park
0136		Tool box bracket bolt nut	1931 to 1934 - 45" & 74" twins, 1931 to 1934 C singles	park
		Bracket bolt nut washer (nipb)	1931 to 1934 - 45" & 74" twins, 1931 to 1934 C singles	park
<u>TANK GROUP</u>				
3501-32A		Right tank	1932 to 1936 - 45" twins, 1932 to 1934 C singles	
3502-32		Left gasoline & oil tank	1932 to 1936 - 45" twins, 1932 to 1934 C singles	
3505-26		Tank buffers (2)	1926 to 1934 singles, 1929 to 1937 - 45" twins	rubber
3507-16		Tank cap (1-1/2"-24)	1916 to 1934	nickel
3511-16		Cap seat (1-1/2"-24)	1916 to 1936, except 1936 - 61" twins	
3512-16		Oil cap seat (1-1/2"-24)	1916 to 1936, except 1936 - 61" twins	
3517-25		Primer pump, complete (1-1/2"-24)	1925 to 1934	
3519-14		Primer pump nut (1-1/2"-24)	For 3517-25	
3520-14		Plunger knob	For 3517-25	
3521-25		Plunger rod with washer	For 3517-25	
3522-14		Plunger spring	For 3517-25	-----
3524-14		Priming pump leather washer	For 3517-25	leather
3529-10		Tank clip screw (2) (1/4-24)	1911 to 1936, except 1936 - 61" twins	park
0108	7691	Clip screw nut (2) (1/4-24)	1917 to 1936 for 3529-10	park
0257	0257	Lock washer (2) (nipb)	1917 to 1936 for 3529-10	park
3530-25		Clip screw tank spacer (2)	For 3529-10	park
3532-18	3665	Top of tank screw (5) (7/32"-32)	1919 to 1936, 1937 to 1950 - 45" twins	cad
3532-18S	3666	Top of tank screw, oversize (5) (1/4-28)	1919 to 1936, 1937 to 1950 - 45" twins	cad
3533-18	61820-18	Tank screw spring washer (5)	1919 to 1936, 1937 to 1950 - 45" twins	cad

HAND OIL PUMPS, OIL PIPES & GAS PIPES					
3551-27		Oil pump body assembled	Later 1927 to 1936		
3553-27		Oil pump body assembled	Later 1927 to 1936		
3555-25		Oil pump plunger complete	1925 to 1936		nickle
3557-25		Oil pump plunger	1925 to 1936		nickle
3559-15		Plunger tube cap	1915 to 1936		nickle
3561-12		Plunger screw (5/16-40)	1912 to 1936		nickle
3563-12	37345-41	Plunger cup washer (2)	1912 to 1936		leather
0214	6320	Plunger washer steel (3)	1912 to 1936		
0290	510	Cotter pin (nipb)	1912 to 1936		
3564-27		Suction valve	Later 1927 to 1936		brass
3565-27		Suction spring	Later 1927 to 1936		-----
3566-27		Releasing spring	Later 1927 to 1936		-----
3567-27		Square oil pump top nut (nipb)	Later 1927 to 1936		
0283	8866	3/8" oil pump ball	Later 1927 to 1936		-----
3571-32		Drive case oil pipe	1932 to 1933 - 45" twins		tin plated
3572-32		Hand pump oil pipe	1932 to 1933 - 45" twins		tin plated
3577-15	63533-15	Oil pipe nipple 3/8" (15/32-24)	1915 to 1922, later 1927 to 1936, except 1936 - 61" twins		cad
3578-27		Oil pump body nipple	Later 1927 to 1936, except 1936 - 61" twins		cad
3579-15		Oil pipe nipple (soldered in tank)	1915 to 1936, except 1936 - 61" twins		
3581-15		Oil pipe nut (15/32-24)	1915 to 1936		cad/tin plated
3583-15	3583-15	Oil nipple cap	Use when oil pipe is disconnected		
3601-16	3601-16	Gas valve (1/8-27 NPT)	1916 to 1939, except 1937 to 1939 - 45" twins		nickel
3603-16	3603-16	Gas valve spring	1916 to 1939		flat nickle
0207	6220	Gas valve washer	1916 to 1939		flat nickle
3606-32A		Gas pipe	1932 to 1935 - 45" twins		tin plated
0140	62371-15	Gas pipe nut (valve end) & vent & rocker arm oil pipes	1915 to 1949		cad
3612-09		Gas pipe nut (carburetor end) (15/32-24)	1911 to 1938		cad
3615-15	63580-15	Gas pipe nipple (rear end) & vent & rocker arm oil pipes	1915 to 1950		cad
3623-32		Gas strainer cpt.	1932 to 1938 twins		nickle
3625-32		Gas strainer body	1932 to 1938 twins		nickle
3627-32	62265-32	Gas strainer screen	1932 to 1938 twins		-----
3629-32	62268-32	Gas strainer cap	1932 to 1938 twins		nickle
3633-32	62270-32	Gas strainer washer (cork) (2)	1932 to 1938 twins		cork

MUDGUARD GROUP				
3702-30		Front mudguard less flap (specify color)	1930 to 1933 C singles & 45" twins, 1934 C singles	paint
3710-30		Rear mudguard & braces (specify color)	1930 to 1933 C singles & 45" twins, 1934 C singles	paint
3712-30A		Rear mudguard hinged end (specify color)	1930 to 1933 C singles & 45" twins, 1934 C singles	paint
030		Mudguard side screw (12)	1921 to 1933 twins & C singles, 1934 C singles	paint
3726-30A		Front mudguard brace (2)	1930 to 1933 C singles & 45" twins, 1934 C singles	paint
3730-30A		Set front mudguard brace clips	1930 to 1934 C singles, 1930 to 1939 - 45" twins	paint
3736-29		Rear mudguard brace, center	1921 to 1933 twins & C singles, 1934 C singles	paint
3737-29		Rear mudguard end brace (2)	1921 to 1933 twins & C singles, 1934 C singles	paint
3743-23	5425	Brace bracket bolt (2) (5/16-24)	1923 to 1939 twins, 1930 to 1934 C singles	paint
0117	7752	Brace bracket bolt nut (2)	1923 to 1939	paint
0214	6320	Plain washer (2)	1923 to 1933, 1934 singles	paint
0259	7040	Lock washer (nipb)	1923 to 1933, 1934 singles	paint
0308	8523	3/16" x 9/16" round head rivets	For mudguard braces & clips	paint
0314	8515	3/16" x 3/8" truss head rivets	For mudguards to braces	paint
3745-29		Rear mudguard brace clip, right (2-piece)	1929 to 1939 - 45" twins, 1930 to 1934 C singles	paint
3746-29	59780-29	Rear mudguard brace clip, left	1929 to 1939 - 45" twins, 1930 to 1934 C singles	paint
3748-26	4013	Rear mudguard support bolt (2)	1929 to 1939 - 45" twins, 1926 to 1934 singles	park
0117		Support bolt nut (2)	1929 to 1939 - 45" twins, 1926 to 1934 singles	park
0214		Rear upper bolt flat washer (2) (nipb)	1929 to 1939 - 45" twins, 1926 to 1934 singles	park
4417-29	66302-29	Rear bolt plate	1929 to 1937 - 45" twins, 1929 to 1934 singles	park
3749-30	2404	Front mudguard oval head bolt (2)(5/16-24x1-1/8")	1930 to 1939 twins, 1930 to 1934 C singles	park
0117	7752	Front mudguard bolt nut (2)	1916 to 1950	park
0259	7040	Mudguard bolt lock washer (2) (nipb)	1930 to 1950 twins	park
3750-30		Mudguard bolt curved washer (2)	1930 to 1933 C singles & all twins, 1934 C singles	park
3751-30		Rear mudguard end hinge	1930 to 1933 twins & C singles, 1934 C singles	paint
3752-30	59862-30	Mudguard hinge pin	1930 to 1957 all twins	paint
0314	8515	Hinge rivets	1923 to 1950	paint
064	3974	Rear mudguard bolt (lower end) (2)	1930 to 1952	park
0117	7752	Rear mudguard bolt nut (for 064) (2)	1930 to 1952	park
0259	7040	Mudguard bolt lock washer (2) (nipb)	1930 to 1952	park
2823-26	4304	Rear mudguard brace bolt (2)	1926 to 1934 singles, 1929 to 1952 - 45" twins	park
0129	7789	Brace bolt nut (2)	1926 to 1934 singles, 1929 to 1939 - 45" twins	park
0226	6379	Bolt nut plain washer (2) (nipb)	1929 to 1939 - 45" twins	park
0261	7045	Bolt nut lock washer (2) (nipb)	1929 to 1939 - 45" twins	park
3757-26	59235-26	Mudguard flap	1926 to 1939 twins, 1930 to 1934 C singles	rubber
032	1206	Mudguard flap bolt (3)	1911 to 1939	park
0104	7620	Mudguard flap bolt nut (3)	1911 to 1950	park
0205	6203	Plain washer (3)	1911 to 1950	park
0254	7021	Lock washer (3) (nipb)	1911 to 1950	park

CHAIN GUARDS				
3801-32	60504-32	Front chain guard (black)	1932 to 1957 - 45" twins	paint
3804-32		Chain guard back, upper	1932 to 1940 - 45" twins	black
3805-32	3805-32	Chain guard back, lower	1932 to 1940 - 45" twins	black
3805-30A	2398	Screw for chain guard back (2)	1930 to 1936 - 74" twins, mid-1930 to 1957 - 45" twins	
3805-30B	60630-30	Chain guard screw lock	1930 to 1936, 1937 to 1957 - 45" twins	
3805-30C		Chain guard screw bushing (3/8"-24 USF)	1930 to 1936 - 74" & 80" twins, 1930 to 1938 - 45" twins	park
3805-30CS		Chain guard screw bushing, O.S. (1/2" pipe thread)	1930 to 1936 - 74" & 80" twins, 1930 to 1938 - 45" twins	
3805-32D	60650-32	Screw bushing washer	1930 to 1936 - 74" & 80" twins, 1930 to 1938 - 45" twins	
3807-26	60542-26	Front chain guard rear bracket	1926 to 1934 singles, 1929 to 195 - 45" twins	park
053	2775	Front chain guard rear screw	1926 to 1929, 1930 to 1934 singles, 1930 to 1957 - 45" twins	park
0108	7691	Nut for 053	1915 to 1929, 1930 to 1934 singles, 1930 to 1957 - 45" twins	park
3811-29	60569-29	Chain inspection hole cover (2)	1929 singles & 45" twins, all 1930 to 1936 - 74" & 80" twins, 1930 to 1957 - 45" twins	paint
048	2265	Chain guard cover screw (2)	1929 singles & 45" twins, all 1930 to 1936, 1937 to 1957 - 45" twins	park
3812-29		Chain guard back slot cover	1929 to 1934 singles, 1929 to 1940 - 45" twins	black/park?
030	1187	Slot cover screw (2)	1929 to 1934 singles, 1929 to 1940 - 45" twins	park
0104	7620	Slot cover screw nut (2)	1929 to 1934 singles, 1929 to 1940 - 45" twins	park
0201	6182	Slot cover screw washer (2) (nipb)	1929 to 1934 singles, 1929 to 1940 - 45" twins	park
3813-29		Bolt for chain guard back (2) (1/4-24)	1929 to 1934 singles, 1929 to 1940 - 45" twins	park
0108	7691	Nut for 3813-29 (2)	1929 to 1934 singles, 1929 to 1940 - 45" twins	park
3814-29	60640-29	Chain guard back spring (2)	1929 to 1934 singles, 1929 to 1957 - 45" twins	park
3815-29		Spring washer, small (2)	1929 to 1934 singles, 1929 to 1940 - 45" twins	park
0215	6327	Spring washer, large (2)	1929 to 1934 singles, 1929 to 1940 - 45" twins	park
3818-26		Rear chain guard (black)	1926 to 1934 singles & 45" twins	paint
051	2762	Rear chain guard screw, front end	1924 to 1936, except 1936 - 61" twins	paint
0207	6220	Rear chain guard screw washer (nipb)	1924 to 1936, except 1936 - 61" twins	park
3828-26	60347-26	Rear chain guard bracket stud	1926 to 1934 singles, 1929 to 1935 - 45" twins	park
524-25	60350-25	Rear chain guard bracket spring	1926 to 1934 singles, 1929 to 1957 - 45" twins	park
0108	7691	Bracket nut	1915 to 1939	park
0208	6227	Bracket stud plain washer (2)	1926 to 1934 singles, 1929 to 1957 - 45" twins	park

FRONT WHEEL & FRONT HUBS					
3901-30	43503-30	Front wheel & brake, less tire	1930 to 1934 C singles, 1930 to 1952 - 45" twins	-----	
3906-30	43599-30	Front hub cpt. With brake shell	1930 to 1934 C singles, 1930 to 1952 - 45" twins	black	
3908-30		Front hub shell	1930 to 1934 C singles, 1930 to 1939 - 45" twins	black	
0340	9850	Alemite connection (1) in hub	1930 to 1934 C singles, 1924 to 1937	nickel	
3910-30	43871-30	Front axle	1930 to 1934 C singles, 1930 to 1952 - 45" twins	park	
0128	7809	Front axle nut (castellated) (2)	1930 to 1934 C singles, 1929 to 1936 - 45" twins	park	
0261	7045	Axle nut lock washer (nipb) (2)	1930 to 1934 C singles, 1929 to 1936 - 45" twins	park	
0292	534	Axle nut cotter pin (nipb) (2)	1930 to 1934 C singles, 1929 to 1936 - 45" twins	park	
3921-30	43617-30	Front axle bushing (sleeve)	1930 to 1934 C singles, 1930 to 1952 - 45" twins		
3923-30	43624-30	Front hub cone	1930 to 1934 C singles, 1930 to 1952 - 45" twins		
3925-30	43630-30	Cone spring ring (2)	1930 to 1934 C singles, 1930 to 1952 - 45" twins		
0282	8860	5/16" balls (26)	1930 to 1934 C singles, 1930 to 1952 - 45" twins	-----	
3926-30	43635-30	Cone lock washer	1930 to 1934 C singles, 1930 to 1952 - 45" twins	cad	
3929-30	43885-30	Cone lock nut	1930 to 1934 C singles, 1930 to 1952 - 45" twins	cad	
3932-30	43640-30	Left inner dirt guard	1930 to 1934 C singles, 1930 to 1952 - 45" twins	cad?	
3935-30	43645-30	Spoke flange, right side	1930 to 1934 C singles, 1930 to 1952 - 45" twins	black	
0308	8523	Rivets for brake shell & spoke flange (5)	1928, 1929, 1930 to 1934 singles, 1930 to 1952 - 45" twins	black	
WHEEL RIMS & SPOKES					
3940-30A		Rear rim, 18" drop center (light spokes)	1930 to 1934 C singles, 1930 to 1934 - 45" twins	black	
3941-30	43002-30	Front rim, 18" drop center (18 x 4.00 tire)	1930 to 1934 C singles, 1930 to 1939 - 45" twins	black	
3943-30	43028-30	Front spoke, .148" x 8-3/8"	1930 to 1934 C singles, 1930 to 1939 - 45" twins	cad	
3945-30	43027-30	Front brake shell spoke, .148" x 5-15/16"	1930 to 1934 C singles, 1930 to 1939 - 45" twins	cad	
3943-30A		Rear spoke, .148" x 8-9/32"	1930 to 1934 C singles, 1930 to 1939 - 45" twins	cad	
3947-16	43098-16	Spoke nipple, light	1917 to 1929, 1930 to 1934 singles & 45" twins	cad	

REAR WHEEL GROUP				
3951-32		Rear wheel with brake, less tire (specify sproket s	1932 to 1934 C singles & 45" twins	-----
3958-30		Rear hub assembled (roller bearing)	1930 to 1934 - 45" twins, 1931 to 1934 C singles	-----
0340	9850	Alemite fitting (1) in hub	1924 to 1935	nickel
3960-32		Rear hub shell	1932 to 1934 - 45" twins & singles	black
3962-32		Sproket lock nut (left thread)	1932 to 1934 - 45" twins & singles	cad
3963-32		Brake shell nut (right thread)	1932 to 1934 - 45" twins & singles	cad
6171-32		Rear wheel roller bearing (2)	1932 to 1934 - 45" twins & singles	-----
3969-32		Bearing spacer (2)	1932 to 1934 - 45" twins & singles	-----
3971-32		Felt washer (2)	1932 to 1934 - 45" twins & singles	felt
3973-32		Felt washer retainer (2)	1932 to 1934 - 45" twins & singles	-----
3977-32		Bearing shim, .035" thick	1932 to 1934 - 45" twins & singles	-----
3978-32		Bearing shim, .007" thick	1932 to 1934 - 45" twins & singles	-----
3979-32		Bearing shim, .002" thick	1932 to 1934 - 45" twins & singles	-----
3981-32		Right bearing nut (left thread)	1932 to 1934 - 45" twins & singles	cad
3985-32		Left bearing nut (right thread)	1932 to 1934 - 45" twins & singles	cad
3995-32		Rear axle	1932 to 1934 - 45" twins & singles	cad
2634-30A	7905	Rear axle nut (1/2-24, 5/16" x 13/16")	1932 to 1934 - 45" twins & singles	park
4001-32		Axle spacer (for brake bracket)	1932 to 1934 - 45" twins & singles	cad
4003-32		Rear axle collar (2)	1932 to 1934 - 45" twins & singles	park

SERVICE BRAKE (REAR WHEEL)					
4029-32		Brake bracket & bands	1932 to 1934 - 45" twins & C singles	-----	
4032-31		Brake shell	1931 to 1934 C singles & 45" twins	black paint	
3963-32		Brake shell & sprocket nut	1932 to 1934 - 45" twins & singles	park	
4036-32		Brake bracket	1932 to 1934 - 45" twins & C singles	park	
3985-32		Brake bracket nut	1932 to 1934 - 45" twins & singles	park	
4038-23		Brake band & lining, upper	1931 to 1934 - 45" twins & C singles	black paint	
4039-23		Brake band & lining, lower	1931 to 1934 - 45" twins & C singles	black paint	
4111-31	44406-31	Upper brake shoe & lining	1931 to 1940 - 45" twins & C singles	-----	
4112-31	44405-31	Lower brake shoe & lining	1931 to 1940 - 45" twins & C singles	-----	
4042-23		Brake lining, upper	1931 to 1940 - 45" twins & C singles	woven lining	
4043-23		Brake lining, lower	1931 to 1940 - 45" twins & C singles	woven lining	
4046-14		Brake band lining rivet	1914 to 1929, 1930 to 1934 singles & 45" twins	park	
4054-31A		Brake lever	1931 to 1934 C singles & 45" twins	cad	
4056-23		Brake stud connecting link	1923 to 1929, 1930 to 1934 singles & 45" twins	park	
4063-23		Brake band pin (2)	Later 1929 to 1934 singles & 45" twins	park	
0211	6280	Brake band pin washer	1923 to 1929, 1930 to 1934 singles & 45" twins	park	
		Brake band pin cotter pin (2) (nipb)	1930 to 1934 singles & 45" twins	park	
4064-32		Brake rod adjusting nut	1932 to 1934 - 45" twins & C singles	park	
4065-31		Brake rod	1931 to 1934 C singles & 45" twins	park	
0207	6220	Clevis pin washer, 1/4" x 7/16"	1930 to 1952 all twins & Servi-Cars	park	
4066-29		Brake rod spring	Later 1929 to 1934 singles & 45" twins	park	
4068-29		Brake rod spring collars (2)	1929 to 1934 - 45" twins & singles	park	
4072-32		Brake bracket screw	1932 to 1934 - 45" twins & C singles	park	
4072-32A		Brake bracket screw clip	1932 to 1934 - 45" twins & C singles	park	
0224	6320	Brake arm stud plain washer	1932 to 1934 - 45" twins	park	
4073-32		Front brake rod	1932 to 1934 - 45" twins	park	
0212	6310	Brake rod washer (3)	1926 to 1934 singles & 45" twins	park	
0290	510	Cotter pin (2) (nipb)	1926 to 1934 singles & 45" twins	park	
4075-27		Brake crossover shaft	1927 to 1934 singles & 45" twins	park	
4077-26		Brake shaft lever	1926 to 1934 singles & 45" twins	park	
4078-26		Footbrake shaft lock washer	1926 to 1934 singles & 45" twins	park	
4079-26		Footbrake shaft nut (7/16-20)	1926 to 1934 singles & 45" twins	park	

FRONT WHEEL BRAKE				
4108-31A		Front brake side cover	1931 to 1940 - 45" twins, 1931 to 1934 C singles	black paint
4110-30	44122-30	Brake shell	1930 to 1939 - 45" twins, Servi-Cars, 1930 to 1934 C singles	black paint
4111-31	44406-31	Upper brake shoe & lining	1931 to 1952 - 45" twins & C singles	-----
4112-31	44405-31	Lower brake shoe	1931 to 1952 - 45" twins & C singles	-----
4113-31		Brake shoe lining, upper	1931 to 1935 - 45", 74" & 80" twins & C singles	-----
4113-31A		Brake shoe lining, lower	1931 to 1935 - 45", 74" & 80" twins & C singles	-----
4046-31	41841-31	Brake lining rivets	1931 to 1957 twins, 1931 to 1934 C singles	brass
4116-30	44180-30	Brake side cover bushing	1930 to 1952 - 45" twins, 1930 to 1934 singles	bronze
4117-30	44340-30	Stabilizer center plate	1930 to 1952 - 45" twins, 1930 to 1934 C singles	cad
4118-29	44348-29	Stabilizer spring washer (1)	1929 - 61" & 74" twins, 1930 to 1952 - 45" twins	spring steel
4119-29	44344-29	Stabilizer inner washer	1929 - 61" & 74" twins, 1930 to 1952 - 45" twins	brass
4120-29	44346-29	Stabilizer outer washer	1929 - 61" & 74" twins, 1930 to 1952 - 45" twins	brass
4121-29	44342-29	Stabilizer cover	1929 - 61" & 74" twins, 1930 to 1952 - 45" twins	park
4122-30	44350-30	Stabilizer collar stud	1930 to 1952 - 45" twins, 1930 to 1934 C singles	
0104	7620	Stabilizer stud nut (2) (10-24)	1929 - 61" & 74" twins, 1930 to 1952 - 45" twins, 1930 to 1934 C singles	park
0254	7021	Stud nut lock washer (2) (nipb)	1929 - 61" & 74" twins, 1930 to 1952 - 45" twins, 1930 to 1934 C singles	park
4123-31	44307-31	Brake operating lever	1931 to 1936 - 45", 74" & 80" , 1937 to 1952 - 45" twins, 1931 to 1934 C singles	park
4124-31	44265-31	Brake operating stud	1931 to 1936 - 45", 74" & 80" , 1937 to 1952 - 45" twins, 1931 to 1934 C singles	park
4124-31A		Operating stud grease nipple (3/8-24)	1931 to 1936 - 45", 74" & 80" , 1937 - 45" twins, 1931 to 1934 C singles	park
4125-28A	44486-28	Brake shoe spring (2)	1929 to 1939 - 45" twins	park
FRONT BRAKE CONTROL PARTS				
4130-30		Brake shackle	1930 to 1939 - 45" twins	park
4132-30		Brake shackle bushing (2)	1930 to 1939 - 45" twins, 1930 to 1934 C singles	-----
4133-31		Brake shackle fork stud	1931 to 1936 - 45", 74" & 80" , 1937 to 1952 - 45" twins, 1931 to 1934 C singles	cad
		Fork stud nut (1) (nipb)		park
		Fork stud lock washer (1) (nipb)		park
4137-30	44225-30	Brake shackle band stud (3/8-24)	1930 to 1952 - 45" twins, 1930 to 1934 C singles	cad
0128	7793	Band stud nut (1)	All 1931 to 1938	park
0223	6408	Band stud flat washer (1) (nipb)	All 1931 to 1938	park
0261	7045	Band stud lock washer (1) (nipb)	All 1931 to 1938	park
4140-29	44250-29	Grease nipple extension	1930 to 1952 - all twins	
0340	9850	Alemite connection (3)	1928 to 1937	nickel
4141-30		Control wire oiler	Later 1930 to first 1932	cad

4141-32		Oil hole cover for 4142-30	Later 1932 to 1938	
4142-30		Control coil coupling	Later 1930 to first 1938	
4143-30	45085-30	Control coil assembly	Later 1930 to 1952	fabric
4143-30A		Control coil section, 38-1/4" long	Later 1930 to 1952	
4143-30B	4143-30B	Control coil section, 10" long	Later 1930 to 1952	
4144-30	45109-30	Control coil ferrule (2)	Later 1930 to 1957	cad
4144-30A	4144-30A	Felt washer packing nut	Later 1930 to 1940	cad
4144-30B		Felt washer	Later 1930 to 1940	felt
4145-28	45153-28	Control wire	1928 to 1952	-----
4146-15	45158-15	Control wire end	1928 to 1952	
4149-28	4149-28	Hand lever & bracket complete	1928 to 1940	-----
4150-28	4150-28	Brake hand lever	1928 to 1940	chrome
4151-28	4151-28	Hand lever bracket	1928 to 1940	park
4153-28	45030-28	Bracket clamp	1928 to 1957	park
4154-28	4154-28	Bracket clamp screw (#10-24)	1928 to 1940	park
032	1206	Bracket clamp screw	1928 to 1940	park
053	2775	Handlebar clip bolt	1928 to 1952	park
4160-28	9980	Handlebar clip	1928 to 1952	park
4156-28	4156-28	Hand lever screw (1/4-24)	1928 to 1940	park
4157-28	4157-28	Screw spring washer	1928 to 1940	park
0108	7691	Bolt nut	1928 to 1950	park
0256	7035	Bolt nut washer (nipb)	1928 to 1950	park
4162-30	9967	Coil clip	1930 to 1938 - 45", 74" & 80" twins, 1937 to 1957 -45",	park
4163-30		Control coil clamp	1930 to 1939 - 45" twins 1930 to 1936 - 74" & 80" twins	park
4165-28	38674-28	Control coil adjusting sleeve (7/16-20)	1928 to 1940	park
4166-28	7827	Adjusting sleeve nut (7/16-20)	1928 to 1940	park
4170-28	45172-28	Control wire lower connection	1928 to 1940	park
4171-29	45182-29	Lower connection clamp nut	1928 to 1952	park
4069-26	490	Clevis pin	1928 to 1952	cad
0207	6220	Clevis pin washer (nipb)	1928 to 1957	park ?
0290	510	Clevis pin cotter pin (nipb)	1928 to 1957	park ?

BATTERIES & BATTERY PARTS				
4303-29	66006-29	HM5 battery, less case, fully charged	1929 to 1936 singles & 45" twins, 1936 - 61" twins, all 1937 to 1957	
4304-29		HM5 battery, less case, dry	1929 to 1936 singles & 45" twins, 1936 - 61" twins, all 1937 to 1957	
4357-26	4357-26	Plate lock pin (1 ft. Length)	1926 to 1939 twins, 1929 to 1934 singles	
4359-29	66010-29	Rubber jar only	1929 to 1936 singles & 45" twins, 1936 - 61" twins, all 1937 to 1950	
4369-29	66012-29	Wood separator	1929 to 1936 singles & 45" twins, 1936 - 61" twins, all 1937 to 1950	
4371-29	66014-29	Rubber separator	1929 to 1936 singles & 45" twins, 1936 - 61" twins, all 1937 to 1950	
4381-29	66018-29	Filler plug	1929 singles & 45" twins, all 1930 to 1957	
4383-28	66021-28	Filler plug washer	Later 1928 twins, all 1929 to 1957	
BATTERY CASE GROUP & RELAY				
4404-29	66202-29	Battery case only (black)	1929 to 1939 - 45" twins, 1930 to 1934 singles	paint
4407-29	66377-29	Battery case cover (black)	1929 to 1939 - 45" twins, 1929 to 1934 singles	paint
4409-24	66387-26	Cover bolt wing nut (2)	1924 & 1925, 1929 to 1957 - 45" twins, 1929 to 1934 singles	cad
4411-24	66385-24	Cover clamp bolt (2)	1924 & 1925, 1929 to 1940 - 45" twins, 1929 to 1934 singles	cad
4413-24	66288-24	Clamp bolt lock pin (2)	1924 & 1925, 1929 to 1957 - 45" twins, 1929 to 1934 singles	park
066	4000	Front bolt (1)	1930 to 1936, except 1936 - 61" twins, 1937 to 1957 - 45" twins	park
0112		Front bolt nut (1) (nipb)	1930 to 1936, except 1936 - 61" twins, 1937 to 1957 - 45" twins	park
0259	7040	Front bolt lock washer (1) (nipb)	1930 to 1936, except 1936 - 61" twins, 1937 to 1957 - 45" twins	park
3748-26	4013	Rear upper bolt (2)	1926 to 1939 - 45" twins, 1926 to 1934 singles	park
		Rear upper bolt flat washer (2) (nipb)	1926 to 1939 - 45" twins, 1926 to 1934 singles	park
061	3953	Rear lower bolt (2)	1930 to 1936, except 1936 - 61" twins, 1937 to 1957 - 45" twins	park
0259	7040	Rear lower bolt lock washer (2) (nipb)	1930 to 1936, except 1936 - 61" twins, 1937 to 1957 - 45" twins	park
4417-29	66302-29	Rear bolt plate	1929 to 1937 - 45" twins, 1929 to 1934 singles	park
0117	7752	5/16" nut for battery box bolts 061 & 066 (3)	1926 to 1936, except 1936 - 61" twins, 1937 to 1952 - 45" twins	park
0259	7040	Bolt lock washer (3) (nipb)	1926 to 1936, except 1936 - 61" twins, 1937 to 1952 - 45" twins	park
4427-15	66100-15	Rubber mat (2)	All 1915 to 1925, 1926 to 1935 singles & 45" twins, 1936 - 61", 1937 to 1957	rubber
4433-23	66112-23	New type terminal screw (2) (#10-24)	Fits 1923 to 1957	cad
4433-23A	66115-23	Battery terminal felt oil washer (2)	All batteries	felt
4434-23	7628	Terminal screw nut (2) (#10-24)	For 4433-23	cad
035	1190	Ground screw	Later 1922 to 1930, 1931 to 1934 singles	cad
4785-26		Relay assembly	1926 to 1937	black/cad
4787-26	2762 W	Relay mounting & bracket screw (1/4-24)	1926 to 1950	
016	2582	Contact blade screw (2) (#6-32)	1926 to 1950	
020	1052	Terminal wire screw (2) (#8-32) round head	1926 to 1950	cad

SWITCHES AND PARTS					
	4505-29		Switch assembly complete	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins, 1932 to 1934 C singles	
	4506-29A		Switch box fastening bolt (2) (1/4-28)	Later 1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C single	cad
	0256	7035	Lock washer (2) (nipb)	Later 1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C single	park
	4511-30		Switch bracket	1930 to 1936 - 45", 74" & 80" twins & C singles	park
	032		Bracket to switch bolt	Later 1930 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C single	park
	0104		Nut for 032	Later 1930 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C single	park
	4514-29		Switch mounting plate	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	park
	4517-29		Mounting plate insulator (2)	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	
	4519-29		Switch cover	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	black
	018	1052	Switch cover screw (sides) (2) 8-32x1/4" (nipb)	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	park
	0252	7015	Switch cover screw lock washer (2) (nipb)	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	park
	032	1206	Switch cover screw (front)(1) 10-24x1/2" (nipb)	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	park
	0104	7620	Switch cover screw nut (nipb)	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	cad
	4521-26		Switch key (2)	1926 to 1936, except 1936 - 61" twins	flat nickel
	4522-26		Ignition switch metal label (nipb)	1928 to 1936 - 45" twins & singles	nickel
	4523-26		Light switch metal label (nipb)	1928 to 1936	nickel
	4524-26		Switch label rivet (4) (nipb)	1928 to 1936	nickel
	4526-26		Switch guide plate (2) (nipb)	1928 to 1936	
	4544-28A		Tail lamp connection clamp	1928 to 1936 - 45" twins & singles	park
	4545-28		Tail lamp connection bracket	1928 to 1936, except 1936 - 61" twins	-----
	037	1210	Clamp screw	1928 to 1936, except 1936 - 61" twins	cad
	039	1222	Wire terminal screw	1928 to 1936, except 1936 - 61" twins	cad
	0105	7634	Nut for 037 & 039	1928 to 1936	cad
	0356	7118	Shakeproof washer (16) (nipb)	1928 to 1936	cad
	0354	7220	Shakeproof washer (12) (nipb)	1928 to 1936	cad
	4557-26		Switch handle (2)	1926 to 1936, except 1936 - 61" twins	nickle
	4558-26		Switch handle set screw (2) (#2-62)	For 4557-26	cad
	4559-26		Switch contact & spring (4)	1926 to 1936, except 1936 - 61" twins	
	4560-26		Grounding spring (1)	1926 to 1931, 1932 to 1936 - 45" , 74" & 80" twins & C singles	
	038	1218	Switch screw, long	1926 to 1936, except 1936 - 61" twins	
	0105	7634	Switch screw nut () (nipb)	1926 to 1936, except 1936 - 61" twins	
	4561-26		Fiber washer	1926 to 1936, except 1936 - 61" twins	-----
	4566-29		Switch lamp shield	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	chrome
	05	2540	Shield screw (2)	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	nickle
	4567-29		Switch lamp bulb (D.C.)	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	-----
	4568-29		Switch lamp lever	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	cad
	4570-29		Switch lamp socket	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	
	4572-29		Switch lamp socket guide	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	
	4574-29		Switch lamp connector & wires	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	-----

4580-29		Ammeter only	1929 to 1931, 1932 to 1936 twins & C singles	-----
4582-29		Ammeter stud nut (4)	1929 to 1931, 1932 to 1936 twins & C singles	cad ?
0201	6182	Ammeter stud steel washer (3)	1929 to 1931, 1932 to 1936 twins & C singles	cad ?
4601-29		Ignition switch stem, complete	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	
4602-26		Ignition switch cam	1926 to 1936, except 1936 - 61" twins	
4605-29		Light switch stem, complete	1926 to 1936, except 1936 - 61" twins	
4606-26		Lamp switch cam (fiber)	1926 to 1936, except 1936 - 61" twins	-----
4613-26		Switch stem spacer fiber	1926 to 1936, except 1936 - 61" twins	-----
4613-29		Ignition stem spacer	1929 to 1931, 1932 to 1936 - 45", 74" & 80" twins & C singles	
4614-26		Switch stem end washer fiber	1926 to 1936, except 1936 - 61" twins	-----
4615-26		Switch stem clamp ring (2)	1926 to 1936, except 1936 - 61" twins	

WIRING					
1596-30	31976-30	Spark plug cable, long	1930 to 1952 - 45", 74" & 80" twins	cloth	
1597-30	31970-30	Spark plug cable, short	1930 to 1952 - 45", 74" & 80" twins	cloth	
1611-29		Timer ground wire (6-3/4" black)	1929 - 45" twins, 1930 to 1936 - 45", 74" & 80" twins	-----	
1613-30		Circuit breaker to coil wire (26" black)	1930 to 1957 twins	-----	
1693-30	70261-30	Field coil wire (5-1/4" black) (2)	1929 to 1931 - 74" twins, 1932 to 1957 singles	-----	
1693-30A		Field coil wire (8-3/4" black)	1930 to 1932 - 45" & 74" twins	-----	
1739-30A		Generator to switch wire (39-1/4" red)	1930 to 1936 - 45", 74" & 80" twins	-----	
1742-30		Generator to switch wire (39-1/4" red)	1930 to 1936 - 45" twins	-----	
1520-24	9900	Terminal	1924 to 1957	-----	
1614-18	9913	Terminal & eyelet	1918 to 1947	-----	
4701-29		Lighting cable (59-1/2" - 4 wires)	1929 to 1936, except 1936 - 61" twins	-----	
4702-29		Headlight to switch wire	1929 to 1934	-----	
4703-26		Horn & battery wire (15-1/2" red)	1925 to 1929 horn to switch, 1930 to 1936 - 45" twins, battery to rel	-----	
			battery to relay		
4703-31		Horn to switch wire, double (22-3/4" red & black)	1931, 1932 to 1934 twins & C singles	-----	
4704-18		Tail light wire & tubing	1918 to 1933, 1934 singles	-----	
4705-30C		Ignition to light switch wire (5-5/16" red)	1930, 1931 to 1936 - 45", 74" & 80" twins & C singles	-----	
4706-29		Frame & switch box ground wire	1929 to 1936, except 1936 - 61" twins	-----	
4710-31		Horn switch wire, (19-1/4" black)	1931 to 1936	-----	
4711-29		Handlebar light switch wire	1929 to 1936, except 1936 - 61" twins	-----	
4711-31		Light switch wire conduit (5-1/2")	1931 to 1936	-----	
4718-15		Copper tubing	all electrics	copper	
4720-15		Small rubber tubing	all electrics	rubber	
4726-29		Timer to coil wire clamp	1929 to 1933 - 45" twins	park	
4726-31		Wire clip on triple clamp (2)	1931 to 1936 - 45", 74" & 80" twins & C singles	park	
4727-23	4727-23	Wire clamp, small	1923 to 1933 singles & 45" twins, 1934 singles	park	
4727-31		Generator wire clip	1931 to 1936 - 45", 74" & 80" twins & C singles	park	
4728-25	9979	Wire clamp (1-1/4")	1925 & 1926, 1929 to 1939 twins	park	
4728-30		Wire clamp	1930 to 1936 - 45" twins	park	
4729-25		3/8" tubing clamp	1925 to 1936	park	
4729-30		Timer wire & control coil clip	1930 to 1933 twins	park	
4730-30		Lighting cable clamp	1930 to 1936	park	
4730-30A	9977	Wire retaining clamp (around frame head)	1930 to 1957- 45" twins	park	
		Complete wiring harness		-----	
		Wire & wire loom		-----	

HANDLEBAR HORN & LIGHT SWITCHES					
4760-26	71800-26	Horn switch, complete	1926 to 1957	-----	
4760-29	71840-29	Light switch, complete, less wires	1926 to 1957	-----	
020	1052	Switch screw (4)	1926 to 1957	cad	
4762-26	71802-26	Horn switch button	1926 to 1957	-----	
4764-26	71804-26	Horn switch button spring	1926 to 1957	-----	
4764-29	71843-29	Light switch lever	1926 to 1957	-----	
4766-26	71806-26	Horn switch wire insulation	1926 to 1957	-----	
4766-29	71848-29	Light switch wire insulation	1926 to 1957	-----	
4768-26	71811-26	Horn switch housing	1926 to 1957	chrome	
4768-29	71845-29	Light switch housing	1926 to 1957	chrome	
4770-29	71859-29	Light switch contact pin	1926 to 1957	-----	
4771-29	71861-29	Light switch contact pin spring	1926 to 1957	-----	
4776-26	71813-26	Horn switch contact plate	1926 to 1957	-----	
4776-29	71851-29	Light switch contact block	1926 to 1957	-----	
4777-26	71815-26	Horn switch spring stop washer	1926 to 1957	-----	
4777-29	71856-29	Light switch retainer plate	1926 to 1957	-----	
4778-26	70577-26	Switch wire rubber bushing	1926 to 1957	-----	

ELECTRIC HORN GROUP				
4801-31		Horn (Remy 16)	1931 to 1936 - 45", 74" & 80" twins, 1937 to 1939 - 45"	black
4809-31	69020-31	Horn front - late style	1931 to 1939 - 45" twins	black
035	1190	Projector collar screw (short)	1920 to 1928, 1931 to 1957	
039	1229	Projector collar screw (long)	1920 to 1928, 1931 to 1957	
0105	7634	Collar screw nut	1920 to 1928, 1931 to 1957	
4810-31	69022-31	Diaphragm screw	1931 to 1952	
4811-31	69024-31	Diaphragm screw nut	1931 to 1957	
4813-31	69038-31	Adjusting screw	1931 to 1957	
0105	7634	Adjusting screw nut	1931 to 1957	
4814-31	69028-31	Diaphragm assembly	1931 to 1957	
4824-31	69030-31	Terminal screw (2)	1931 to 1957	
0103	7608	Terminal nut (4)	1920 to 1928, 1931 to 1957	
4827-31	69032-31	Terminal screw bushing	1931 to 1957	
4829-31	69034-31	Terminal square fiber	1931 to 1957	
4859-32A		Right horn bracket	1932 to 1935 - 45" twins	
4860-32A		Left horn bracket	1932 to 1935 - 45" twins	
037	1210	Horn to bracket screw (4)	1930 to 1946	cad
0105	7634	Bracket screw nut (4)	For 037	cad
4861-29	69043-29	Horn bracket spring	1929 - 61" & 74" twins, 1930 to 1941	park
4862-29	69042-29	Straight spring plate	1929 - 61" & 74" twins, 1930 to 1941	park
4862-31	69041-31	Curved spring plate	1931 to 1941	
0307A		Spring plate to bracket rivet (nipb) (8)		park

ELECTRIC HEADLAMP GROUP				
4901-31		Headlight cpt. With wire	1931 to 1934	black
4904-31		Headlight body	1931 to 1934	
4905-29	67861-29	Body fastening bolt (7/16-20)	1929 to 1957 - 45" twins, 1929 to 1948 - 61", 74" & 80" twins	cad
4906-31		Front lense, diffusing	1931 & 1932	-----
4906-31A		Front glass, clear	1931 & 1932	-----
4910-31		Lens retainer spring (3)	1931 & 1932	
4912-31		Cork packing washer	1931 to 1934	cork
4914-31		Door only	1931 & 1932	nickle
4915-31		Dorr lug	1931 & 1932	
4916-31		Dorr lug spring	1931 & 1932	
4918-31		Door fastening screw	1931 to 1934	nickle
4922-31		Reflector	1931 to 1934	-----
05		Reflector fastening screw (2)	1931 to 1934	
4925-31		Bulb (double contact)	1931 to 1934	-----
4932-31		Focus screw	1931 to 1934	cad?
4933-31		Focus spring	1931 to 1934	
4966-31		Lamp bracket cpt.	1931 to 1939 - 45" twins, 1931 to 1934 C singles	black
3475-31		Lamp bracket bolt	1931 to 1939 - 45" twins, 1931 to 1934 C singles	
0136		Bracket bolt nut (2)	1931 to 1936 - 45", 74" & 80" twins, 1931 to 1934 C singles	
0230		Washer for bracket bolt (2)	1931 to 1939 - 45" twins, 1931 to 1934 C singles, 1937 to 1939 - 45" twins	
4971-29	4971-29	Headlight bracket washer, large (2)	1929 to 1936	park
0134	7839	Headlight fastening nut (2)	1929 to 1957 - 45" twins, 1929 to 1948 - 61", 74" & 80" twins	park
0265	7055	Headlight fastening nut lock washer (2) (nipb)		park

<u>TAIL LAMP GROUP</u>				
5051-15		Tail lamp complete	1915 to 1933	black
5054-20	68091-20	Red glass for tail lamp, bee-hive type	1920 to 1938	-----
5056-20	68105-20	Glass retainer (for 2-1/4" glass)	1920 to 1938	park
4927-15	68165-15	Lamp bulb	1915 to 1939	-----
5061-23	68155-23	Connector plug	1923 to 1938	rubber
5063-22	68157-22	Connector plug screw (2) (#4-36)	Later 1922 to 1938	
5065-25	68092-25	White glass (nipb)	Later 1922 to 1938	-----
5067-25	68125-25	Paper gasket	1925 to 1938	paper
051	2762	Tail lamp screw (3)	1925 to 1938	park
0108	7691	Tail lamp screw nut (3)	1925 to 1938	park
0256	7035	Lock washer (3) (nipb)	1925 to 1938	park
<u>TRANSFERS</u>				
5917-08		Tank transfer, std. (red center) (2)	1908 to 1932	-----
5919-08	62535-08	Frame head & tool box transfer		-----
5920-08		Trade mark transfer (2) (battery box)		-----
<u>JIFFY STAND PARTS</u>				
13200-32	50045-32	Leg bracket	1932 to 1952 - 45" twins	park
13201-30A	50060-30	Leg	1930 to 1952 - 45" twins, 1930 to 1934 C singles	park
13202-30	50012-30	Spring	1930 to 1952 - 45" twins, 1930 to 1937 - 74" & 80" twins	park
13203-30A	50035-30	Spring Plate	1930 to 1952 - 45" twins, 1930 to 1934 singles	park
13205-30	50092-30	Leg bushing	1930 to 1952 - 45" twins, 1930 to 1936 - 74" & 80" twins	park
0133	7835	Leg nut	1930 to 1957	park
0229	6473	Leg washer	1926 to 1957	park

SCREWS				
05	2540	4-36 x 1/4" round head screw, lamp cover		
010	993	6-32 x 1/4" fillister head screw		
011	997	6-32 x 3/8" fillister head screw		
016	2582	6-32 x 3/8" round head screw		
018	2626	8-32 x 3/8" round headscrew, handlebar sw.		
020	1052	8-32 x 1/4" fillister head screw		
021	1062	8-32 x 3/8" fillister head screw		
023		8-32 x 1/2" flat head screw		
024	1070	8-32 x 3/4" fillister head screw		
030	1187	10-24 x 3/8" round or fillister head screw		
032	1206	10-24 x 5/8" fillister head screw		
035	1190	10-32 x 3/8" fillister head screw		
036	1202	10-32 x 1/2" fillister head screw		
037	1210	10-32 x 5/8" fillister head screw		
038	1218	10-32 x 3/4" fillister head screw		
039	1222	10-32 x 1" fillister head screw		
041	2723	12-24 x 3/8" round head screw		
042	2686	12-24 x 1/2" fillister head screw		
044	1311	12-24 x 7/8" fillister head screw		
045	2275	12-24 x 11/16" oval head screw		
046	1818	12-24 x 11/16" flat head screw		
047	2278	12-24 x 13/16" oval head screw (oiler cover)		
048	2265	12-24 x 3/8" oval head screw		
048A	2268	1/4-24 x 1/2" oval head screw, inspec. cvr.		
050	2756	1/4-24 x 7/16" round head screw		
051	2762	1/4-24 x 1/2" round head screw		
053	2775	1/4-24 x 3/4" round head screw		
057	2329	1/4-24 x 13/16" oval head screw (lifter body)		
058	1956	5/16-18 x 13/16" oval head screw		
061	3953	5/16-24 x 1/2" hex bolt		
064	3974	5/16-24 x 3/4" hex bolt		
066	4000	5/16-24 x 1" hex bolt		
068	4042	5/16-24 x 1-13/16" hex bolt		
072	4300	3/8-16 x 7/8" hex bolt		

	<u>NUTS</u>		<u>Hole dia.-TPI x Ht. x O.D.</u>		
	0103	7608	8-32 x 1/8" x 5/16" hex nut		
	0104	7620	10-24 x 5/16" hex nut		
	0105	7634	10-32 x 5/16" brass hex nuts		
	0106	7654	12-24 x 1/4" hex nut		
	0107	7688	1/4-20,NC,1/4" x 1/2" nut		
	0108	7691	1/4-24,NS, 5/32" x 7/16" nut		
	0109	7695	1/4-24, NS, 7/32" x 7/16" nut		
	0111	7748	5/16-18,NC, 17/64" x 1/2" nut		
	0112		5/16-24,NF, 17/64" x 7/16" nut		
	0113	0113	5/16-24,V, 3/16" x 1/2" nut		
	0117	7752	5/16-24,NF, 17/64" x 1/2" nut		
	0120	7782	3/8-16, 5/16" x 9/16" nut		
	0123	7804	3/8-24,NF, 1/2" x 9/16" nut		
	0127	7793	3/8-24,NF, 21/64" x 9/16" nut		
	0128	7809	3/8-24,NF,15/32 x 9/16" castle nut		
	0129	7789	3/8-24,NF, 1/4" x 9/16" nut		
	0131	7871	7/16-24, 1/4" x 3/4" nut		
	0133	7835	7/16-20,NF, 3/8" x 5/8" nut		
	0134	7839	7/16-20,NF, 1/2" x 5/8" nut		
	0136				
	0137		1/2-24 x 3/8" x 3/4"		
	0140	62371-15	15/32-24 special nut, oil pipe nipple		
	0142	7984	5/8-24,NEF, 7/32" x 7/8" nut		

FLAT WASHERS (ID x OD x Thickness)				
0201	6182	3/16" x 7/16" x 1/32"		
0202	6147	3/16" x 3/8" x 1/32"		
0205	6203	15/64" x 1/2" x 1/16"		
0207	6220	1/4" x 7/16" x .035", clevis pin		
0208	6245	1/4" x 5/8" x 1/16"		
0209	6227	1/4" x 1/2" x 1/16"		
0211	6280	9/32" x 15/32" x 1/32"		
0212	6310	5/16" x 9/16" x 1/32"		
0214	6320	5/16" x 11/16" x 1/16"		
0215	6327	5/16" x 15/16" x 1/16"		
0223	6408	3/8" x 1" x 1/16"		
0224	6395	3/8" x 13/16" x 1/16"		
0225	6400	3/8" x 13/16" x 7/64"		
0226	6379	3/8" x 5/8" x 3/64"		
0229	6473	29/64" x 51/64" x 1/16"		
0230	6490	7/16" x 15/16" x 1/8"		
0231	6520	29/64" x 1-1/8" x 3/32"		
0233	6568	1/2" x 27/32" x 1/8"		
LOCK WASHERS (ID x Width x Thickness)				
0251	7010	9/64" x 3/64" x 1/32" (#6) lock washer		
0252	7015	No. 8 x 5/32" x 1/32" (#8) lock washer		
0253	7025	3/16" x 3/32" x 3/64" (#10) lock washer		
0254	7021	3/16" x 1/16" x 3/64" lock washer		
0255	7030	7/32" x 1/16" x 3/64" (#12) lock washer		
0256	7035	1/4" x 1/8" x 1/16" lock washer		
0257	0257	1/4" x 3/32" x 3/64" lock washer		
0259	7040	5/16" x 1/8" x 1/16" lock washer		
0261	7045	3/8" x 1/8" x 1/16" lock washer		
0262	7050	3/8" x 7/32" x 1/16" lock washer		
0265	7055	7/16" x 1/8" x 1/16" lock washer		
0266		7/16" x 3/16" x 3/32" lock washer		
0268		1/2" x 3/16" x 1/16" lock washer		
0269	7065	9/16" x 1/8" x 3/32" lock washer		
0271	7070	5/8" x 3/16" x 1/16" lock washer		

0274	7075	3/4" x 1-5/16" x 3/32" lock washer		
<u>BALL BEARINGS</u>				
0282	8860	5/16" steel ball bearings		
0283	8866	3/8" steel ball bearings		
<u>COTTER PINS</u>				
0290	510	1/16" x 1/2" cotter pins		
0291	528	3/32" x 5/8" cotter pins		
0292	534	3/32" x 1" cotter pins		
0293	550	1/8" x 5/8" cotter pins		
0294	559	1/8" x 1-1/4" cotter pins		
0296	512	1/16" x 5/8" cotter pin		
<u>RIVETS</u>				
0308	8523	3/16" x 5/8", round head rivet		
0314	8515	3/16" x 3/8", truss head rivet		
0318	8580	1/4" x 9/16", round head rivet		
<u>TOOTHED (SHAKEPROOF) LOCK WASHERS</u>				
0354	7220	No. 10 x 3/16" (external teeth)		
0356	7118	No. 10 x 3/16" (internal teeth)		
0363	7230	No. 14 x 1/4" (external teeth)		
0365	7231	No. 14 x 1/4" (countersunk)		
0370	7233	No. 18 x 5/16" (countersunk)		
<u>GREASE FITTINGS</u>				
0340	9850	Alemite fitting		